

# Acer ePresentation Management

Acer ePresentation Management offers you a quick way to set your notebook PC's external output resolution when using a projector or other external display device.


## Using Acer ePresentation Management

To launch Acer ePresentation Management:

- Click the **Acer ePresentation Management** icon in the **Empowering Technology** toolbar shown on your desktop.
- From the **Start** menu, go to **(All) Programs > Acer Empowering Technology > Acer ePresentation Management**.



This will open the Acer ePresentation Management main page.

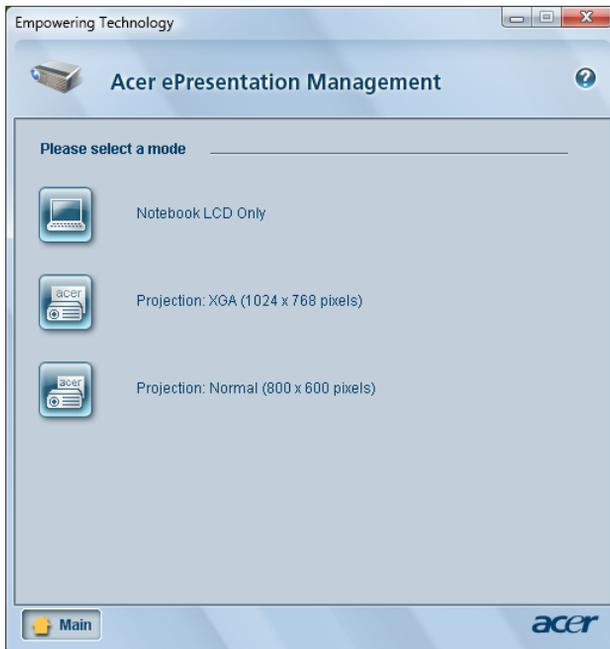

## Acer ePresentation Management Main Page

The two resolutions (**Projection: XGA 1024 x 768 pixels** and **Projection: Normal 800 x 600 pixels**) are listed on this page.

Click either one to enable output from your computer's external display port at that resolution.

Click **Notebook LCD Only** to turn off the external display output.

Closing Acer ePresentation Management will return your notebook's screen to its original resolution.

## Widget mode

Acer ePresentation Management does not have a widget for Widget mode.