

# Acer p700 Series Portable Navigator

User's Guide



Copyright © 2007. Acer Incorporated.  
All Rights Reserved.

*Acer p700 Series Portable Navigator* User Guide  
Original Issue: July 2007

Changes may be made periodically to the information in this publication without obligation to notify any person of such revisions or changes. Such changes will be incorporated in new editions of this User's Guide or supplementary documents and publications.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your handheld. All correspondence concerning your unit should include the serial number, model number, and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated.

*Acer p700 Series Portable Navigator*

Model number: \_\_\_\_\_

Serial number: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

Place of purchase: \_\_\_\_\_

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other companies' product names or trademarks are used herein for identification purposes only and belong to their respective companies.

Microsoft, Outlook, Pocket Outlook, Windows, Windows NT and the Windows logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Microsoft products are licensed to OEMs by Microsoft Licensing, Inc., a wholly owned subsidiary of Microsoft Corporation.

Acer and its subsidiaries make no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose. Acer and its subsidiaries assume no responsibility for any damage or loss resulting from the use of this Acer p700 Series Portable Navigator User Guide.

## Disposal instructions



Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please reuse and recycle.



### USA

For electronic products containing an LCD/CRT monitor or display:  
Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at [www.eiae.org](http://www.eiae.org). For lamp-specific disposal information, check [www.lamprecycle.org](http://www.lamprecycle.org).

## Important safety instructions

Read these instructions carefully. Save them for future reference.

Follow all warnings and instructions marked on the product.

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a water-moistened cloth for cleaning.

Do not use this product near water.

Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.

This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.

Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord.

If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.

Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product.

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
- If the product has been dropped or the case has been damaged.
- If the product exhibits a distinct change in performance, indicating a need for service.

*The Acer p700 Series Portable Navigator uses a lithium battery.*

Warning! Batteries may explode if not handled properly. Do not disassemble or dispose of them in fire. Keep them away from children and dispose of used batteries promptly.

To avoid hazard of unexpected electrical shock, use the AC adapter only when the wall socket is properly grounded.

Do not use your device while exercising.

## *Acer p700 Series Portable Navigator* feature highlights

No more fumbling with wieldy, outdated paper maps. No more sheepish "I think I'm lost" expression. And most definitely, no more going in circles finding that particular spot. Get to your destination the fast and easy way with your new *Acer p700 Series Portable Navigator*.

### **Powerful system**

- Microsoft Windows CE version 5.0 operating system
- Samsung 266 MHz processor
- SiRF Star III LP chipset and firmware solution
- Rechargeable 1100 mAh Lithium Ion battery

### **Wide and accurate GPS coverage**

- Intuitive and Intelligent Navigation software
- Integrated chip antenna for optimum satellite pick up

### **Mobile design**

- Compact and lightweight body makes it easy for users to carry it anywhere while driving or hiking
- Car mount kit for multi-vehicle usage
- On-the-road recharging options via the car charger

### **Battery life**

- Normal usage: 4.5 hours
- Navigation software usage: 3.5 hours

### **Ergonomic features**

- 4.3-inch WQVGA touch-sensitive LCD screen
- Accessible control hot keys with backlight illumination
- Simple, easy-to-use user interface with large icons and command buttons
- Multi-language support for user interface
- Advanced power-saving options

### **Multimedia programs**

- **Photo** for your favourite digital pictures

### **Contacts management program**

- **Contacts** for managing contact information on your device

### **Bluetooth program**

- **Bluetooth** for selected models only: p760 and p780
- Making and receiving phone calls

## Unpacking the *Acer p700 Series Portable Navigator*


Thank you for purchasing the *Acer p700 Series Portable Navigator*. The *Acer p700 Series Portable Navigator* box contains all of the items listed below.

- *Acer p700 Series Portable Navigator* unit




- Car mount kit

Car mount

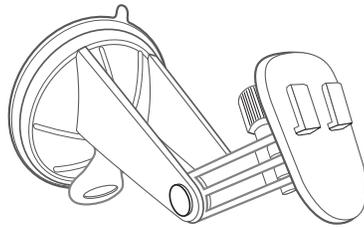

Device holder

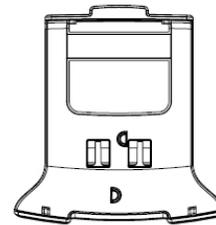


- Car charger




## *Unpacking the Acer p700 Series Portable Navigator*

---

- Wall charger for p700 Series

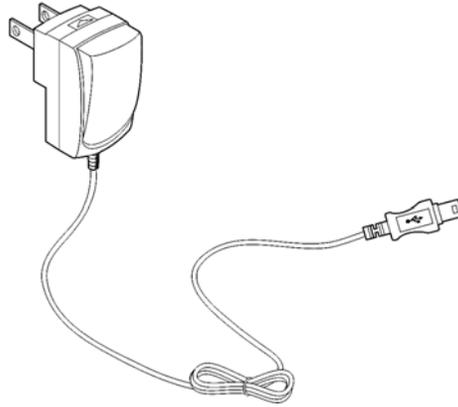

- Mini USB transfer and charge cable

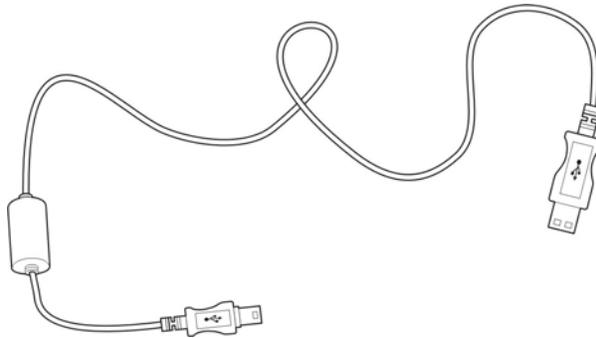


- Navigation software SD card



## Unpacking the Acer p700 Series Portable Navigator

---

- Pouch

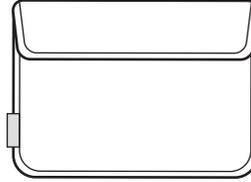

- User Documentation
  - *Acer p700 Series Portable Navigator* CD
  - TMC ready for p700 Series Portable Navigator Getting Started Guide
  - *Acer p700 Series Portable Navigator* Warranty Booklet
  - Navigation software Quick Starter Guide
  - Navigation software CD
  - User can purchase Acer TMC upgrade kit for p710 to enable the TMC function
  - The p730/p760/p780 already include the TMC receiver in the package

---


**NOTE:** Report any product defects or missing items to the place of purchase immediately. Save the boxes and packing materials for future use. Some models may include optional accessories that might not be shown in the above illustrations. Please check with your dealer or dial a hotline number, located on the back of the Acer p700 Series warranty booklet, for more details.

---

## *Acer p700 Series Portable Navigator setup*

Using your new *Acer p700 Series Portable Navigator* for the first time is a snap. Unpack, turn on, mount and you're ready to go. Perform the following easy installation tasks to start using the device straight out of the box:

1. Unpack the device.
2. Set up the device in your vehicle.

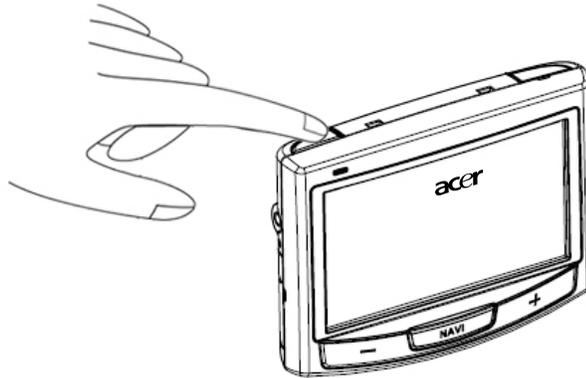

---

**NOTE:** You should not use the power switch again unless you want to do a hard reset. See "Performing a hard reset" on page 54 for more information. Instead, use the power button at the top of the device (see diagram below).

---



# First things first

This chapter describes the hardware interface of the *Acer p700 Series Portable Navigator* and its peripherals. Instructions for setting up the device and some basic system operations are also discussed.

## System tour

This section gives you a tour of the device hardware interface.

### Front and Rear Panels

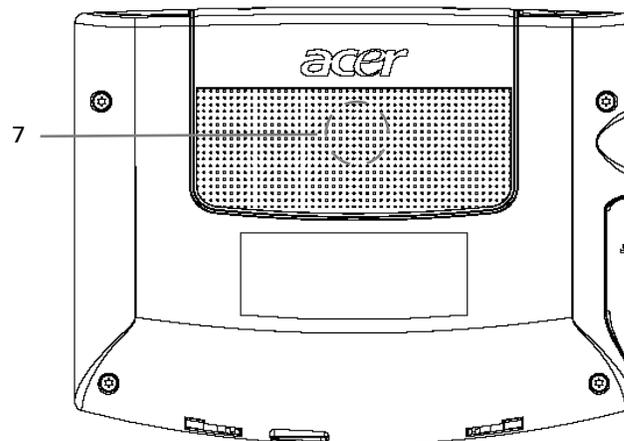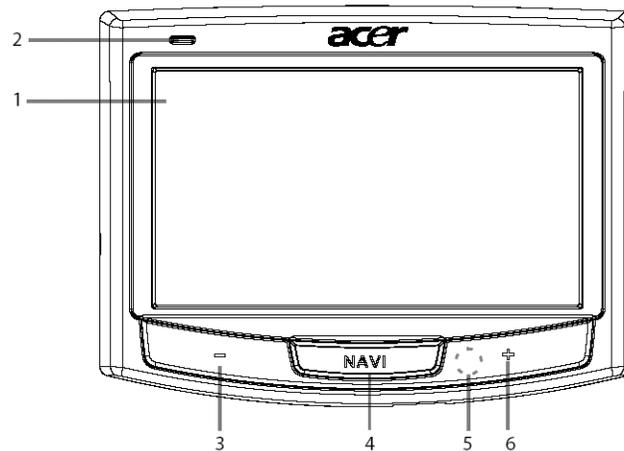

## First things first

### *System tour*

---


No	Icon	Component	Description
1		Touch screen	Displays the applications, data, and map images available on your device. It is touch sensitive and responds to finger taps.
2		Power status LED indicator	Indicates the battery charging status. <ul style="list-style-type: none"><li>• Green – Battery is fully charged</li><li>• Orange – Battery charging</li><li>• Red – Battery low</li></ul>
3	—	Volume down button	Decreases speaker volume.
4	NAVI	Navigation button	Takes you to the navigation panel to display your current location.
5		Microphone	Internal microphone is used during phone communication.
6	+	Volume up button	Increases speaker volume.
7		Speaker	Emits system sounds.

---

**NOTE:** For more information on how to use your *Acer p700 Series Portable Navigator* in navigation mode, refer to the Navigation software Quick Starter Guide or the Navigation software User's Guide (located on the Navigation software DVD).


---

Top and bottom views

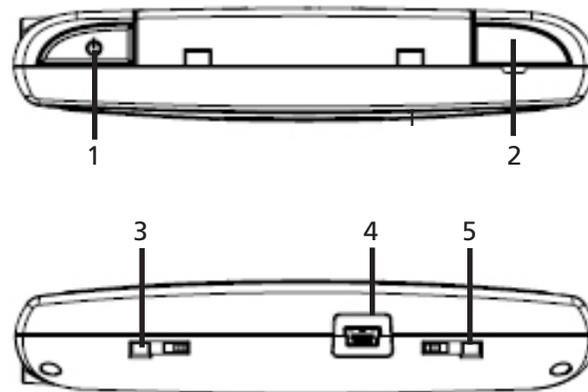

No.	Icon	Component	Description
1		Power button	Switches the device into standby mode. If pressed for less than 1.5 seconds, the device will enter suspend mode; if pressed for longer than 1.5 seconds, the backlight will turn <b>On/Off</b> .
2	GPS	GPS antenna jack	Connects to an external GPS antenna.
3		Soft reset button	Used to do a soft reset of the device. For more information, see "Performing a soft reset" on page 53.
4		USB port	For USB port: connects the device to computer running on the Microsoft Windows platform. Also serves as the power connector for charging the device. Connects to external TMC module (selected models only).
5		Power switch	Used to switch device on initially, or to do a hard reset of the device. For more information on performing a hard reset, see "Performing a hard reset" on page 54.

### Left and right panels

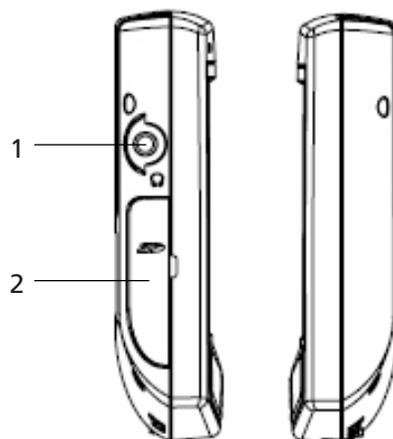


No.	Icon	Component	Description
1		Earphone jack	Connects to earphones/headphones.
2		SD/MMC slot	Accepts SD and MMC storage cards, allowing you to use audio, image, and/or map files stored in it for use with internal applications.

## Peripherals tour

This section gives you a tour of the peripherals bundled with your *Acer p700 Series Portable Navigator*.

### Car mount kit

The car mount kit consists of the car mount (left) and the car holder (right).

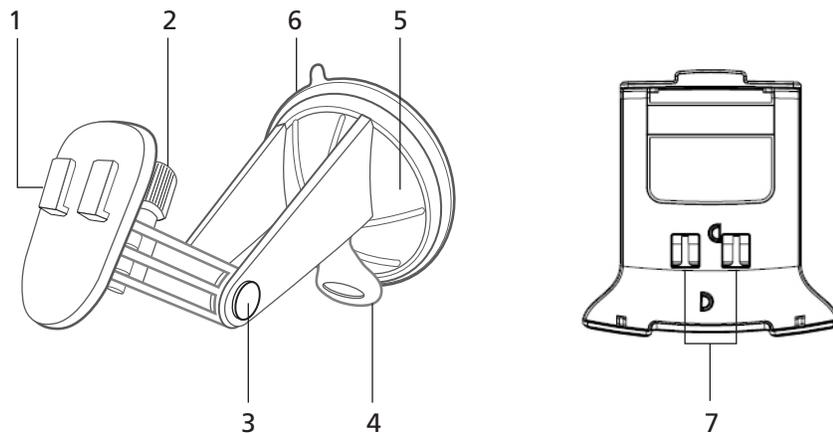

No.	Component	Description
1	Holder plate	Connects the car mount to the holder.
2	Horizontal angle adjustment knob	Slightly loosen the knob to adjust the viewing angle in a left-right direction.
3	Vertical angle adjustment knobs	Slightly loosen the knobs to adjust the viewing angle in an up-down direction.
4	Suction cup locking lever	Secures the vacuum seal of the car mount.
5	Suction cup	Fixes the car mount on the selected mounting area.
6	Suction cup release tab	Pull to release the vacuum seal of the suction cup.
7	Car mount holes	Accepts the pegs on the holder plate of the car mount.

## Setting up the *Acer p700 Series Portable Navigator* in your vehicle

The *Acer p700 Series Portable Navigator* comes with a car mount kit and a car charger so you can set up your device in your vehicle. Position the car mount kit on the windscreen using the suction cup.

---

**NOTE:** Some newer vehicle models may have a heat reflective shield embedded in the windscreen. This may in some cases obstruct the GPS signal reception. If you encounter this problem in your vehicle, you need to purchase an external GPS antenna. For more information, contact your local Acer dealer.

---

### Car mount installation reminders

Install the car mount on a surface of your vehicle:

- That is smooth, and free of dirt and oil.
- Where you can easily view/reach it without taking your eyes too far off the road.
- Where the device will not obscure car controls nor restrict your view of the road.
- Far from the air bag deployment area.

### Setting up the device on your vehicle

This section shows how to install the car mount kit on your vehicle's windscreen using the suction cup. For dashboard installation procedures using the self-adhesive disk refer to the *Acer p700 Series Portable Navigator Getting Started Guide*.


- 1 Clean the mounting surface with a glass cleaner and a clean cotton cloth.
- 2 If the ambient temperature is below 15°C (60°F) warm the mounting area and the suction cup (e.g. with a hair dryer) to ensure a strong suction bond.
- 3 Install the car mount on the selected area.
  - Fix the suction cup to the selected area with the locking lever facing up.
  - Flip the locking lever away from you to create a vacuum between the suction cup and the mounting surface.

## First things first


### *Setting up the Acer p700 Series Portable Navigator in your vehicle*

---


- Make sure that the suction bond is strong enough before proceeding to the next step.

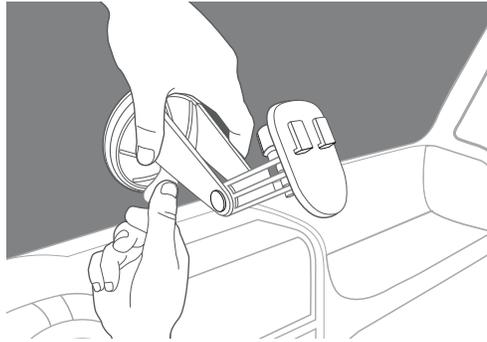

- You can now adjust the car mount to your desired position.

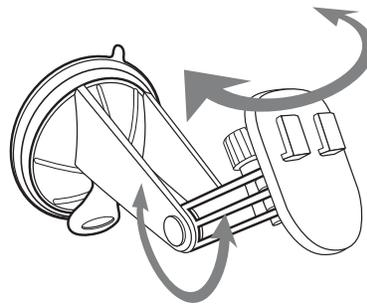

- 4 Insert the Navigation software SD card into the device.

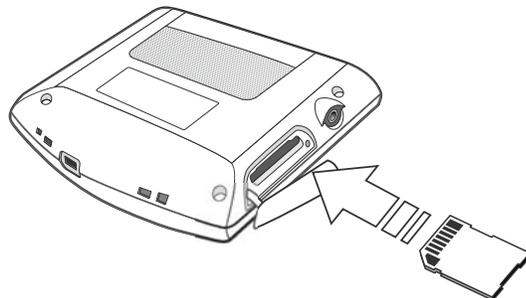


## First things first


### *Setting up the Acer p700 Series Portable Navigator in your vehicle*

---

- 5 Dock the device on the car holder.

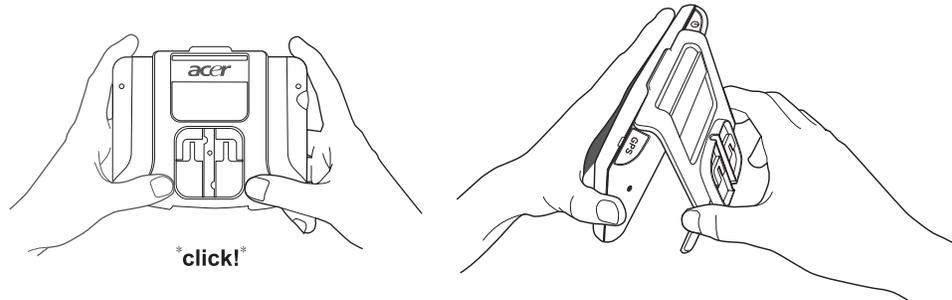

- 6 Dock the device with holder on the car mount which has been mounted to your windscreen then adjust the car mount for the best viewing angle.

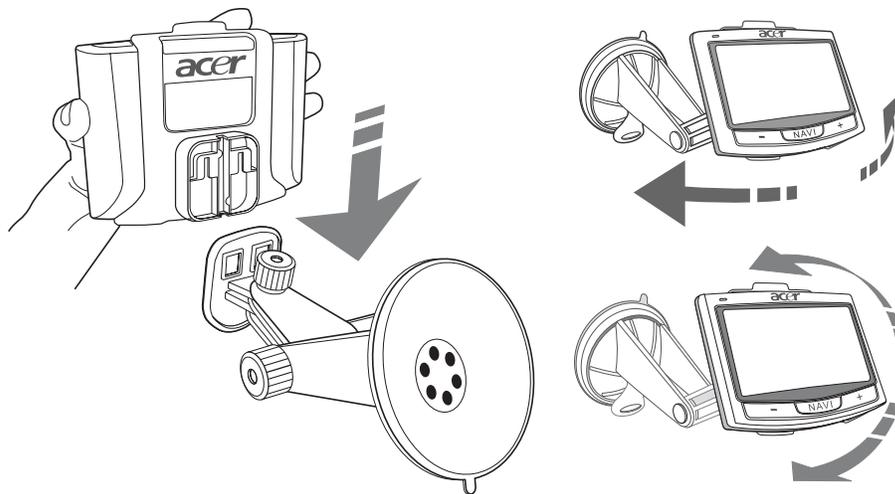

- 7 After setting up the device on the car mount, connect the car charger. The power LED indicator lights up orange during charging.

---

**NOTE:** If the car engine is turned off, you may be required to switch the vehicle ignition back into the Accessories position. Consult your vehicle owner's manual.

---

---


**NOTE:** The device comes with the battery pre-charged to at least 30 percent capacity. You can start using it once it is mounted in your vehicle and connected to the cigarette lighter. However, for maximum usage time you need to charge your device to full capacity. Go to "Recharging the Acer p700 Series Portable Navigator" on page 8 for instructions.

---

## Starting up the *Acer p700 Series Portable Navigator*

Before mounting the *Acer p700 Series Portable Navigator* on your vehicle, you should first calibrate the screen. After screen calibration, proceed to configure system settings. To turn on and calibrate the device:


- 1 When you first turn on your device, you will be asked to calibrate the screen. This process ensures that when you tap the screen the item tapped is activated.

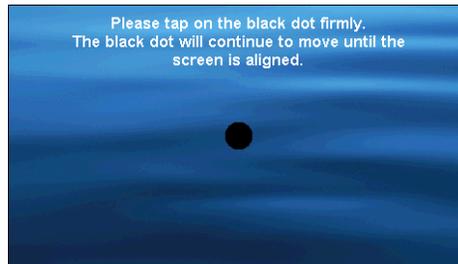

- 2 Follow the instructions on the screen. After calibrating the screen, please follow the steps below to configure system settings.

### Step 1: Language Setting

- Tap the down arrow beside Text and choose the language you prefer.

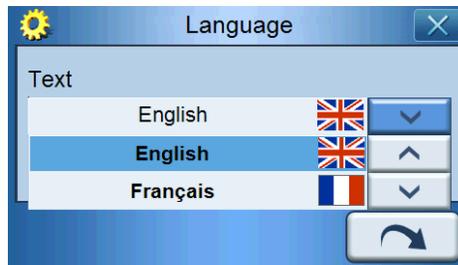

### Step 2: Date/Time/Time zone Settings

#### Tap Date:

- Tap + or - beside the Year, Month, and Day settings to set the date values.



## First things first

### *Starting up the Acer p700 Series Portable Navigator*


---

#### Tap Time:

- Tap + or - beside the Hour and Minute settings to set the time values.




- Tap the down arrow beside the Time Zone until the time zone of your choice is displayed.

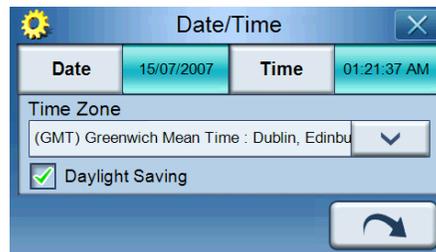

#### Step 3: Password Setting

After Date/Time/Time Zone settings is done, the screen below will pop up.

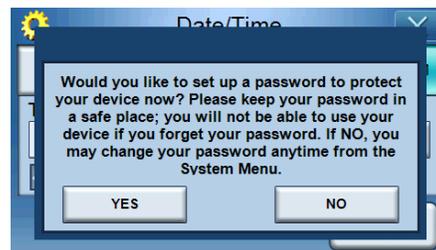


- Tap **YES** to set up your password, or tap **NO** to skip.



Step 4: Bluetooth phone Settings

- Tap **YES** for Bluetooth settings or tap **NO** to skip the setting and proceed to the next step. (Bluetooth function is for selected models only: p760 and p780)

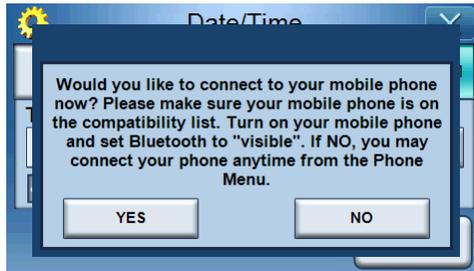

- After tapping **YES**, the screen below will open. Tap  to search for Bluetooth connections.



- Select the desired mobile phone from the list (tap the down arrow to display the full list) and then tap  to pair with the phone.



## First things first

### *Starting up the Acer p700 Series Portable Navigator*

---

- The p700 will attempt to connect to your mobile phone. When prompted, enter "1111" on your phone to complete pairing. (Screen image will vary depending on the model of your phone).



- Once pairing is complete, your mobile phone will display a confirmation message.



#### Step 5: Navigation Settings

- If you skip the Bluetooth settings, the Navigation Settings screen will display.



- Tap the arrows beside "Choose a Language" and "Choose a Voice" to select your preferred choice.




## First things first *Starting up the Acer p700 Series Portable Navigator*

---


- Tap the radio button beside "Mile" or "KM" for your preferred unit.



- Tap "Accept" after reading through the warning message.

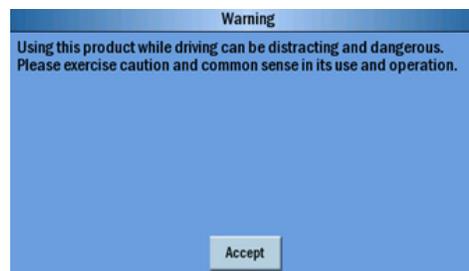

- Then "Tips and Tricks" will display, you can tap  to go to the previous tip and trick, tap  to next tip and trick, or tap  to map screen.

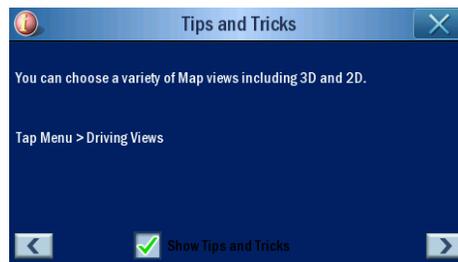

- The screen below will open once navigation settings are complete.



- For more information on the rest of the system configuration options, go to "System" on page 26.

## First things first

### *Starting up the Acer p700 Series Portable Navigator*

---

Congratulations! Your new *Acer p700 Series Portable Navigator* is now ready for use. Proceed to "Acer p700 Series Portable Navigator fundamentals" on page 5 for more information on the device's user interface or you can refer to the Navigation software Quick Starter Guide to start using the device in navigation mode.

# Contents

---

Disposal instructions . . . . .	ii
Important safety instructions . . . . .	ii
Acer p700 Series Portable Navigator feature highlights . . . . .	iv
Unpacking the Acer p700 Series Portable Navigator . . . . .	v
Acer p700 Series Portable Navigator setup. . . . .	viii
<b>First things first</b>	<b>ix</b>
System tour . . . . .	ix
Front and Rear Panels . . . . .	ix
Top and bottom views . . . . .	xi
Left and right panels . . . . .	xii
Peripherals tour . . . . .	xiii
Car mount kit. . . . .	xiii
Setting up the Acer p700 Series Portable Navigator in your vehicle. . . . .	xiv
Car mount installation reminders . . . . .	xiv
Setting up the device on your vehicle . . . . .	xiv
Starting up the Acer p700 Series Portable Navigator. . . . .	xvii
<b>1 Acer p700 Series Portable Navigator fundamentals</b>	<b>5</b>
Hardware interface . . . . .	5
Using the touch screen backlight . . . . .	5
Using the SD/MMC slot . . . . .	5
Establishing a device-PC connection . . . . .	7
Recharging the device via the USB connection. . . . .	7
Using SD/MMC card as Mass Storage. . . . .	7
Minimum system requirement. . . . .	7
Recharging the Acer p700 Series Portable Navigator . . . . .	8
Recharging the device using the car charger . . . . .	9
Recharging the device using the USB cable. . . . .	9
Main Menu screen . . . . .	10
Command interface . . . . .	10
Using the hot keys. . . . .	10
Using the Acer p700 Series Portable Navigator touch screen . . . . .	10
Using the Main Menu screen . . . . .	10
Accessing the Destination Function. . . . .	12
<b>2 Phone</b>	<b>13</b>
Accessing the Phone Function . . . . .	13
<b>3 Applications</b>	<b>14</b>
Other available Applications . . . . .	14
i) Photo Viewer 15	
Accessing the Photo Viewer. . . . .	15
Using the Photo Viewer . . . . .	16
Thumbnail viewer . . . . .	16
Selecting the target window . . . . .	17
Playing panel . . . . .	18
Full viewer . . . . .	19

# Contents

---

Slide show . . . . .	19
ii) Contacts 20	
Accessing contacts . . . . .	20
Managing contact . . . . .	21
Creating a new contact. . . . .	21
Editing a contact . . . . .	22
Importing / exporting / sending contacts . . . . .	23
Importing . . . . .	23
Exporting . . . . .	24
Sending contact information to another device. . . . .	25
<b>4 System</b>	<b>26</b>
Accessing the System settings . . . . .	26
Choosing the language . . . . .	27
Adjusting Settings . . . . .	27
Setting the volume . . . . .	27
Muting the volume . . . . .	28
Setting the date and time. . . . .	29
Changing the time zone . . . . .	29
Choosing Daylight Saving. . . . .	29
Changing the date. . . . .	30
Changing the time. . . . .	30
Power. . . . .	31
Backlight . . . . .	31
Calibration. . . . .	32
Factory Default . . . . .	33
System information . . . . .	33
Setting the password. . . . .	34
Key Lock. . . . .	37
<b>5 Bluetooth Phone</b>	<b>38</b>
Connecting your mobile phone using Bluetooth 38	
Checking the Bluetooth status of your p700. . . . .	41
Making and receiving phone calls . . . . .	42
Making a phone call using your mobile phone. . . . .	42
Dial from Contacts. . . . .	43
Dial from Dialed Numbers . . . . .	44
Making a phone call while navigating . . . . .	45
Answering an incoming call while navigating . . . . .	46
Sending location . . . . .	48
Predefining text . . . . .	49
Synchronizing contacts . . . . .	50
Sending emergency. . . . .	51
<b>6 Resetting the Acer p700 Series Portable Navigator</b>	<b>53</b>
Performing a soft reset. . . . .	53
Performing a hard reset . . . . .	54
Loading the factory default settings . . . . .	54
Frequently Asked Questions. . . . .	56

# Contents

---

Information for your safety and comfort	57
Safety instructions	.57
Turning the product off before cleaning	.57
CAUTION: Accessibility	.57
CAUTION: Dummy Card of SD memory card slot	.57
Warnings	.57
CAUTION: Listening	.58
Using electrical power	.58
Product servicing	.58
Battery	.59
Replacing the battery pack	.59
Additional safety information	.59
Global Positioning System	.59
Use with Care.	.59
Mounting on a Car	.59
Potentially explosive environments	.60
Disposal instructions	.60
Mercury advisory	.60
Tips and information for comfortable use	.61
Finding your comfort zone	.61
Taking care of your vision.	.61
Developing good work habits	.62
Regulatory and safety notices	63
FCC notice	.63
Notice: Shielded cables	.63
Notice: Peripheral devices	.63
Caution	.63
Operation conditions	.64
Notice: Canadian users	.64
Remarque à l'intention des utilisateurs canadiens	.64
Declaration of Conformity for EU countries	.64
LCD pixel statement	.64
Radio device regulatory notice	.64
General	.64
European Union (EU)	.65
List of applicable countries.	.65
The FCC RF safety requirement	.65
Canada — Low-power license-exempt radio communication devices (RSS-210)	.65
Exposure of humans to RF fields (RSS-102)	.66
FAQs	69
Customer support	71
Product warranty	.71

# Contents

---

System specifications	72
Hardware features. . . . .	72
Design and ergonomics. . . . .	73
Environmental specifications . . . . .	74

# 1 *Acer p700 Series Portable Navigator* fundamentals

---

This chapter describes basic hardware procedures when using your *Acer p700 Series Portable Navigator*. Information on the device's command interface is also provided.

## Hardware interface

### Using the touch screen backlight

Under some lighting conditions, viewing the information on your device may be difficult. If this is the case, activate the backlight by tapping on the screen to illuminate the touch screen.

### Using the SD/MMC slot

Your *Acer p700 Series Portable Navigator* has an SD/MMC slot compatible with a range of SD and MMC storage cards.

Also, the Acer p700 Series' GPS navigation system has its core on the Navigation software program. Using this program requires you to load the digital maps available on the Navigation software SD card included with the device (SD card is included with certain models only).


#### Inserting an SD / MMC card

## Acer p700 Series Portable Navigator fundamentals

### Hardware interface


---

- Hold the device securely and push the card into the slot until you hear an audible system sound: this will signal that the card is properly seated in the slot. The card is secure when it is not protruding from the slot.

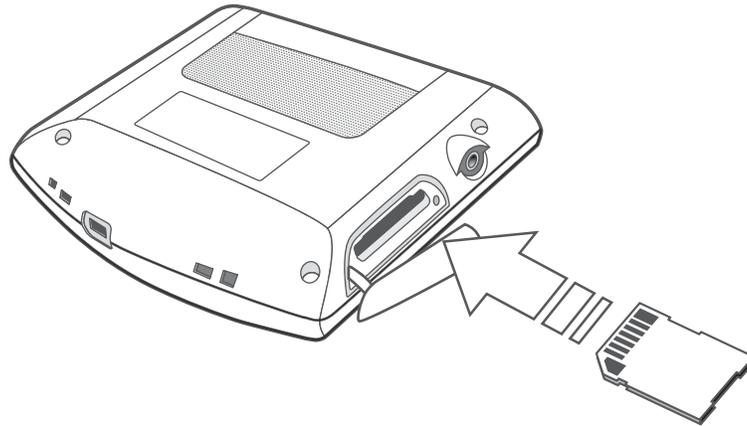

#### Removing a storage card

- 1 Hold the device securely and push in the SD card slightly to allow it to spring out. An audible system sound will signal that the card has been released.
- 2 Gently remove the card from the slot.

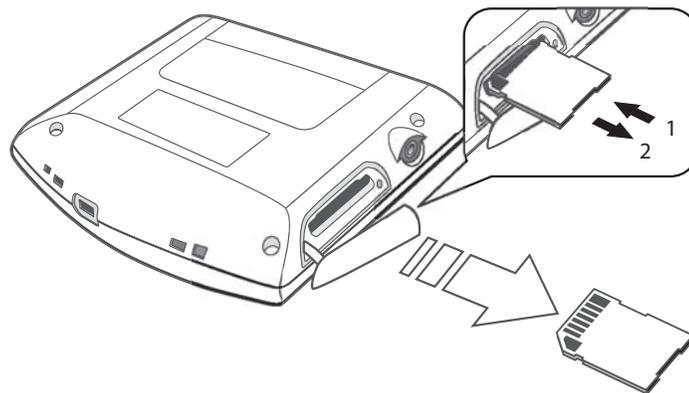

---


**NOTE:** The rubber cover of the SD card slot may be damaged if you quickly pull it out or twist it, please be careful when opening.

---

## Establishing a device-PC connection

### Recharging the device via the USB connection

The USB cable that comes with your Acer p700 Series enables you to connect the device to your computer.

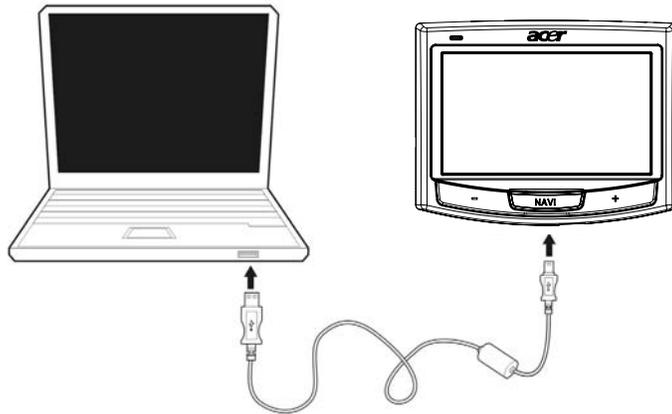

### Using SD/MMC card as Mass Storage

You can access data on an SD/MMC card using your Acer p700 Series.

---

**NOTE:** The SD/MMC card must be inserted into the device to be used as mass storage.

---


#### Minimum system requirement

- Microsoft Windows XP, 2000 or ME
- Available USB port
- CD-ROM drive
- VGA-compatible graphics card

## Recharging the *Acer p700 Series Portable Navigator*

Your *Acer p700 Series Portable Navigator* uses a rechargeable 1100 mAh Lithium ion battery. The status icon located on the top right corner of the Main Menu screen indicates the level of the device's battery power.

If the battery level becomes low in the course of normal use, recharge the device. Normally, you can use the wall charger to recharge your device.

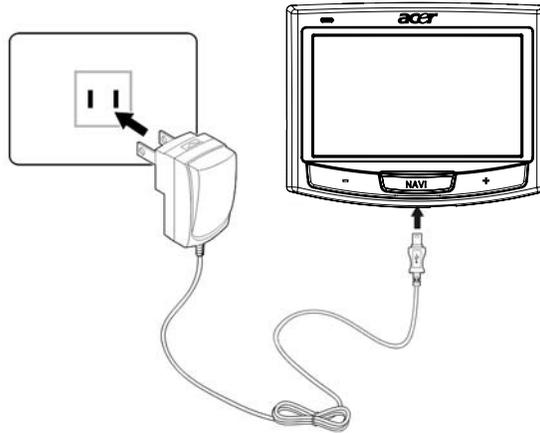

You can use the Mini USB Sync cable to recharge your Acer p700 Series from a computer, or the car charger cable bundled with your device. Recharging time varies depending on type of charge, but a charge from empty to full capacity is typically at about 3 hours.

---

**NOTE:** If the battery level reaches very low status, the device will automatically turn off. In this case, you have about 15 days to recharge your device after which you risk losing all data on the device's internal memory. In case all data is lost, the next time you switch on the device you will be prompted to restore the data.

Certain models can only be used with external power. In this case, your device should be connected to external power (car charger, wall charger, etc) at all times when being used.

---


## Acer p700 Series Portable Navigator fundamentals

### *Recharging the Acer p700 Series Portable Navigator*

---

#### Recharging the device using the car charger

Use the car charger to recharge your device while it is mounted on your vehicle.

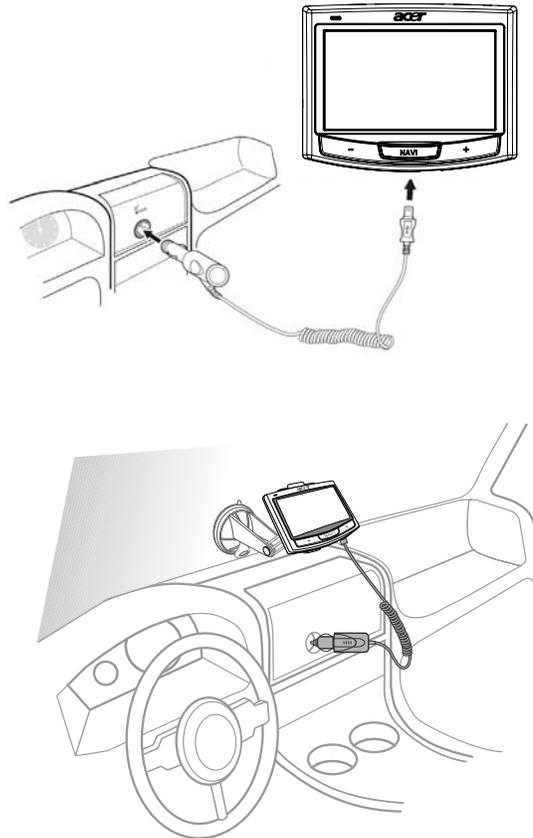

#### Recharging the device using the USB cable

The Mini USB Sync and charge cable that comes with your device enables you to connect your device to a computer running on the Microsoft Windows platform. When connected, the device battery is also recharged via the USB connection.

Go to the "Establishing a device-PC connection" on page 7 for instructions on how to connect your *Acer p700 Series Portable Navigator* to a computer.

## Main Menu screen

### Command interface

#### Using the hot keys

The hotkeys on your *Acer p700 Series Portable Navigator* allow you to:

- **+/-** - Control the volume level of sound from the speaker/earphones
- **NAVI** - Enter map screen

#### Using the *Acer p700 Series Portable Navigator* touch screen

The *Acer p700 Series Portable Navigator* touch sensitive screen allows for a more natural way of entering information into the device using fingers instead of a stylus - no more wasted time finding a lost stylus or fumbling with an awkwardly shaped one! For the Acer p700 Series, the tap and hold-and-drag actions are done by:

- **Tap** - Touch the screen once to open items and select options.
- **Hold and drag** – Tap a slider icon and drag it across the screen.

#### Using the Main Menu screen

When you switch on your device for the first time each day, you'll see the Map Screen, also called the Home screen. From any other screen, you can revert to it by pressing the hotkey NAVI.

The Main Menu title bar displays the battery power level status icon. See "Recharging the Acer p700 Series Portable Navigator" on page 8 for more information this status icon.

## Acer p700 Series Portable Navigator fundamentals

### *Main Menu screen*

---

There are ten program icons on the Main Menu screen.



Tap to display the Destination Menu. Refer to the Navigation software.



Tap to personalize your navigation settings.



Tap to program CoPilot to make a detour a part of the calculated route.



Tap to choose from six different screen display options.



Tap to show Phone Menu.



Tap to display the TMC Menu, refer to the Navigation Software.



Tap to plan or edit trip with multiple destinations.



Tap to set up your map preferences.



Tap to launch Photo for picture mode operation or the Contacts program to access your contacts list.



Tap to adjust the system settings.

## Accessing the Destination Function

Switch the unit on and tap **Destination** in the Main Menu screen.



After the application loads, the main Destination menu will appear.

For more information regarding the Destination function, please see the Navigation Software Quick Start Guide or the software User's Guide.

# 2 Phone

---

## Accessing the Phone Function

To access the Phone functions.

Switch the unit and tap **Phone** in the Main Menu screen.



The Phone Menu will now appear in the display.



You can access

**Disable/Enable** - Disable or enable Bluetooth function

**Connect Phone** - Connect phone nearby

**Dial** - Dial out by phone number

**Send Location** - Send the current position by phone

**Send Emergency** - Send the emergency message

**Sync Contact** - Synchronize the Contacts data

**Predefined Text** - Edit message as Short Message Service (SMS)

# 3 Applications

---

## Other available Applications

To access the other available Applications  
Switch the unit on and tap **Applications** in the Main Menu screen.



The Applications screen will now appear in the display.



From the screen you can access  
**Contacts** - Enter details for contacts  
**Photo** - Display photos

# i) Photo Viewer

---

This chapter describes how to access and use the photo viewer.

## Accessing the Photo Viewer

Switch the unit on and tap **Photo** in the Main Menu screen.



Photo Viewer consists of 4 user interactive parts, "Thumbnail viewer", "Playing panel", "Full viewer", and "Slide show"; "Thumbnail viewer" is the first screen when Photo Viewer is launched.

## Using the Photo Viewer

### Thumbnail viewer

Thumbnail viewer searches for and list all supported image files and image folders that include those supported files (supports: \*.JPG, \*.BMP, \*.GIF). Each image file is presented as its thumbnail; each image folder is presented as an icon showing 4 small images (in the first layered sub-folder).



Tap to show parent folder



Tap to select all files



Tap to de-select all files



Tap to show playing panel and start playing the first image in play list



Used to copy selected files  
Tap to show "select target" window  
Enabled only if [MyStorage] folder exists (SKU 4)



Tap to delete selected files



Tap to show folders/files on the previous page





Tap to show folders/files on the next page

## Selecting the target window



In the "Select Target" window, you can select the target folder to which image files will be copied. Tapping the copy button will show confirm dialog and then show progress dialog. The root directory is in the [MyStorage] or the [SDMMC] folders. "Parent", "Copy", "Cancel", "Next", and "Previous" buttons can be used to navigate key functions.

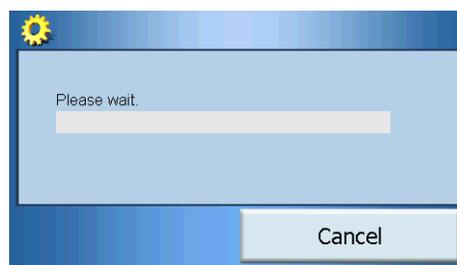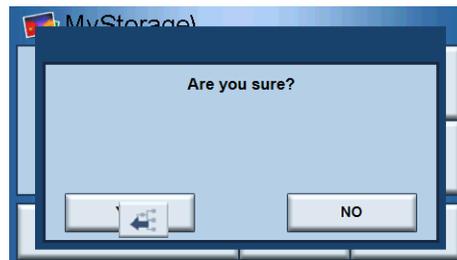

Tap to show parent folder



Start to copy image files



Return to previous screen



Tap to show folders/files in next page



Tap to show folders/files in previous page

---

## Playing panel



Previous/next image



Zoom in/out



Rotate the image counterclockwise



Slide show



Full view



Back to thumbnail view

## Full viewer

- When a photo is opened, a software button in the Playing Panel will appear; click it to switch to full view
- Tap any place in screen to return to Playing Panel



## Slide show

- Displays all selected images in Thumbnail Viewer as a slide show
- Each photo is displayed for 5 seconds
- Touch the screen to close the slide show and return to the Playing Panel



---

**NOTE:** To deselect a highlighted photo, simply tap it again. You will see that it is no longer highlighted. You can also highlight all images by tapping "**Select All**", or deselect all images by tapping "**Deselect All**".

---

---

**NOTE:** Photos must be loaded to the SD memory card from your computer. See "Establishing a device-PC connection" on page 7 for more information.

---

---

**NOTE:** The following file formats can be viewed on your device: \*.bmp, \*.gif, \*.jpg.

---

## ii) Contacts

---

This chapter describes how to manage contact details, including importing, exporting and sending contacts functions. Bluetooth functionality is only enabled for the p760 and p780.

### Accessing contacts

Switch the unit on and tap **Contacts** in the Main Menu screen.



The Contacts screen will now appear in the display:



Scroll up



Scroll down



Import/export/send contact



Edit contact



Create new contact

---



Select All

---



Deselect All

---



Delete contact

---



Return to Main Menu

---


You can store and edit contact information on your device. You can then use this later to find this contact's address quickly on your GPS navigator.

## Managing contact

### Creating a new contact

To create a new contact, tap the **Create new contact** button  .

The following screen will now appear:

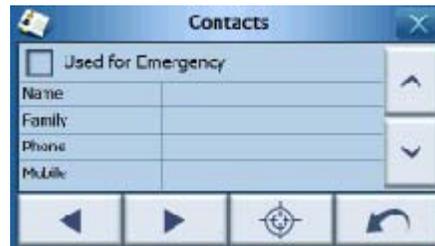

Scroll up

---



Scroll down

---



Previous contact

---



Next contact

---

## Applications

### Managing contact

---



Enter into navigator



Return to Contacts list



Close window

---

Enter the following information for the contact:

- Name
- Family (Last Name)
- Phone
- Mobile
- Street
- City
- State
- Zip
- Country
- Title
- Company
- Email

Also, if you wish this contact to be included in your panic list, tick the **Used for Emergency** checkbox.

If you want to immediately feed this contact's address into your GPS navigator, tap the **Enter into navigator** button .

To leave this screen and return to your list of contacts, tap **Return** .

## Editing a contact

To edit a contact, Tap **Scroll up**  or **Scroll down**  to select and highlight a contact, the tap **Edit** .


## Deleting a contact

To delete a contact, Tap **Scroll up**  or **Scroll down**  to select and highlight a contact, the tap **Delete** .

## Importing / exporting / sending contacts

### Importing

To import or export a contact, tap the **Import / export** contact button  from the view list. You will now see the following screen:

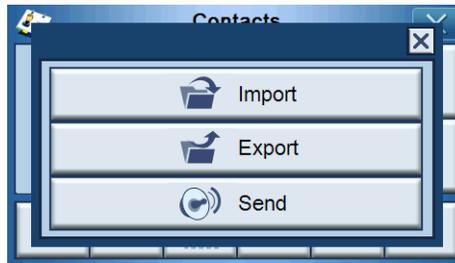

To import a contact from the SD / MMC card to the main memory, tap **Import**.



The following screen will now appear:




You can tap each contact to multi-select and tap again to deselect. Once you have selected the contact(s) you wish to import, tap **Import**  .

## Applications

### *Importing / exporting / sending contacts*

---

Then a screen will display and tap **OK**.

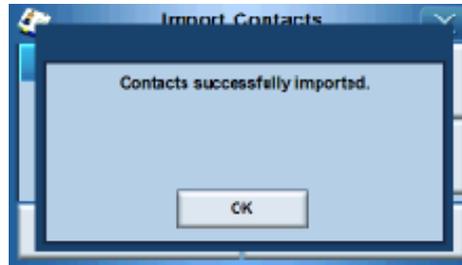

## Exporting


To export one or more contact(s) from the main memory to the SD/MMC card, select the contact(s) you want to export.



You can either

- Tap the list bar beside each contact to select (tapping again will deselect), or
- Tap **Select All**  to select all contacts, or
- Tap **Deselect All**  to deselect all contacts.

Tap  , then the following screen will now appear:

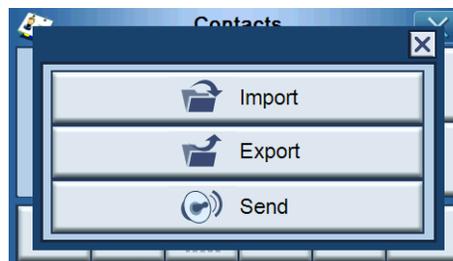


Once you have selected the contact(s) you want to export, tap **Export**  .  
If exported successfully, a dialog will display and show the saving path and file name,  
then tap **OK** to finish it.



## Sending contact information to another device

To send the contact information to another bluetooth-enabled device tap **Send**.

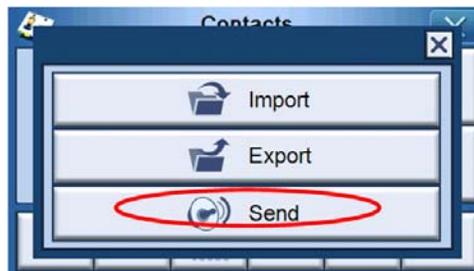

Your device will start to send contact information to the connected mobile phone.

---

**NOTE:** Bluetooth function is for selected models only: p760 and p780.


---

# 4 System

---

## Accessing the System settings

To access the System settings on your device  
Switch the unit on and tap **System** in the Main Menu screen.

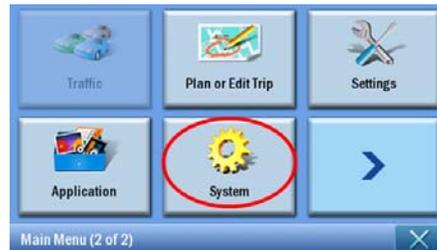

The System screen will now appear on the display



From this screen you can access:

**Language** – Select the default language

**Volume** - Set the default volume

**Date/Time** - Set the date/time

**Power** - Adjust power-saving options

**Backlight** - Adjust the backlight

**Calibration** - Adjust the accuracy for the touch screen

**Factory Default** - Load Factory Default settings

**Sys. Info.** - View system information


**Password** - Set the password

## Choosing the language

Tap **Language** on the System screen.



The Language screen will now appear in the display:

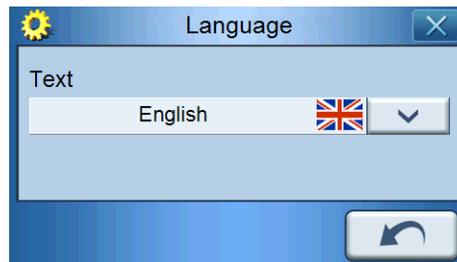

- To change the Text language, tap the down arrow  to display a drop-down list of languages, then tap a language from the list.

Once you have finished, tap **Back**  .

## Adjusting Settings

### Setting the volume

Tap **Volume** on the System screen.



The Volume screen will now appear on the display.



Tap the +/- buttons to increase or decrease the volume.

(Alternatively, you may also use the +/- hotkeys.)

Check the **"Enable sounds for taps"** option if you would like to hear a clicking sound each time you tap a button.

Once you have finished, tap **Back**  .

## Muting the volume

Tap the **Mute** button  to disable sound.



Tap the **Mute** button  to enable sounds.




Once you have finished, tap **Back**  .

## Setting the date and time

Tap **Date/Time** on the System screen.



The Date/Time screen will now appear in the display.

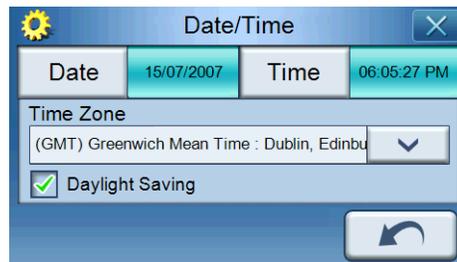

## Changing the time zone

To change the time zone, tap the down arrow  beside Time Zone.

From the drop down list that appears, tap on the time zone you want to use.




## Choosing Daylight Saving

If you live in an area that uses Daylight Saving (moving the clock forward/back an hour each year), then make sure that the **Daylight Saving** checkbox  is checked.

## Changing the date

To change the date, tap **Date**.

The Date screen will now appear.

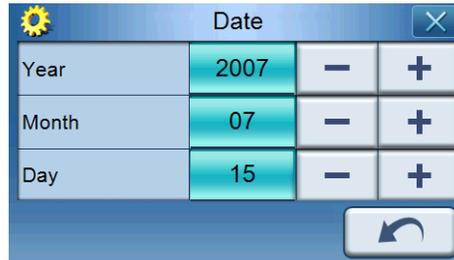


- To adjust the year, tap the +/- buttons beside Year.
- To adjust the month, tap the +/- buttons beside Month.
- To adjust the day, tap the +/- buttons beside Day.

Once you have finished, tap **Back** .

## Changing the time

To change the time, tap **Time** (on the Time/Date screen).

The Time screen will now appear.

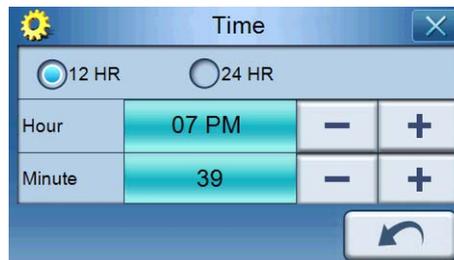

- To choose 24-hour or 12-hour format, tap either the **24HR** or **12HR** radio button .
- To adjust the hour, tap the +/- buttons beside Hour.
- To adjust the minute, tap the +/- buttons beside Minute.

## Power

Tap **Power** on the System screen.



The Power screen will now appear in the display.




- To adjust the idle time before suspension, tap the +/- buttons beside Power.
- To adjust how long to suspend while using battery power, tap the +/- buttons beside Battery.
- To adjust how long to suspend while using external power, tap the +/- buttons beside AC Power.


Once you have finished, tap **Back**  .

## Backlight

Tap **Backlight** on the System screen.

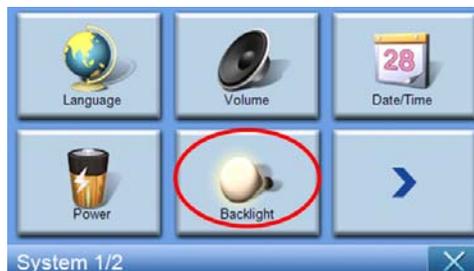


The Backlight screen will now appear in the display.

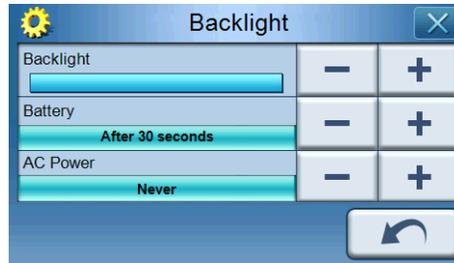


- To adjust the brightness, tap the +/- buttons beside Backlight.
- To adjust how long the backlight turns off while using battery power, tap the +/- buttons beside Battery.
- To adjust how long before the backlight will turn off while using external power, tap the +/- buttons beside AC Power.

## Calibration

Tap **Calibration** on the System screen.

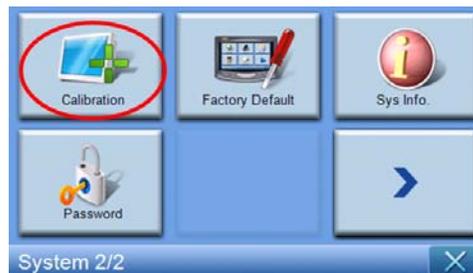


To recalibrate the screen, tap the black dot to calibrate the device.

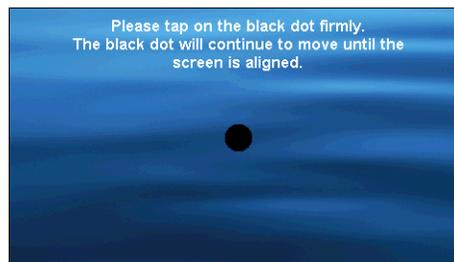

## Factory Default

Tap **Factory Default** on the System screen to reset your device to factory default settings.

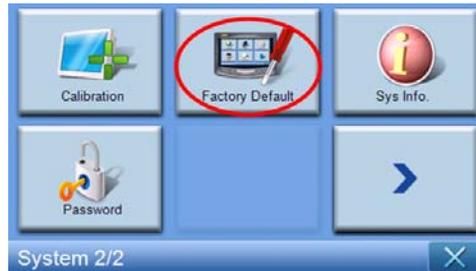


## System information

Tap **Sys. Info.** on the System screen.



The System Info screen will now appear on the display.

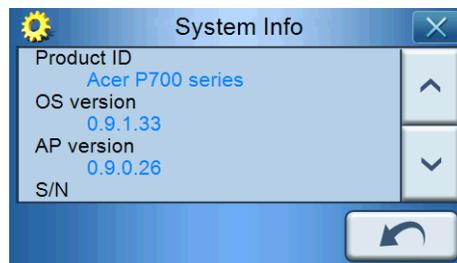


Here you can see your device's Product ID, OS Version, AP version, S/N, PCB version, Bluetooth address (only in p760 and p780), Bootloader version, GPS firmware, TMC version, License, Manufacturer, and Copyright statement, Trademark and Logo (© 2007 Acer Inc.)

To leave this screen, tap **Back**  .

## Setting the password

Tap **Password** on the System screen.

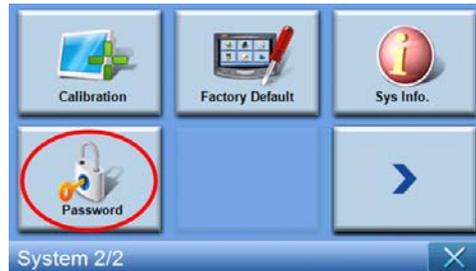

Enter your new password (four-letter maximum)



Tap  .



Enter your new password again.



Tap  again to finish setting the Password.



If you want to change to a new password, enter the current password.



Enter the new password and tap .




Enter the new password again and tap , to finish setting the new password.



## System Adjusting Settings

---

If you want to abort the new password setting, tap **Password** again.

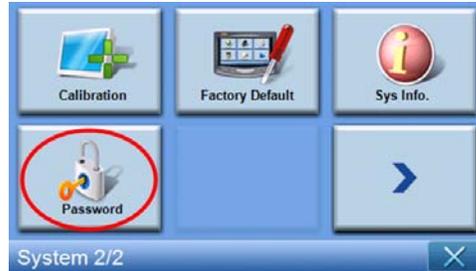


Check  **Skip new password setting.**



A screen will display, tap **YES** to confirm the cancellation.




Once the password setting is complete, the next time you perform a soft reset or hit the power switch, you will have to enter the correct password to operate p700.

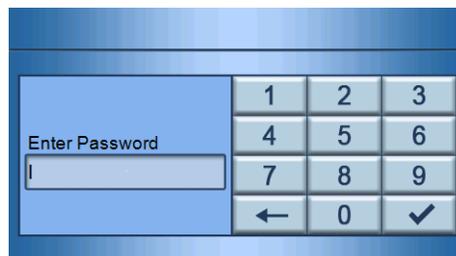

## Key Lock

Pressing both the **Volume down** and **Volume up** buttons at the same time for over 3 seconds causes the p700 to enter the Lock state. The below message will also display.

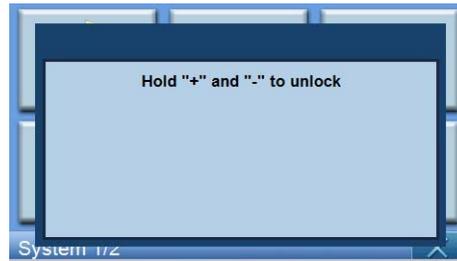

During Lock state, there will be no reaction to whatever buttons you press. Press both **Volume down** and **Volume up** buttons at the same time for over 3 seconds again to unlock the p700.

---

# 5 Bluetooth Phone

---

Bluetooth function is only enabled for the p760 and p780.

## Connecting your mobile phone using Bluetooth

By "pairing" your mobile phone to the p700, you can use the p700 as a handsfree device for added convenience and safety while driving.

Tap the **"Phone"** icon on from the 2nd page of the Main Menu.



Tap the **"Enable"** icon. You may have to wait a few seconds while Bluetooth is enabled.



Once Bluetooth is enabled, the grayed out items will be available for selection.



Tap the **"Connect Phone"** icon to start searching for your mobile phone.



It requires few minutes while searching for your mobile phone.



If there is more than one device detected, use the drop-down menu to select the proper device.




Select the proper device.



## Bluetooth Phone

---

Tap , the p700 will attempt to connect to your mobile phone. When prompted, enter "1111" on your mobile phone to complete pairing. (Screen image will vary depending on the model of your phone).

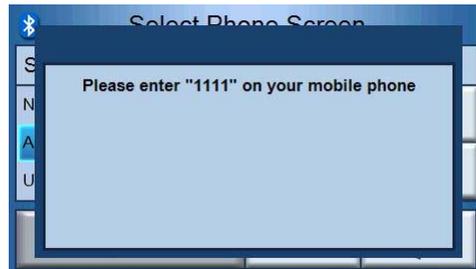

Once pairing is complete, your mobile phone will display a confirmation message.



The p700 will return to the Phone menu.



## Checking the Bluetooth status of your p700

You can check the status via the Bluetooth icon from the map screen - there are 3 states.

### Description

Bluetooth disabled - In this state, Bluetooth is disabled and the handsfree function is not available.



Bluetooth-enabled phone not connected/paired - In this state, Bluetooth is enabled but not connected to any mobile phone. You can not make call or receive calls.



Bluetooth enabled/phone connected - your p700 is ready to be used to make or receive calls.



## Making and receiving phone calls

After successfully connecting your p700 to your mobile phone, you can start using the p700 as a hands-free device. Hands-free functionality is available when initiating calls from the mobile phone (recommended) or when initiating calls from the p700. Hands-free functionality is also available when receiving calls to your mobile phone.

Tip: Initiate phone calls using your mobile phone, as your phone contacts are already stored there.

Tip: During a call, use the **NAVI** button to switch to the map screen and tap  to switch to the conversation screen.

## Making a phone call using your mobile phone


Make sure your p700 is correctly paired with your mobile phone.




Initiate a phone call using your mobile phone.



Your p700 will display the number being dialed and act as a handsfree device.

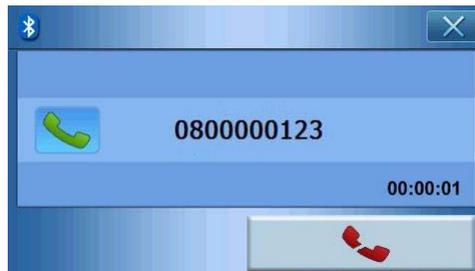

Select  to end the call.

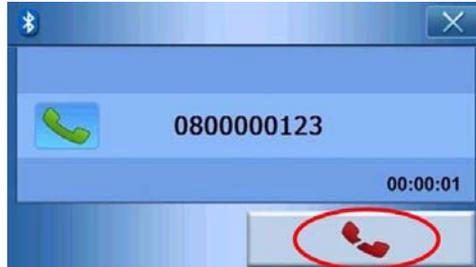


## Dial from Contacts

When making a phone call, you can dial from contacts.



Tap  to select a phone number from the contact list.

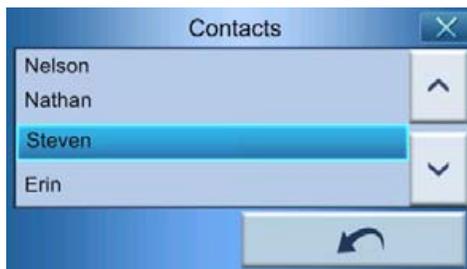

Select a name from contact and tap  to return to the dialing screen.



## Bluetooth Phone

### *Making a phone call using your mobile phone*

---

Tap  to make the call.

## Dial from Dialed Numbers

When making a phone call, you can dial from call history.



Tap  to select a phone number from the call history.



Select a name from call history and tap  to return to the dialing screen.




Tap  to make the call.

## Making a phone call while navigating

Note: The Phone Button  will only be available when Bluetooth is activated on both your p700 and your mobile phone, and the phone is successfully connected to the p700. After suspending and resuming your p700 (i.e. switching off/on for a period of time), the Phone button will not appear unless you connect to a phone. To make a phone call or access the Phone button, reconnect your mobile phone to the p700 (refer to the **Connecting to your mobile phone using Bluetooth** section above).


Select  on the map screen.

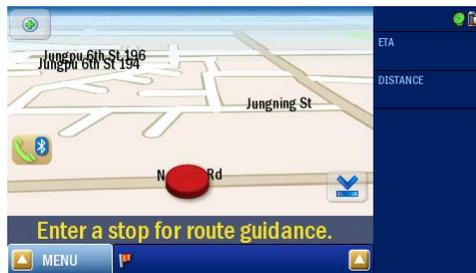

Enter the phone number to dial and tap  to initiate the call.



The p700 will dial the entered number.

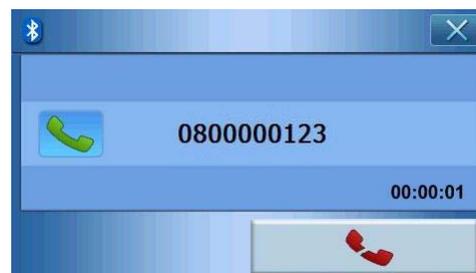

## Bluetooth Phone

### *Answering an incoming call while navigating*

---


If you want to stop the call, tap  .  
Press the **NAVI** button to return to the Map screen. On the Map screen, you can tap  to return to the dialing screen.



## Answering an incoming call while navigating

When navigating, you will be able to accept incoming calls using your p700 as a hands-free phone.

When a call is received, you will see the following screen.

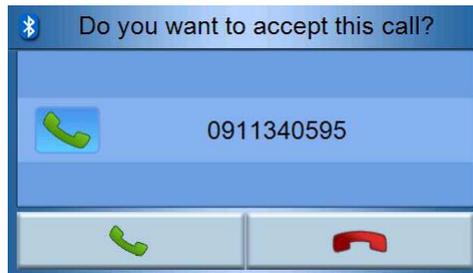

Select  to answer the incoming call.




## Bluetooth Phone *Answering an incoming call while navigating*

---


Or select  to reject the incoming call.



After you accept an incoming call, use your p700 as a hands-free device.

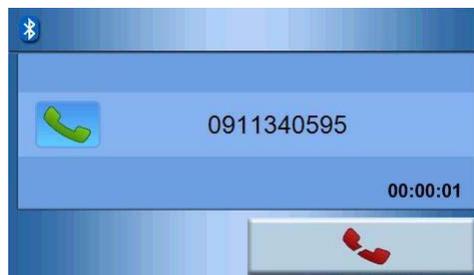

During a call, press the **NAVI** button to return to the Map screen and tap the  to switch to the dialing screen.

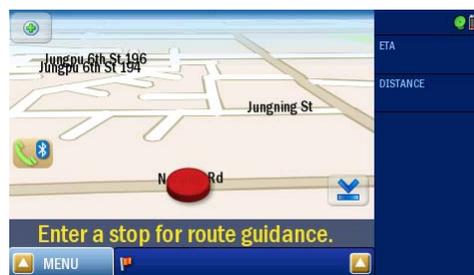

Select  to end the call. If necessary, switch to the conversation screen using the  button first.



## Sending location


After connecting to your phone, you can send your current location to other people via SMS.



Send a message via your mobile phone.



Tap  to send message, and message is sent as a "predefined text Address: XXXX, GPS:0000".

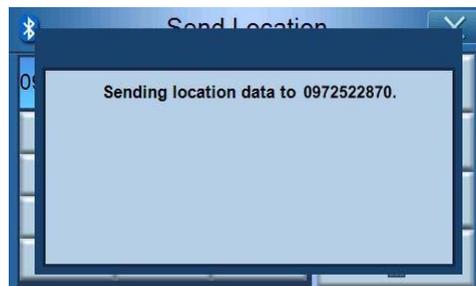


After sending, your p700 will display a confirmation message. You can also send your location via the contacts and dialed numbers lists. (Refer to "Dial from contacts" and "Dial from history")



## Predefining text

Tap the "**Predefined Text**" icon on the second page of the phone menu.

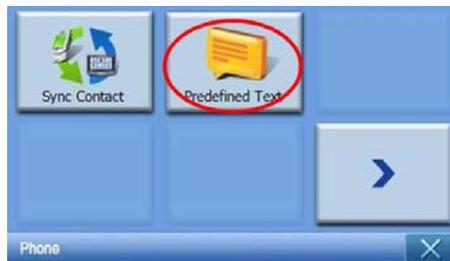

Tap  to edit predefined text.



## Bluetooth Phone

### *Synchronizing contacts*

---


After finishing, tap  and return to the following screen.




Tap  to save the predefined text and return.

## Synchronizing contacts


Tap the **"Contacts Sync."** icon on the second page of phone menu. The p700 will sync. contacts with your mobile phone.

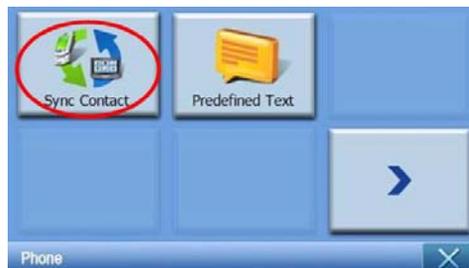

Tap p700 will confirm if you want to sync. contacts.

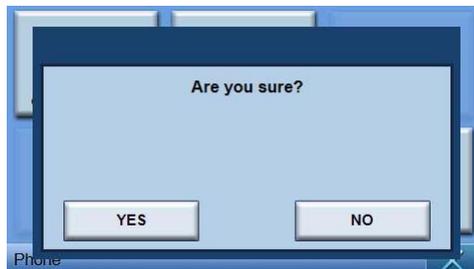

Tap **YES**. The p700 will start to sync.

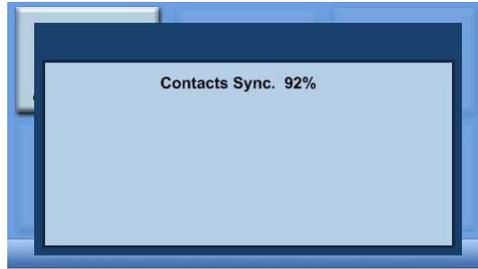


## Sending emergency

Tap the "**Send Emergency**" icon on the first page of the phone menu.



After displaying the confirmation message, tap **YES** to proceed to the next step.

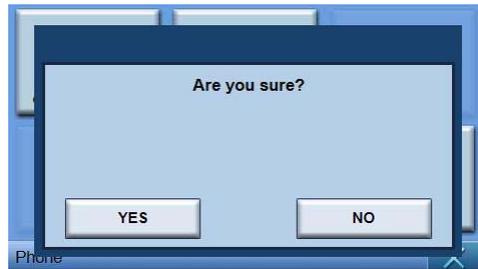

## Bluetooth Phone


### *Sending emergency*

---

If the p700 is not connected to a phone, it will automatically connect to the last connected phone. After connecting to a phone. The p700 will check the contacts to find people who are set as emergency contacts.



And then send emergency message in a format of "SOS: predefined text address: xxxx, GPS: 0000" to the people who are set as **"Used for Emergency"**.

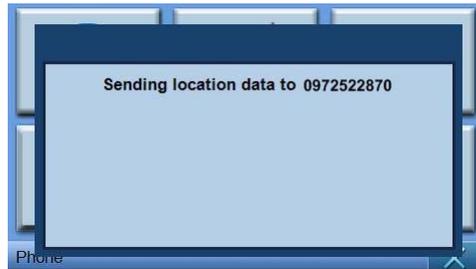


## 6 Resetting the *Acer p700 Series Portable Navigator*

---

You may have to perform a reset if the device freezes (i.e., device no longer responds to the buttons on the screen). A soft reset allows your device to get a fresh start, similar to rebooting a computer. This will restart your device and adjust memory allocation. All records and entries are retained after a soft reset. GPS settings are also retained.

### Performing a soft reset

Hold the device securely, and slide switch the soft reset button on the bottom left of your device.

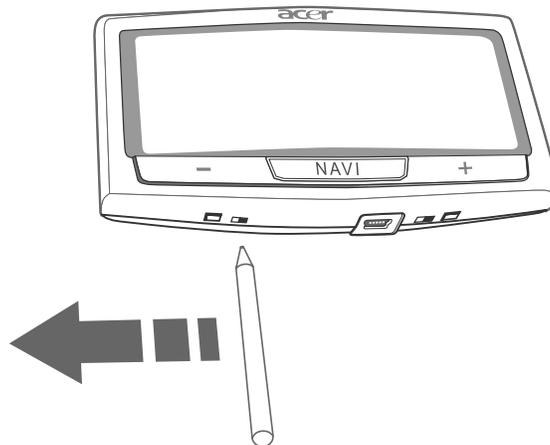

---

**NOTE:** Performing a soft reset will not clear the RAM in the unit.

---


# Resetting the Acer p700 Series Portable Navigator

## Performing a hard reset

---

### Performing a hard reset

If a soft reset does not correct the problem, you can then try a hard reset. Slide the power switch to the left and then slide it back to the right.

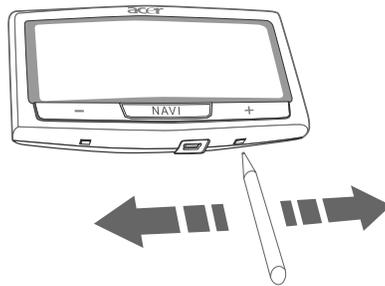

---

**NOTE:** Performing a hard reset will clear the RAM in the unit and reset the GPS of the unit.


---

### Loading the factory default settings


If you still encounter system errors even after soft and hard resetting the device, load the factory default settings to correct the error. These default settings have been selected to optimize your device's performance.

To load the factory default settings:

- 1 Tap **System** on the Main Menu panel.

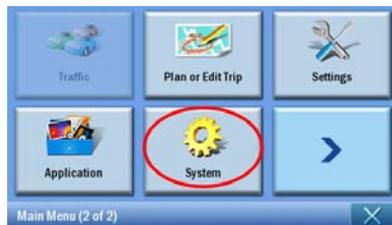


- 2 Tap **Factory Default** on the System screen.

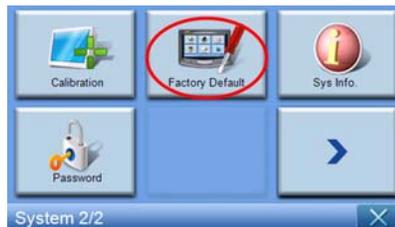

## Resetting the Acer p700 Series Portable Navigator *Loading the factory default settings*

---

- 3 Tap **YES** on the dialog box.

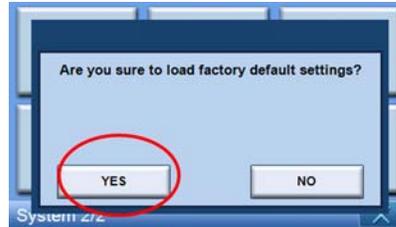

- 4 After the factory reset, reconfigure your device's user preferences.



---

**NOTE:** Performing a factory default will erase the RAM, reset the GPS and erase all the user/application data on the unit's flash storage. The data on the SD card will not be erased.

---

## Frequently Asked Questions

Q: Is my phone compatible with the p700?

A: Go to <http://global.acer.com/products/pda/index.htm> to check for compatibility.

Q: Why can't I send contact (vCard) information to my phone?

A: Your phone may not support the vCard format. Please check your phone's user guide or manufacturer website.

Q: Can I simultaneously connect the p700 to multiple Bluetooth devices?

A: No, the p700 does not support multiple connections to Bluetooth devices at the same time.

Q: Do I need to reconnect my phone to the p700 each time I want to make or receive calls?

A: Some phones will automatically reconnect with the p700, meaning you do not need to go through the connection process each time you want to use it to make or receive calls.

---

**NOTE:** Some phones only reconnect to the p700 if there is an incoming call or a call initiated from the mobile phone handset. There are even phones that will not reconnect and require a manual reconnection (refer to the "Connecting your mobile phone using Bluetooth"). Check your phone's user manual for details about "auto-reconnection".

---

Q: Even though my phone can automatically reconnect to the p700, why do I have to manually reconnect it to my p700 when sending location or contact information?

A: Mobile phones require different profiles for different functions. Occasionally, you will have to manually reconnect your phone to the p700.

Q: I ended a call using my mobile phone, but the call is still active on my p700. Why?

A: Due to compatibility issues, some phones do not send the proper termination signals at the end of a call. To resolve this issue, end the call using your p700 by selecting.

Q: Why can't I use the p700 to make and receive phone calls?

A: Check the status of your p700 Bluetooth to make sure the p700 is connected to your mobile phone. Please refer to "Connecting your mobile phone using Bluetooth" and "Checking the Bluetooth status of your p700" for more details.

# Information for your safety and comfort

---

## Safety instructions

Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on the product.

### Turning the product off before cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Unplug this product during lightning storms or when unused for long periods of time.

### CAUTION: Accessibility

Be sure that the power outlet you plug the power cord into is easily accessible and located as close to the equipment operator as possible. When you need to disconnect power to the equipment, be sure to unplug the power cord from the electrical outlet.

### CAUTION: Dummy Card of SD memory card slot

Your Portable Navigator shipped with plastic dummies installed in the SD memory card slot. Dummies protect unused slots from dust, metal object, or other particles. Save the dummy for use when no SD memory card is installed in the slot.

## Warnings

- Do not use this product near water.
- Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.
- Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
- Decrease the volume if you can't hear people speaking near you.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product.
- To avoid damage of internal components and to prevent battery leakage, do not place the product on a vibrating surface.

## Information for your safety and comfort

---

- Never use it under sporting, exercising, or any vibrating environment which will probably cause unexpected short current or damage devices, and even exposure risk from Lithium-ion battery pack.

### CAUTION: Listening

To protect your hearing, follow these instructions.

- Increase the volume gradually until you can hear clearly and comfortably.
- Do not increase the volume level after your ears have adjusted.
- Do not listen to music at high volumes for extended periods.
- Do not increase the volume to block out noisy surrounding.

### Using electrical power

- This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord.
- Do not overload a power outlet, strip or receptacle by plugging in too many devices. The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip's input rating.

### Product servicing

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

Unplug this product from the wall outlet and refer servicing to qualified service personnel when:

- the plug is damaged, cut or frayed
- liquid was spilled into the product
- the product was exposed to rain or water
- the product has been dropped or the case has been damaged
- the product exhibits a distinct change in performance, indicating a need for service
- the product does not operate normally after following the operating instructions

---

**NOTE:** Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

---

### Battery

This product uses a lithium-ion battery. Do not use it in a humid, wet and/or corrosive environment. Do not put, store or leave your product in or near a heat source, in a high temperature location, in strong direct sunlight, in a microwave oven or in a pressurized container, and do not expose it to temperatures over 60°C (140°F). Failure to follow these guidelines may cause the lithium-ion battery to leak-acid, become hot, explode or ignite and cause injury and / or damage. Do not pierce, open or disassemble the battery. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. For safety reasons, and to prolong the lifetime of the battery, charging will not occur at low - below 0°C (32°F) - or high - over 40°C (104°F) - temperatures.

### Replacing the battery pack

The Portable Navigator uses lithium batteries. Replace the battery with the same type as that which came bundled with your product. Use of another battery may present a risk of fire or explosion.

Warning! Batteries may explode if not handled properly. Do not disassemble or dispose of them in fire. Keep them away from children. Follow local regulations when disposing of used batteries.

### Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

### Global Positioning System

The Global Positioning System (GPS) is a satellite-based system that provides location and timing information around the globe. GPS is operated and controlled under the sole responsibility of the national government authority which is responsible for its availability and accuracy. Any changes in GPS availability and accuracy, or in environmental conditions, may impact the operation of your device. Acer cannot accept any liability for the availability and accuracy of GPS.

### Use with Care

Use of this GPS device for navigation still means that you need to drive with due care and attention.

### Mounting on a Car

Extreme care must be taken when mounting the Acer p700 Series on a car. Read the description in "Setting up the Acer p700 Series Portable Navigator in your vehicle" on page xiv carefully before mounting. Acer p700 Series shall be mounted in compliance with the relevant legislation and the vehicle manufacturer's rule. Failure to mount The Acer p700 Series correctly could result in damage to your vehicle and serious injury to the vehicle rider and other road users. Acer p700 Series is mounted on your car at your own risk.

### Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

### Disposal instructions

Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, visit <http://global.acer.com/about/sustainability.htm>



### Mercury advisory

For projectors or electronic products containing an LCD / CRT monitor or display:  
Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at [www.eiae.org](http://www.eiae.org). For lamp-specific disposal information, check [www.lamprecycle.org](http://www.lamprecycle.org).



### Tips and information for comfortable use

Computer users may complain of eyestrain and headaches after prolonged use. Users are also at risk of physical injury after long hours of working in front of a computer. Long work periods, bad posture, poor work habits, stress, inadequate working conditions, personal health and other factors greatly increase the risk of physical injury.

Incorrect computer usage may lead to carpal tunnel syndrome, tendonitis, tenosynovitis or other musculoskeletal disorders. The following symptoms may appear in the hands, wrists, arms, shoulders, neck or back:

- Numbness, or a burning or tingling sensation.
- Aching, soreness or tenderness.
- Pain, swelling or throbbing.
- Stiffness or tightness.
- Coldness or weakness.

If you have these symptoms, or any other recurring or persistent discomfort and / or pain related to computer use, consult a physician immediately and inform your company's health and safety department. The following section provides tips for more comfortable computer use.

### Finding your comfort zone

Find your comfort zone by adjusting the viewing angle using a footrest, or raising your sitting height to achieve maximum comfort. Observe the following tips:

- Refrain from staying too long in one fixed posture.
- Avoid slouching forward and/or leaning backward.
- Stand up and walk around regularly to remove the strain on your leg muscles.
- Take short rests to relax your neck and shoulders.
- Avoid tensing your muscles or shrugging your shoulders.
- Install the external display, keyboard and mouse properly and within comfortable reach.
- If you view your monitor more than your documents, place the display at the center of your desk to minimize neck strain.

### Taking care of your vision

Long viewing hours, wearing incorrect glasses or contact lenses, glare, excessive room lighting, poorly focused screens, very small typefaces and low-contrast displays could stress your eyes. The following sections provide suggestions on how to reduce eyestrain.

#### Eyes

- Rest your eyes frequently.
- Give your eyes regular breaks by looking away from the monitor and focusing on a distant point.
- Blink frequently to keep your eyes from drying out.

## Information for your safety and comfort

---

### LCD Display

- Keep your display clean.
- Adjust the display brightness and/or contrast to a comfortable level for enhanced text readability and graphics clarity.
- Eliminate glare and reflections by:
  - Placing your display in such a way that the side faces the window or any light source
  - Minimizing room light by using drapes, shades or blinds
  - Using a task light
  - Changing the viewing angle
  - Using a glare-reduction filter
- Avoid adjusting your display to an awkward viewing angle.
- Avoid looking at bright light sources, such as open windows, for extended periods of time.

### Developing good work habits

Develop the following work habits to make your computer use more relaxing and productive:

- Take short breaks regularly and often.
- Perform some stretching exercises.
- Breathe fresh air as often as possible.
- Exercise regularly and maintain a healthy body.

# Regulatory and safety notices

---

## FCC notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

## Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

## Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

## Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this computer.

### Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

### Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### Declaration of Conformity for EU countries

Hereby, Acer, declares that this Portable Navigator is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. (Please visit <http://global.acer.com/products/pda/reg-pda/index.htm> for complete documents.)

Compliant with Russian regulatory certification.



### LCD pixel statement

The LCD unit is produced with high-precision manufacturing techniques. Nevertheless, some pixels may occasionally misfire or appear as black or red dots. This has no effect on the recorded image and does not constitute a malfunction.

### Radio device regulatory notice

---

**NOTE:** Below regulatory information is for models with wireless LAN and/or Bluetooth only.

---

### General

This product complies with the radio frequency and safety standards of any country or region in which it has been approved for wireless use. Depending on configurations, this product may or may not contain wireless radio devices (such as wireless LAN and/or Bluetooth modules). Below information is for products with such devices.

### European Union (EU)

R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standard:

- Article 3.1(a) Health and Safety
  - EN60950-1:2001
  - EN50371:2002
- Article 3.1(b) EMC
  - EN301 489-1 V1.4.1:2002
  - EN301 489-17 V1.2.1:2002
- Article 3.2 Spectrum Usages
  - EN300 328 V1.5.1:2004

### List of applicable countries

EU member states as of May 2004 are: Belgium, Denmark, Germany, Greece, Spain, France, Ireland, Italy, Luxembourg, the Netherlands, Austria, Portugal, Finland, Sweden, United Kingdom, Estonia, Latvia, Lithuania, Poland, Hungary, Czech Republic, Slovak Republic, Slovenia, Cyprus and Malta. Usage allowed in the countries of European Union, as well as Norway, Switzerland, Iceland and Liechtenstein. This device must be used in strict accordance with the regulations and constraints in the country of use. For further information, please contact local office in the country of use.

### The FCC RF safety requirement

The radiated output power of the wireless LAN and Bluetooth® is far below the FCC radio frequency exposure limits. Nevertheless, the Acer Portable Navigator shall be used in such a manner that the potential for human contact during normal operation is minimized as follows:

- An improper installation or unauthorized use may cause harmful interference to radio communications. Also any tampering of the internal antenna will void the FCC certification and your warranty.

### Canada — Low-power license-exempt radio communication devices (RSS-210)

#### a. Common information

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

#### b. Operation in 2.4 GHz band

To prevent radio interference to the licensed service, this device is intended to be operated indoors and installed outdoors is subject to licensing.

### Exposure of humans to RF fields (RSS-102)

The Acer Portable Navigator employs low gain integral antennas that do not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website at [www.hc-sc.gc.ca/rpb](http://www.hc-sc.gc.ca/rpb).



**Acer America Corporation**  
333 West San Carlos St., San Jose  
CA 95110, U. S. A.  
Tel : 254-298-4000  
Fax : 254-298-4147  
www.acer.com



## Federal Communications Commission Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The following local Manufacturer /Importer is responsible for this declaration:

Product:	Portable Navigator
Model Number:	p700
SKU Number:	p7xxx ("x" = 0~9, a~z, or A~Z)
Name of Responsible Party:	Acer America Corporation
Address of Responsible Party:	333 West San Carlos St. San Jose, CA 95110 U. S. A.
Contact Person:	Acer Representative
Phone No.:	1-254-298-4000
Fax No.:	1-254-298-4147

# Regulatory and safety notices

---



Acer Computer (Shanghai) Limited  
3F, No. 168 Xizang medium road, Huangpu District,  
Shanghai, China



## Declaration of Conformity

We, **Acer Computer (Shanghai) Limited**  
3F, No. 168 Xizang medium road, Huangpu District,  
Shanghai, China

Contact Person: Mr. Easy Lai  
Tel: 886-2-8691-3089 Fax: 886-2-8691-3000  
E-mail: [easy\\_lai@acer.com.tw](mailto:easy_lai@acer.com.tw)

Hereby declare that:

**Product:** Portable Navigator  
**Trade Name:** Acer  
**Model Number:** p700  
**SKU Number:** p7xxx ("x" = 0~9, a ~ z, or A ~ Z)

Is compliant with the essential requirements and other relevant provisions of the following EC directives, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue comply with the requirements.

**EMC Directive 89/336/EEC, amended by 92/31/EEC and 93/68/EEC as attested by conformity with the following harmonized standards:**

- EN55022:1998 + A1:2000 + A2:2003, AS/NZS CISPR22:2002, Class B
- EN55024:1998 + A1:2001 + A2:2003
- EN61000-3-2:2000, Class D
- EN61000-3-3:1995 + A1:2001

**Low Voltage Directive 2006/95/EC as attested by conformity with the following harmonized standard:**

- EN60950-1:2001

**RoHS Directive 2002/95/EC on the Restriction of the Use of certain Hazardous Substances in Electrical and Electronic Equipment**

**R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standard:**

- Article 3.1(a) Health and Safety
  - EN60950-1:2001
  - EN50371:2002
- Article 3.1(b) EMC
  - EN301 489-1 V1.4.1:2002
  - EN301 489-17 V1.2.1:2002
- Article 3.2 Spectrum Usages
  - EN300 328 V1.5.1:2004

*Easy Lai*

Easy Lai / Director  
Acer Computer (Shanghai) Limited

\_\_\_\_\_  
Date

# FAQs

This section lists down frequently asked questions that may arise during the use of your *Acer p700 Series Portable Navigator*, and gives easy answers and solutions to these questions.

Aspect	Question	Answer
Audio	Why is there no sound coming from the device?	<ul style="list-style-type: none"> <li>If the earphones are plugged into the device, the speaker is automatically shut off. Disconnect the earphones.</li> <li>Check that the device's volume settings is not muted. In the System panel, tap <b>Volume</b>.</li> <li>Check that the volume control is not at its lowest setting.</li> </ul>
Touch screen	Why is the touch screen not responding to my finger taps?	The screen may have lost its calibration. Recalibrate the screen.
Multimedia mode	Why can't I view my picture files?	You may be trying to view an image that is not supported by Photo. Go to "i) Photo Viewer" on page 15 for a list of supported image formats.
Navigation mode	Why is it that sometimes my device takes longer than 5 minutes to get a GPS fix?	If the previous GPS fix position was more than 500 km or 12 hours apart from your current position and time, it will take significantly longer than the standard TTFF time to get a GPS fix. This is due to the nature of the GPS algorithm and rotational velocity between the satellites and planet Earth, and deemed normal and is not the fault of your <i>Acer p700 Series Portable Navigator</i> device.
System information and performance	How do I check the OS version of my device?	View the device's OS version and other technical specifications. In the Settings panel, tap <b>Sys Info</b> .

## FAQs

---

Aspect	Question	Answer
	How do I restore the system back to its default factory settings?	You can perform this task by using the Factory Reset button on the System Info screen. Go to "Loading the factory default settings" on page 54 for instructions.
	What should I do if the system stops functioning normally?	Perform a soft reset on the device. Go to "Performing a hard reset" on page 54 for instructions.
Power	I couldn't turn on the device.	The battery power may be depleted. Recharge the device. Go to "Recharging the Acer p700 Series Portable Navigator" on page 8 for instructions.

# Customer support

---

## Technical assistance

If you encounter a problem with your *Acer p700 Series Portable Navigator*, review the following first:

- "Resetting the Acer p700 Series Portable Navigator" on page 53
- "FAQs" on page 69.
- Latest *Acer p700 Series Portable Navigator* User Guide on your regional Acer web site. Go to <http://global.acer.com/support/>.

If the problem still persists, you will need technical assistance. Refer to the <http://global.acer.com/about/webmaster.htm/> web site for information on how and where to contact the Acer Service Centers available in your area.

## Product warranty

Refer to the *Acer p700 Series Portable Navigator* warranty booklet (manufacture option) for details on the warranty coverage of your *Acer p700 Series Portable Navigator*.

# System specifications

---

This chapter lists the features and operating specifications of the *Acer p700 Series Portable Navigator*.

## Hardware features

Aspect	Description
Processor	<ul style="list-style-type: none"><li>• Samsung S3C2412A26 266 MHz application processor</li></ul>
GPS chipset	<ul style="list-style-type: none"><li>• SiRF Star III AL chipset and firmware solution</li></ul>
Memory	<ul style="list-style-type: none"><li>• 64 MB SDRAM for system memory</li><li>• 64 MB onboard Flash memory (for operating system and embedded applications); Model with 2 GB Flash memory is also available</li></ul>
Power	<ul style="list-style-type: none"><li>• High-density rechargeable 1100 mAh Lithium-ion battery<ul style="list-style-type: none"><li>– 3 hours charging time from empty to full capacity</li></ul></li><li>• Recharging options<ul style="list-style-type: none"><li>– Wall charger (<i>p730 / p760 / p780</i>)</li><li>– Car charger</li><li>– USB cable</li></ul></li><li>• Power status LED indicator</li></ul>
Display	<ul style="list-style-type: none"><li>• 4.3 inch screen for a wider viewing angle</li></ul>
Audio	<ul style="list-style-type: none"><li>• 1.5 W built-in speaker</li><li>• 3.5 mm stereo earphone jack</li></ul>
Connectivity	<ul style="list-style-type: none"><li>• Mini USB 1.1 client (2.0 optional)</li><li>• SD/MMC slot (Supports up to 2 GB)</li></ul>
Hardware command interface	<ul style="list-style-type: none"><li>• Volume control hotkeys</li><li>• Main Menu/ Navigation hotkeys</li></ul>

## Design and ergonomics

Aspect	Description
Compact and lightweight	<ul style="list-style-type: none"> <li>• Dimensions (L x W x H): 123 x 96.42 x 24.02 mm</li> <li>• Weight: 240g</li> </ul>
User-friendly interface	<ul style="list-style-type: none"> <li>• Acer p700 Series Portable Navigator                             <ul style="list-style-type: none"> <li>– Quick launch hotkeys for Main Menu and Navigation screens</li> <li>– Control hotkeys for volume level</li> <li>– Touch sensitive screen</li> </ul> </li> <li>• Car mount                             <ul style="list-style-type: none"> <li>– Windshield Mount</li> <li>– Firm grip suction cup provides a steady vibration-free support</li> <li>– Swivelling mechanism and axial rod allows for multi angle adjustment for optimum viewing position</li> </ul> </li> <li>• Software                             <ul style="list-style-type: none"> <li>– Multi-language user interface options</li> <li>– Contacts integration with navigation function</li> <li>– System configuration based on individual user preferences</li> </ul> </li> </ul>
Power-saving options	<ul style="list-style-type: none"> <li>• Auto-off function for touch screen backlight</li> </ul>
Mobile design	<ul style="list-style-type: none"> <li>• Suction-based car mount facilitates multi-vehicle usage</li> <li>• Compact and lightweight body makes it easy for users to carry anywhere</li> <li>• On-the-road recharging via car charger</li> <li>• Simple, out-of-the-box operation: Mount, dock, and you're ready the go. No hassle with screws and cables.</li> </ul>
Entertainment function	Pre-loaded software image files (Photo)
Bundled peripherals	<ul style="list-style-type: none"> <li>• Car mount</li> <li>• Car holder</li> <li>• Car charger</li> <li>• Wall charger</li> <li>• USB cable</li> <li>• SD Card</li> </ul>
Accessory options	<ul style="list-style-type: none"> <li>• External TMC module with antenna</li> </ul>

## System specifications

---

### Environmental specifications

Aspect	Description
Temperature	Operating: -30°C to 60°C Storage: -30°C to 70°C
Relative humidity (non-condensing)	Operating: 20% to 90% RH Non-operating: < 20% RH and > 90% RH