

## Acer LCD monitor Quick Start Guide (QSG)

### Important Safety Instructions


- Please read the following instructions carefully. This manual should be retained for future use.
1. To clean LCD Monitor screen;  
-- Power off LCD Monitor and unplug the AC/DC Power Cord.  
-- Spray a non-solvent cleaning solution onto a rag and clean the screen gently.
  2. Do not place the LCD Monitor near a window. Exposing the monitor to rain water, moisture or sunlight can severely damage it.
  3. Do not apply pressure to the LCD screen. Excess pressure may cause permanent damage to the display.
  4. Do not remove the cover or attempt to service this unit by yourself. Servicing of any nature should be performed by an authorized technician.
5. Store LCD Monitor in a room with a room temperature of -20° ~ 60°C (or -4° ~ 140°F).  
Storing the LCD Monitor outside this range could result in permanent damage.
6. If any of the following occurs, immediately unplug your monitor and call an authorized technician.
- \* Monitor to PC signal cable is frayed or damaged.
  - \* Liquid spilled into LCD Monitor or the monitor has been exposed to rain.
  - \* LCD Monitor or the case is damaged.

### Package contents




### Assembling Your Monitor

- Put the base of monitor on the desk carefully.
- Put the monitor on flat table or plate.

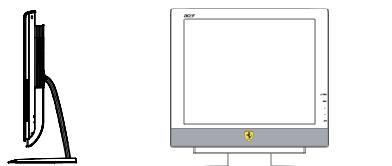


### Connecting Your Monitor to a Computer

- Turn off your computer and unplug your computer's power cable.
- Connect the signal cable to the VGA output socket (VGA IN) and the graphics card on the computer. Then tighten the thumbscrews on the connector.
- Connect the audio input socket of the LCD monitor (AUDIO IN) and the computer by means of the audio cable.
- Connect the plug of the AC/DC adapter to the (DC IN ) socket of the monitor , then insert the power cord into the adapter and a properly grounded electric socket.
- Turn on your computer and monitor.

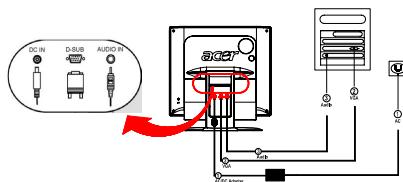

### Operating Your Monitor

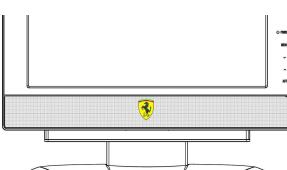

1		<b>POWER</b>	Power on/off Blue: power on Orange: in sleep mode
2		<b>MENU</b>	OSD Function Press to view OSD.
3		<b>PLUS</b>	If OSD is active, press to select or adjust OSD options. If OSD is inactive, press once, then press the buttons marked  or  to adjust the volume.
4		<b>MINUS</b>	If OSD is active, press to select or adjust OSD options. If OSD is inactive, press once, then press the buttons marked  or  to adjust the volume.
5		<b>AUTO</b>	If OSD is active, press to enter a selection in OSD. If OSD is inactive, press and the monitor will automatically optimize the position, focus and clock of your display.