

Acer x960

User Guide

Copyright © 2009. Acer Incorporated.

All Rights Reserved.

Acer x960 Smartphone User Guide

First issue: February 2009

Changes may be made periodically to the information in this publication without obligation to notify any person of such revisions or changes. Such changes will be incorporated in new editions of this User Guide or supplementary documents and publications. Acer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your Acer x960 Smartphone. All correspondence concerning your unit should include the serial number, model number, and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated.

Acer x960 Smartphone

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other companies' product names or trademarks are used herein for identification purposes only and belong to their respective companies.

Microsoft, ActiveSync, Outlook, Outlook Mobile, Internet Explorer Mobile, Windows Media Player Mobile, Windows, Windows NT and the Windows logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Microsoft products are licensed to OEMs by Microsoft Licensing, Inc., a wholly owned subsidiary of Microsoft Corporation.

Acer and its subsidiaries make no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose. Acer and its subsidiaries assume no responsibility for any damage or loss resulting from the use of this User Guide.

Contents

Welcome to the Acer x960 Smartphone	1
Features and functions	1
Product features	1
Other sources of help	2
Accessing the help menus	3
Chapter 1: Setting Up	5
Unpacking your smartphone	5
Getting to know your smartphone	6
Installing the SIM card and battery	9
Removing the SIM card and battery	10
Charging the battery	11
Turning on for the first time	12
Using the home page	14
Connecting to your PC and synchronizing data	16
Chapter 2: Making Calls	17
Before making a call	17
The onscreen number pad	18
Making a voice/video call	19
The voice call screen	21
The video call screen	23
Turning the camera on and off	24
Onscreen call options	24
Rejecting a call	24
Speed dial	27
Call History	27
Chapter 3: Input Devices	29
Using the stylus	29
Using the navigation key	29
Using the application buttons	30

Contents

Using the onscreen keyboard	31
Chapter 4: Messaging	33
Using the messaging screen	33
Text (SMS) messages	34
Sorting text messages	35
MMS messages	35
Email	38
Chapter 5: Home Screen Overview	41
Introducing the home screen	41
Status icons	43
Returning to the Home screen	44
Customizing basic settings	44
Chapter 6: Using the Camera	47
Camera icons and indicators	47
Taking a photo	49
Shooting a video	49
Photo and video options	50
Chapter 7: Advanced Operation	53
Using the Acer x960 Smartphone in flight mode	53
Comm. Manager	54
Using the Comm. Manager	54
Adjusting connection settings	55
Selecting a network	56
Adjusting wireless network settings	57
Adjusting Bluetooth settings	59
Phone settings	60
Configuring caller options	60
Choosing a profile and ring tone	62
Managing your contacts	62

Contents

Connecting to a PC and installing software	66
Connecting to a PC	66
Configuring USB to PC settings	67
Other functions	67
Managing your calendar	67
Creating tasks	67
Browsing the Internet	68
Using Windows Media Player	68
Starting Windows Live:	69
Personalizing your Acer x960 Smartphone	69
Resetting your Acer x960 Smartphone	73
Soft reset	74
Performing a cold boot	74
Performing a clean boot	75
Chapter 8: Accessories and Tips	77
Using the stereo headset	77
Using a Bluetooth headset	77
Using your Acer x960 Smartphone as a modem	79
Using a USB connection	80
Using a Bluetooth connection	80
Inserting a micro SD card	83
Security options	84
Password protection	84
FAQ, troubleshooting and error messages	85
Specifications	88
Performance	88
Display	88
Multimedia	88

Contents

USB connector	89
Connectivity	89
Camera	89
Expansion	89
Battery	89
Design and ergonomics	90
Warnings and precautions	90
Medical devices	94
Vehicles	95
Potentially explosive environments	96
Emergency calls	97
Disposal and recycling information	98
Taking care of your Acer x960	98
Safety regulations	100

Welcome to the Acer x960 Smartphone

Features and functions

Your sleek new Acer x960 Smartphone is a multi-functional tool packed with intuitive features and powerful applications that make organizing your information and synchronizing it with your personal activities an easy, efficient task. Your Acer x960 Smartphone lets you:

- Synchronize email with your server while on the move.
- Make voice calls and video calls when connected to a 3G/EDGE/GPRS/HSUPA/HSDPA network.
- Connect wirelessly to your local network to access the internet and other network features.
- Use the customizable Home screen to access a wide range of software to perform common tasks on the Windows Mobile 6.1 Professional platform.
- Synchronize the information on your computer with the information on your Acer x960 Smartphone.
- Exchange information between devices that have Bluetooth/WLAN capabilities.

Product features

- Samsung SC3 6410 533 MHz processor
- 256 MB of ROM, 128 MB of RAM (16 MB shared with modem)
- 2.8" 640 x 480-pixel TFT-LCD touch screen

Other sources of help

- Stylish, light and robust design
- Micro SD memory card slot
- 10-pin mini USB connector
- High-density, rechargeable 1530 mAh Lithium Polymer battery (changeable)
- DC power-in (5 V, 1 A)
- Application buttons for easy launch of commonly used applications
- Microsoft Windows Mobile 6.1 Professional Edition

Other sources of help

To help you use your Acer x960 Smartphone, we have designed a set of guides:

For information on:	Refer to:
Programs on your Acer x960 Smartphone and additional programs that can be installed on your Acer x960 Smartphone	This User Guide. Bundled in the Acer x960 Smartphone Getting Started CD, it provides online reference for using your Acer x960 Smartphone. The Acer x960 Smartphone help file. Select Help from the Start menu.
Connecting to and synchronizing with your computer	The Acer x960 Smartphone Quick Start Guide. ActiveSync Help on your computer. To view Help, click Help and then Microsoft ActiveSync Help .
Last-minute updates and detailed technical information	The Read Me files. Located in the Microsoft ActiveSync folder on your computer and on the Acer x960 Smartphone Getting Started CD.

Other sources of help

For information on:	Refer to:
Up-to-date information regarding your Acer x960 Smartphone	http://www.acer.com/
Service enquiries	http://global.acer.com/support/index.htm

Accessing the help menus

Your Acer x960 Smartphone features detailed help menus to aid you in making connections and using the embedded applications.

1. Tap **Start > Help** to access the Help menus.
2. Tap **Contents** to view all help topics or **Search** to find help on specific topics.

Chapter 1: Setting Up

Unpacking your smartphone

Your Acer x960 Smartphone comes packed in a cardboard box. Carefully unpack the box and remove the contents. If any of the following items are missing or damaged, contact your dealer immediately:

- Acer x960 Smartphone
- Stylus
- Battery
- Quick Start Guide
- Getting Started CD
- USB cable
- AC adapter
- Headset (not shown)



Getting to know your smartphone

Views



No.	Item	Description
1	Strap holder	Attach a strap to hold your phone here.
2	Volume control	Adjust the volume of your smartphone.
3	Reset pinhole	Insert the stylus into this hole to reset the device.
4	Record button	Press to launch the recording toolbar.
5	Light sensor	Senses ambient light to adjust screen brightness for comfortable viewing.
6	Video conference camera	Camera for video calls.

Getting to know your smartphone

No.	Item	Description
7	Bluetooth/WLAN/GPS indicator	Indicates Bluetooth, WLAN and GPS status.
8	Phone speaker	Emits audio from your smartphone; suitable for holding to your ear.
9	Charge indicator	Indicates battery charge status.
10	Touch screen	480 x 640 pixel screen to display data, phone content and enter information.
11	Talk/send button	Activate phone/dial/view recently dialed numbers/answer a call.
12	End button	Press to end a call/disconnect GPRS; press and hold to turn the phone function on/off.
13	GPS button	Activate the GPS viewer.
14	Back button	Return to the Home screen.
15	Navigation key	Press to select the highlighted item.
16	Mini USB connector	Connect to USB cable/headphones/charger.
17	Microphone	Internal microphone.
18	Power button	Press to turn the screen on/off or enter sleep mode; press and hold to turn the Smartphone off.
19	Micro SD card slot	Accepts a micro SD card to expand your device's memory capacity.
20	Camera button	Activate the camera or take a picture. Press down halfway to auto-focus.
21	Stylus	Use to enter information or select items on the touch screen.
22	Main camera	A 3.2-megapixel camera for taking high-resolution images.

Getting to know your smartphone

No.	Item	Description
23	Mirror	Use to aim when taking a self-portrait.
24	Flash	Used to illuminate an object when taking photos in low-light conditions.
25	Phone speaker	Emits audio from your smartphone; suitable for handsfree use.
26	Battery cover	Covers the battery/SIM card bay.

LED indicators

Bluetooth/WLAN/GPS indicator:

LED Color	State	Description
White	Flashing	GPS active
Amber	Flashing	WLAN connected
Blue	Flashing	Bluetooth on


Charge indicator:

LED Color	State	Description
Red	Flashing	Battery is low and needs recharging/alarm notification (missed call, new message, etc.)
	Steady	Battery is charging
Green	Flashing	Phone is active
	Steady	Battery fully charged


Installing the SIM card and battery

To take full advantage of your Acer x960 Smartphone's telephony capabilities, you must install a SIM card.

Press the battery cover clip down and slide off the cover.

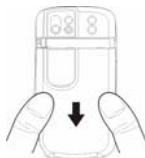


Insert the SIM card into the card slot as shown.

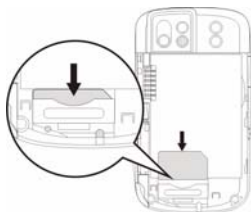


After you have installed the SIM card, install the battery.

Insert the battery into the battery compartment as shown, lining up the battery connectors with those on the side the compartment.

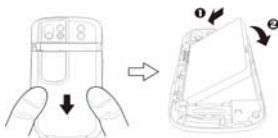

Slide the battery cover back until the cover clip locks into place.

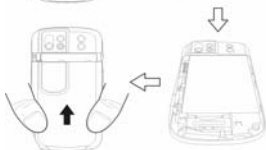

Removing the SIM card and battery

Slide the battery cover down.





Carefully lift the battery out of its compartment.

Use the stylus to carefully push the SIM card out of its holder. Carefully slide the card out with your finger.

Tip: Place your Acer x960 Smartphone on a flat but soft surface when performing this step, to avoid scratching or damaging the screen.

Re-insert the battery into the battery compartment as shown, lining up the battery connectors with those on the side the compartment.

Slide the battery cover back until the cover clip locks into place.

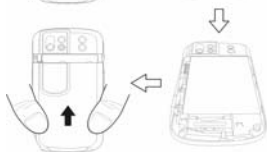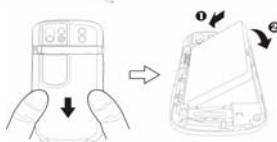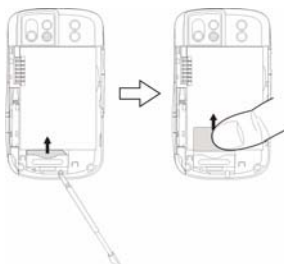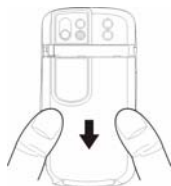

SIM card lock

Charging the battery

Your Acer x960 Smartphone may come with a SIM card lock, i.e., you will only be able to use the SIM card provided by your network operator.

To find out how to cancel a SIM lock, contact your network provider.

Charging the battery

For initial use, you need to charge your Acer x960 Smartphone for eight hours. After that you can charge it each day to recharge the battery to full capacity.

Connect the AC adapter cord to the mini USB connector on your Acer x960 Smartphone.

Plug the AC adapter into any AC current outlet and charge the device for at least eight hours for the first charge.



Tip: We recommend you get into the habit of leaving your Acer x960 Smartphone charging overnight, when not in use. This way you will not have to worry about recharging during the daytime, when it may be inconvenient.

Power LED status during charging:

Charging: LED indicator steady red.


Charging complete: LED indicator steady green.

If the battery level becomes low in the course of normal use, a status icon appears on the Acer x960 Smartphone screen indicating low battery status and an alarm sounds. The charge indicator will flash red.

Turning on for the first time

To turn on your Acer x960 Smartphone for the first time, press and hold the power button until the system bootup screen appears. Tap the screen to set up your Acer x960 Smartphone.

Follow the onscreen instructions to align the screen, practice using the stylus, set the date and time, and configure a password to protect your Acer x960 Smartphone.

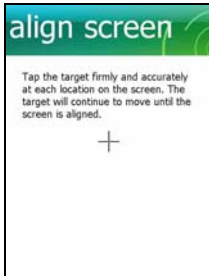

Install add-on applications

After you've finished the initial setup, you will be asked if you want to install the following add-on applications:

- **Back Utility:** A backup utility that allows you to create backup copies of your calendar, contacts, tasks, personal profile, network settings, My Documents and messages.
- **Easy Keyboard:** Provides an easy-to-use onscreen keyboard with larger keys.
- **Streaming Player:** A convenient player for listening to streaming audio over the Internet.
- **USB to PC:** Makes connecting to the PC easier by displaying various options when a USB connection to a PC is made.

Tap **Install** to continue, even if you have not selected any of the applications above. The installation of other applications and tools will continue.

Entering your PIN code

When you install a SIM card for the first time, you will have to enter a PIN code using the onscreen number pad.

If the PIN code you enter is incorrect, a warning message appears.



Activating a new SIM card

If you are using your SIM card for the first time, it may require activation. Contact your network operator for details on how to do this.

Using the home page

After rebooting, your Acer x960 Smartphone will display the Home page. You will be asked if you want to view the Icon Matrix or Acer 3D view as the default.

The Acer 3D view gives you icon-based access to many of the applications and features of your Acer x960 Smartphone. You can scroll from side to side by dragging your finger or stylus to the left or right (only part of the screen will be visible at any time).



Tap an icon to launch the following features:

No.	Feature	Description
1	Clock	View your set locations on the globe.
2	Email	Launch the email application; also indicates any unread mails.
3	Messages	Launch the messaging application; also indicates any unread messages.

Using the home page

No.	Feature	Description
4	Calls	Open the list of recently dialed numbers, missed calls.
5	Weather	View local weather forecasts for your set locations.
6	Calendar	Open your calendar to view upcoming appointments.
7	Pictures	View content in <i>My pictures</i> as a slideshow.
8	Bookmarks	Open your <i>Favorites</i> folder.
9	Settings	Open the toolkit to customize your Acer x960 Smartphone.
10	Programs	Open the <i>Quick Menu</i> ; you can set shortcuts here for quick access to frequently used applications and programs.

You can add or remove icons by tapping and holding anywhere on the Acer 3D view. This will reveal a tab that you can tap and drag up to show additional functions. Tap and drag icons between the desktop and the tab to add or remove them. You can also move the icons on the desktop while the tab is visible.



Connecting to your PC and synchronizing data

Alternatively, if you prefer a more traditional appearance, you can swipe your finger up or down the screen to use the Icon Matrix.



Connecting to your PC and synchronizing data

You can synchronize the data on your Acer x960 Smartphone with the data on your PC using the supplied USB sync cable and the Windows Vista Sync Center.

Refer to **"Connecting to a PC and installing software"** on **page 65** for more details on connecting and synchronizing.

Chapter 2: Making Calls

This chapter shows you how to make voice and video calls, and the various options available to you during your call.

Before making a call

The phone function needs to be turned on before you can make voice and video calls; you can turn the phone on from the Comm. Manager (refer to **“Comm. Manager” on page 54**), or by pressing and holding the End key.

1. To access the Comm. Manager, tap






on the Home screen or **Start > Settings > Connections tab > Comm. Manager.**


2. Tap the phone connection icon so it displays **On**.




The onscreen number pad

Making a call

1. From the Home screen, press  to open the onscreen number pad to enter the telephone number.
2. Press  to make the call.
3. To end the call, press  or tap **End** on the call screen.


Tip: Press  to return to the Home screen from the call screen.



Tip: To lock the keypad and screen, tap  on the Home screen. To unlock the keypad and display, press the Navigation key or tap **Unlock** at the bottom of the screen. The unlock screen appears.

The onscreen number pad

The onscreen number pad allows you to dial numbers with the stylus.

To access the onscreen number pad, press , the Talk/send button, or tap **Start > Phone**.



Making a voice/video call

Dialing from the onscreen number pad

1. Enter the number you want to call by tapping the onscreen number pad with the stylus.
2. Tap **Talk** (for voice calls) or **Video Call** (for video calls) to dial the number.

Making a call to one of your contacts

1. Your contacts will be displayed above the onscreen number pad.
2. Tap the contact you want to call. The contact's details are shown.
3. Tap the number you want to call.

Dialing from the Speed Dial




Any contacts in your contact list will automatically be added to your Speed Dial. Tap **Speed Dial** beneath the home screen and tap the contact you wish to call. You can opt to arrange numbers alphabetically or by the frequency with which you call the numbers. Swipe your finger up or down the screen to scroll through the list of contacts or tap a letter in the bar at the bottom of the page.


Dialing a number from Call History

Your Call History is also displayed above the onscreen number pad, and displays all received, dialed, and missed calls.

Making a voice/video call

Tap a number to view the call details. To redial any number in the call history, select the number and press  or tap **Call**.

Missed calls will be displayed in the telephone icon on the

Home Page as well as at the top of the screen using the  icon.


Dialing from other applications

You can dial numbers quickly and easily even when using other applications.

1. Press **Start > Phone**.
2. Make your call.
3. When you have finished your call, tap **X** in the top right corner of the screen, or press the OK button to return to the application you were using before you made the call.

The voice call screen

Once you have dialed your number the voice call screen appears, where several options are available.

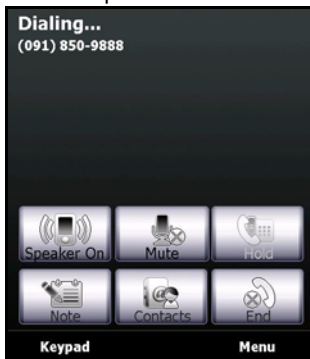

Turn on the speakerphone.



Mute the call.



Put the current call on hold.



Add a note.



Tap to enter the contacts list.



End the call.



Keypad Display the keypad.



Menu Open the menu.

The voice call/video call menu

Tap **Menu** on the voice call or video call screen to access the menu. The menu options available are:

Hold	Put the call on hold.
Mute/Unmute	Mute/unmute the call.
Turn Speaker- phone On/Off	Turn the speakerphone on/off.
Turn Hands-free On/Off	Turn the handsfree feature on/off.
Conference	Begin a conference call.
Paste	Paste a copied number from the clip-board into the number field on the voice call screen.
Save to Contacts	Save the entered number to contacts.
Create Note	Create a note.
Call History	Enter the call history screen.
Speed Dial	Enter the speed dial directory.
Options	Enter the phone settings screen.

Note: Certain options are only available during a call. These menu items are greyed out when not in a call.

The video call screen

There are also several options available on the video call screen.



Turn the camera on or off.



Switch from the front camera to the back camera.



Decrease screen brightness.



Increase screen brightness.



Mute the call.

Onscreen call options



Change the image layout, make your or your contact's video the main picture, or view both videos side-by-side.



End the call.

Turning the camera on and off

You can turn the camera on and off at any time during a video call.



To turn the camera on and off, tap the icon on the video call screen.

Onscreen call options

Answering a call


Press  or tap **Answer** to answer a call.

For incoming video calls, position your Acer x960 Smartphone so your picture is shown clearly on the screen.

Rejecting a call

Press  or tap **Ignore** to reject a call.

Ending a call


To end a call, press  or tap **End**.

Putting a call on hold

To put a call on hold, tap **Hold** on the voice call screen. Tap again to resume the call.

Swapping between calls

When you receive a second call while already on a call, a notification message will appear.

1. Press  to answer the incoming call and the first call will be put on hold.
2. Tap **Swap** on the voice call screen to switch between calls.

Conference calls

If you have one or more calls on hold and another online, you can combine all calls to create a conference call.

1. Tap **Menu > Conference**. All calls are combined.
2. To speak to selected participants privately during your conference call, tap **Menu > Private**.
3. Select the participant you wish to talk to in private.
4. To resume the conference call, tap **Menu > Conference**.

Press  or tap **End** and all participants will be disconnected.

Dialing international numbers

When dialing international numbers, there is no need to enter the international direct dialing prefix ('00' etc.) before the country code. Simply tap and hold **+0** on the onscreen number pad until **+** appears onscreen.

Tip: International call rates can vary greatly depending on the country you are calling and your network provider. We suggest you check all call rates with your network provider, to avoid excessive phone bills. If you are using your Acer x960 Smartphone abroad, roaming charges will apply. Consult your network provider for roaming rates specific to the country you are visiting before you leave.

Using the speakerphone

The speakerphone function allows you to make calls without having to hold the Acer x960 Smartphone. This handsfree function is especially useful when driving.

To activate the speakerphone, tap **Speaker On** on the voice call screen. Tap **Speaker Off** to disable the speakerphone.


Adding notes


You can write or type notes during a call to record important information and view it at a later date.

1. Tap **Note** on the voice call screen.
2. Use the onscreen keyboard to enter letters and characters or the stylus to write handwritten notes.
3. Tap **OK** when you have finished to save the note.

To view the notes at a later date, tap **Start > Programs > Notes**. Tap the note you want to open and view.

Muting a call

To mute a call, tap **Mute** on the voice call screen or  on the video call screen to switch off the microphone. Tap

Unmute or  to switch the microphone back on.

Saving a dialed number to contacts


You can save a number you have dialed to your contacts for future use.


1. Select the number from the Call History list, and tap **Save**.
2. Enter the contact's information and tap **OK** to save.

Adjusting call volume

You can use the volume control to adjust the volume during your call. Press the top of the button to increase the volume or the bottom of the key to decrease it.

Redialing a missed call


When you have a missed call, the  icon appears at the top of the Home screen, while the phone icon will display the number of missed calls.

1. Tap **View** to display the missed call details.
2. Select the call from the list and press  or tap **Call**.

Speed dial

Tap **Speed Dial** at the bottom of the Home Screen to view all your contacts as tiles indicating the contact name and number. You can sort the tiles alphabetically or by the frequency with which you have dialed the numbers. Tap a tile to immediately dial that contact.

Call History

View recent calls by accessing Call History: open the onscreen number pad by pressing ; then tapping **Call History**.

Call History Menu options

There are various options available in the Call History Menu.

- Tap **Filter** to organize the call history view. For example, tap **Filter** > **Missed** and only missed calls will be displayed.
- Tap **Delete All Calls** to delete all calls from the call history list.
- Tap **Call Timers** to view the call timer screen. From here, tap **Reset** to reset all timers. Under **Delete call history items older than**, you can select to delete call history items older than a specific amount of time.

Chapter 3: Input Devices

This section will take you through the various input methods available to you on your Acer x960 Smartphone.

Using the stylus

Note: The stylus should always be used to press the reset button, otherwise you may damage your Acer x960 Smartphone.

The stylus is used to select items and enter information.

On your Acer x960 Smartphone, the stylus replaces the mouse. Carefully remove the stylus from its holder to use.

Tap: Touch the screen once with the stylus to open items and select options.

Drag: Hold the stylus on the screen and drag across the screen to select text and images. Drag on a scroll bar to scroll up and down the screen.

Tap and hold: Tap and hold the stylus on an item to see a list of actions available for that item. On the pop-up menu that appears, tap the action you want to perform.

The stylus is also used for handwritten input. Refer to **“Using the onscreen keyboard” on page 31** for more details.


Using the navigation key


The navigation key can be used to navigate up, down, left and right through screens and menu. Press the center part of the navigation key inwards to select menu entries and execute shortcut icons.

Using the application buttons

The buttons are set to access the following applications by default:

Button 1 (left) - Record

Button 2 (right)  - GPS Viewer

Button 3  - Home screen

Button 4 - Camera

We recommend that you use these defaults whenever possible.

Tip: The four application buttons listed above can be configured to launch applications that you use the most.

1. To configure which applications to launch with each button, tap **Start > Settings > Buttons**.
2. Select the button you wish to configure from the list, then select the program to assign to the button from the drop-down list below.
3. Tap **OK** to confirm and save.

As the buttons have icons printed on them, Acer strongly recommends retaining the default settings. This avoids confusion when using your Acer x960 Smartphone.



Using the onscreen keyboard

You can activate an onscreen keyboard in certain applications when entering data.

Tap the keyboard icon at the bottom of the screen to display the keyboard. Tap again to hide the keyboard.

Tap the arrow next to the keyboard symbol to select different input options.



Mode	Description
Block Recognizer*	Write using letters, numbers, symbols and punctuation marks to be converted to text.
Keyboard (Default)	Displays a standard keyboard. Tap to enter letters, numbers and use function keys.
Letter Recognizer*	Write uppercase letters, lowercase letters, numbers and punctuation marks to be converted into text.
Symbols	Displays all symbols and special characters.
Transcriber*	Use the stylus to write in cursive, mixed or print handwriting to be converted into text.

Note: The handwriting function can take some practice getting used to. Tap the **?** symbol, visible when one of the handwriting options (*) is active, to view writing demonstrations and access the Help menus.

Tap **Options** from the keyboard menu to adjust options and settings for each input mode.

Configuring input settings

You can change the default input method when using the onscreen keyboard.

1. Tap **Start > Settings > Personal tab > Input > Input Method** tab.
2. Select the input method you prefer from the list.
3. When certain modes are selected further options are available. In these cases, tap **Options** to view further settings.
4. Tap **OK** or press the **OK** button to confirm and save.

Enabling word completion

Your Acer x960 Smartphone makes writing emails, messages and documents more efficient with the help of the word completion feature. This feature suggests words as you type.

1. Tap **Start > Settings > Personal tab > Input > Word Completion** tab.
2. Select the options you want to activate.
3. Tap **OK** or press the **OK** button to confirm and save.

Other input options

You can also configure voice recording options, zoom levels and grammar rules on the Input Settings screen.

1. Tap **Start > Settings > Personal tab > Input > Options** tab.
2. Select and configure the settings as appropriate.
3. Tap **OK** or press the **OK** button to confirm and save.

Note: Refer to the Help menus for more information on adjusting input settings.

Chapter 4: Messaging

This chapter shows you how to set up and use the SMS, MMS and email functions of your Acer x960 Smartphone.

Using the messaging screen

All SMS, MMS and email messages are accessed via the messaging screen.


To access the messaging screen, tap **Start > Messaging > Messages**. Then tap the drop-down menu in the top left corner of the messaging screen to view the folder list.

All email accounts, SMS and MMS folders are displayed here. Tap on the plus sign next to each folder to view the subfolder list. Each folder features the following subfolders:

- Deleted Items: Displays all messages you have selected to delete.

Note: To completely erase messages, you will need to delete them from the Deleted Items folders as well. Tap **Menu > Tools > Empty Deleted Items** to accomplish this.

- Drafts: Displays all draft messages.
- Inbox: Displays all received messages.
- Outbox: Displays messages in the process of being sent.
- Sent Items: Displays all sent messages.

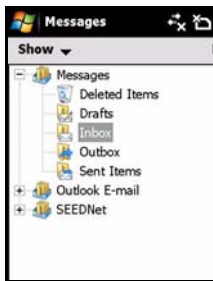

Text (SMS) messages

Tap a subfolder to open it. Tap **Inbox** to return to the main messaging screen. Tap **Menu** for a list of options appropriate to the selected folder.

Managing folders

You can select synchronization, download and other settings for certain folders. To manage your folders, tap **Menu > Tools > Manage Folders**, tap and hold on the folder name to open a menu of action items. Tap **Folder Options** to open and modify the settings for that folder.

Text (SMS) messages

You can use your Acer x960 Smartphone to send text messages to other mobile phones. Each text message can contain up to 160 characters.

Creating and sending text messages

1. Tap **Start > Messaging > Messages**. Then tap **Menu > New > Text Message**.
2. The message window appears.
3. Select a recipient and enter your message then tap **Send**.

Tip: You can request delivery notification to ensure that your message has reached its recipient. To do this, tap **Menu > Tools > Options > Accounts** tab from the Text Messages folder. Tap **Messages** and check the **Request delivery notifications** checkbox.

Replying to text messages

When a new text message arrives a message icon appears at the top of the Home screen and a notification message is displayed.

1. Tap **Start > Messaging > Messages**. Then tap the drop-down menu in the top left corner of the messaging screen.
2. Tap the **Text Messages** folder and the Inbox appears.
3. Tap a message to open it.
4. Tap **Reply** to reply to the message and the message window appears.
5. Enter your message and tap **Send**.

Sorting text messages

You can sort your text messages by message type, sender, received messages and message subject.

Tap the **Sort by** drop-down menu in the top-right of the messaging screen, and select an option from the list.

MMS messages

MMS messages are similar to text messages but also allow you to attach multimedia files such as pictures, audio or video clips. Each MMS message can be up to 300 kB in size.

Setting up MMS messaging

Before you can send MMS messages, you have to set up a connection and profile. Ask your network provider for the information required to complete the setup procedure.

1. Tap **Start > Settings > Connections tab > Connections**.
2. Tap **Add a new modem connection** under the **My ISP** section.
3. The **Make New Connection** screen appears.
4. Enter a name for the connection.

5. Select **Cellular Line (GPRS)** from the **Select a modem** list and tap **Next**.
6. Enter the access point name provided by your network provider.
7. Enter your user name, password and domain.
8. Tap **Finish** to save and complete setup.

Setting up MMS profiles

You can select and configure several MMS messaging profiles for different networks and environments.

1. Tap **Start > Messaging > Messages**, then tap the drop-down menu in the top left corner of the messaging screen.
2. Tap the **MMS** folder and the Inbox appears.
3. Tap **Menu > MMS Settings > MMSC Settings** tab.
4. Tap a profile from the list. Tap **Edit** to view the selected profile settings.
5. Tap each field to adjust its setting. These fields should be automatically configured by your network provider. If so, we recommend you leave them as they are.
6. Tap **Done** once you have finished editing the profile.
7. Tap **Select** to select the profile from the list and tap **OK**.

Note: For further information on options available to you when editing or creating MMS profiles, refer to the Help menus.

Creating MMS messages

1. Tap **Start > Messaging > Messages**. Then tap the drop-down menu in the top left corner of the messaging screen.
2. Tap the **MMS** folder and the Inbox appears.
3. Tap **New** and the message window appears.

4. Enter the recipient (along with other recipients in the cc and bcc fields if necessary) and subject of the MMS.
5. To attach a picture or video clip, tap **Insert Picture/Video...** and select the file you want to attach.
6. To attach an audio file, tap **Insert Audio...** and select the file you want to attach. The audio file will be displayed in the message.
7. To insert text, tap **Insert Text** and enter your message. All attachments and text will now be displayed in the message window.
8. Tap **Send**.

Replying to MMS messages

When a new MMS message arrives, a message icon appears at the top of the Home screen and a notification message is displayed.

1. Tap **Start > Messaging > Messages**, then tap the drop-down menu in the top left corner of the messaging screen.
2. Tap the **MMS** folder and the Inbox appears.
3. Tap a message to open it.
4. Tap **Menu > Reply** to reply to the message. The message window will appear.
5. Follow the steps described in **“Creating MMS messages” on page 36** to compose your reply.
6. Tap **Send**.

Sorting MMS messages


You can sort your MMS messages by message type, sender, received messages and message subject.

Tap the **Sort by** drop-down menu in the top-right of the messaging screen, and select an option from the list.

Note: For further information on options available to you when creating, replying to and sorting SMS and MMS messages, refer to the Help menus.

Email

Your Acer x960 Smartphone uses Outlook Mobile to manage email accounts. Tap **Start > Messaging** to open the messaging window. Tap **Setup E-mail** to set up your email account.

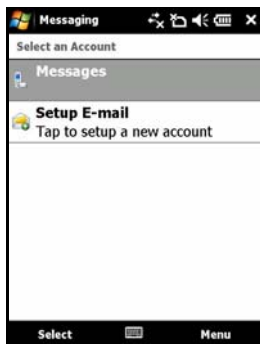

Email

Enter your email address and password to set up the account. Select if you want to save your password or not.

When you've finished entering the information, tap **Next**. Your Acer x960 Smartphone has pre-set definitions for a variety of popular ISPs and will recommend settings if your email address is recognized. Otherwise your Acer x960 Smartphone will try to connect to the Internet to find the settings.



Chapter 5: Home Screen Overview

Introducing the home screen

When you switch on your Acer x960 Smartphone, the Home screen appears following boot up.

The Home screen is the main point from which you can navigate your Acer x960 Smartphone. The screen features connection status information, displays the date and time, and features a set of shortcut icons that help you to access the most frequently used applications quickly and easily.

In the Acer 3D view, scroll from side to side by dragging your finger or stylus to the left or right (only part of the screen will be visible at any time) to reveal more icons.



Introducing the home screen

Tap an icon to launch the following features:



























No.	Feature	Description
1	Clock	View your set locations on the globe.
2	Email	Launch the email application; also indicates any unread mails.
3	Messages	Launch the messaging application; also indicates any unread messages.
4	Calls	Open the list of recently dialed numbers, missed calls.
5	Weather	View local weather forecasts for your set locations.
6	Calendar	Open your calendar to view upcoming appointments.
7	Pictures	View content in <i>My pictures</i> as a slideshow.
8	Bookmarks	Open your <i>Favorites</i> folder.
9	Settings	Open the toolkit to customize your Acer x960 Smartphone.
10	Programs	Open the <i>Quick Menu</i> ; you can set shortcuts here for quick access to frequently used applications and programs.

You can add or remove icons by tapping and holding anywhere on the Acer 3D view. This will reveal a tab that you can tap and drag up to show additional functions. Tap and drag icons between the desktop and the tab to add or remove them. You can also move the icons on the desktop while the tab is visible.







Introducing the home screen


Status icons

Icon	Description	Icon	Description
	New email, SMS or MMS		Missed call or calls
	WLAN access available		Telephone call connected
	WLAN connected		Call is being forwarded
	Connected to PC via USB		Call is on hold
	Signal strength		System sounds on
	No signal		Vibrate only, no system sounds
	Antenna off (telephone is off)		All system sounds off
	No phone service		Battery indicator
	Incoming telephone call		Low battery warning
	GPRS available		Battery is charging
	3G network available		3G connected
	GPRS connected		EDGE available
	EDGE connected		Synchronizing over EDGE

Customizing basic settings

Icon	Description	Icon	Description
	HSDPA/HSUPA network available		HSDPA/HSUPA connected
	Synchronizing over HSDPA/HSUPA		Bluetooth headset connected

Returning to the Home screen

You can return to the Home screen from any application by tapping **Start > Today** or pressing the  button.

Customizing basic settings

Setting the date and time

To set the date and time, tap **Start > Settings > Clock & Alarms > Time** tab.

Tap **Home** and select your time zone from the drop-down menu. Set the time by tapping the up and down arrows. Select the date from the drop-down calendar.

When you have finished, tap **OK** or press the **OK** button. A confirmation message will appear. Tap **Yes** to save your settings.



Personalizing your Acer x960 Smartphone

You can enter your personal information to easily identify your Acer x960 Smartphone. This is especially useful if it should ever be lost or stolen. To enter owner information, tap **Start > Settings > Owner Information**.


Customizing basic settings

Enter your name along with any other information you want to store.

Tap the **Notes** tab to add any additional notes.

Tap the **Options** tab to configure how this information is displayed.

Tap **OK** to confirm and save.

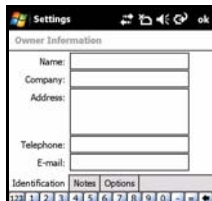

Naming your Acer x960 Smartphone

Your Acer x960 Smartphone uses a name to identify itself when connected to other computers. To specify a name, tap **Start > Settings > System tab > About > Device ID**.

Enter a name for your device. Add a description if necessary.

Tap **OK** or press the **OK** button to confirm and save.



Changing Themes

You can change the appearance of your Acer x960 Smartphone desktop by selecting different themes.

1. Tap **Start > Settings > Personal tab > Today**.
2. Select a theme from the list.
3. If you want to select a picture to use as a background, tap **Browse** and select a picture, then tap the **Use this picture as the background** checkbox.
4. Tap the **Items** tab.

Customizing basic settings

5. Select the items you want to appear on the Home screen.
You can also specify a time after which the Home screen will time out and enter stand-by mode.
6. Tap **OK** to confirm and save.




Chapter 6: Using the Camera

Your Acer x960 Smartphone features two cameras, a 300K pixel VGA camera mounted on the front of the unit, and a 3.2-megapixel digital camera mounted on the rear. This section will take you through all the steps to get you up and taking photos and videos with your Acer x960 Smartphone.





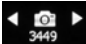





To activate the camera, press the camera button or go to **Start > Programs > Multimedia > Camera**.

Camera icons and indicators



Icon	Description
	Displays whether the camera is in photo or video capture mode.
	Tap to turn the self-timer on or off and to set the timer delay.
	Tap to display the date and time on the photo or not.

Camera icons and indicators

Icon	Description
	Tap to turn the flash on or off.
	Tap to set the select the required resolution.
	Tap to exit and return to the previous screen.
	Indicated the white-balance mode. Use the volume controls to change the white balance.
	Tap to switch between the front and rear cameras.
	<p>Tap to apply an effect:</p> <ul style="list-style-type: none">• Normal - No effect is applied.• Grey Scale - Takes black and white photos.• Negative - Uses negative colors when taking the photo.• Artistic Painting - The photo appears to be painted.• Emboss - The photo is given an embossed appearance.• Sepia - The photo is given a Sepia appearance.• Silhouette - The photo appears in silhouette.• Mirror - The object is mirrored.
	Select the storage location.
	Tap to enter the advanced settings page.
	Open the album to view thumbnails of stored pictures and videos.
	Tap to display fewer icons on the screen.

Taking a photo

Icon	Description
	Slide to zoom in or out when taking a photograph. You can also press the directional control of the navigation key to zoom.



Taking a photo

1. Frame your subject and steady your Acer x960 Smartphone.
2. Adjust any settings you require, such as brightness and scene mode. To zoom in or out use the zoom slider on the screen.
3. Press the camera button down halfway until the image comes into focus. Push down fully to take the photo.

Shooting a video

1. Frame your subject and steady your Acer x960 Smartphone.
2. Adjust any settings you require, such as brightness and scene mode.
3. Press the camera button down halfway until the image comes into focus. Push down fully to begin recording. Press the camera button down halfway at any time to re-focus.
4. Press the camera button down fully to stop recording.

Supported formats

The following file formats are supported:

Type	Formats
Image	JPEG and BMP
Video	3GP

Saving photos and videos to a micro SD card

Tap **Start** > **File Explorer** > **My Documents** > **My Pictures** (or **My Videos**). Tap and hold on the file you want to save to your micro SD card, select **Copy** or **Cut** from the pop-up menu.

Navigate to your micro SD card in **File Explorer**, tap and hold in the folder you want to save the image/video to, and select **Paste** from the pop-up menu.

Photo and video options

After you have taken your photo or video, it is automatically saved.

Note: The default locations for saving photos and videos are My Documents/My Pictures and My Documents/My Videos respectively. This can be changed from the Settings page.

Photo and video options

Tap the Album icon and select a photo to view. Tap the photo to display the option icons.



From this interface, you can start a slideshow with all the pictures in the folder, send the current picture to a contact as an MMS or email message, view the picture's information, delete the picture or return to the thumbnail view.

You can also zoom into the picture or zoom out and navigate to the previous or following file.

Editing photos

You can crop or rotate your saved photos.

1. Tap **Start > Programs > Pictures & Videos**.
2. All your photos and videos are displayed as thumbnails. Select a photo to edit.
3. Tap **Menu** to view the list of editing options.

Chapter 7: Advanced Operation

Using the Acer x960 Smartphone in flight mode

You can enter flight mode to turn off telephone, Bluetooth and WLAN functions and use the Acer x960 Smartphone as a handheld device during a flight. Check with your airline to make sure this is permitted onboard.

Some airlines may provide wireless Internet services on board that can be accessed via the WLAN feature. Check prior to your departure whether this service is available on your flight.

Switch your Acer x960 Smartphone off during takeoff and landing as it may interfere with aircraft electronic systems.


Entering flight mode:

1. Access the Comm. Manager (refer to **"Comm. Manager"** on page 54).

Comm. Manager

2. Tap Flight Mode **On** to turn off all phone, Bluetooth and WLAN functions.



Tip: Press and hold  for five seconds to exit flight mode and re-activate wireless connections (note: only connections that were enabled prior to entering flight mode will be re-activated).

Comm. Manager

Your Acer x960 Smartphone features phone, Bluetooth and WLAN functions. This section will explain how to activate and set basic phone, Bluetooth and wireless network (WLAN) connection settings through the Comm. Manager screen.

Using the Comm. Manager

To access the Comm. Manager, tap any of the communication icons at the top of the screen or **Start > Programs > Comm. Manager**.

Activating and deactivating connections

You can choose to activate one or all connections from the Comm. Manager window.

Each connection icon will be highlighted when turned on.

Adjusting connection settings

This section will show you how to adjust detailed settings for your phone, wireless and Bluetooth connections.

Phone connections

Once you have inserted a SIM card, the Acer x960 Smartphone will automatically detect your network provider.

For all phone settings, tap **Settings > Phone**. Here you can adjust ringtone, security, services, network and CB (Cell Broadcast) settings.

Adjusting phone connection settings

You can use the Connection Wizard to configure country and network settings for your phone connection, as well as create customized phone connections.

1. Tap **Start > Settings > Connections** tab > **Connection Wizard**.
2. Select your country and network operator from the lists.
3. Tap **OK** to confirm and save.

To detect these settings automatically, tap **Search**.

To edit network parameters, tap **Edit**.

Once all settings are complete, tap **OK** to confirm and save.

Creating and editing new phone connections

If your country is not listed, or you want to create a customized GPRS or CSD connection, refer to 'Creating a new connection' in the Phone Data Manager Help menus for detailed information on how to do this.

Selecting a network

You can set the Acer x960 Smartphone to detect your network automatically or set it manually.

Detecting a network automatically:

1. Tap **Start > Settings > Phone > Network** tab.
2. Select **Automatic** from the **Network Selection** list.
3. Tap **Find Network**. Your network will be automatically detected.

Selecting a network manually:

1. Tap **Start > Settings > Phone > Network** tab.
2. Select **Manual** from the **Network Selection** list. A list of available networks will appear.
3. Select a network from the list and tap **OK**.

When your current network is unavailable, tap **Select** to select another network to use.

Note: Contact your service provider should you have any problems obtaining voice mail and the text message service center numbers.

Adjusting wireless network settings

Wireless network (WLAN) connections

You can use your Acer x960 Smartphone to connect to a wireless local area network (WLAN) to exchange information with your PC or network and access the Internet.

If there are multiple WLANs available, your Acer x960 Smartphone will prompt you to choose a network when you activate the WLAN function. Select a network and specify whether it will be used primarily for **Work** or **The Internet**. The Acer x960 Smartphone will save your settings and connect to your chosen network.

Wireless power management

When activated, wireless connections use considerable battery power so we recommend customizing power management options to get the most out of your battery.

Note: When battery power is lower than 20 percent, a notification message will appear asking if you want to continue using wireless functions or not.

You can create, view and edit all available wireless networks in your area, and configure network adapter card settings.

Viewing wireless networks

1. Tap **Start > Settings > Connections** tab > **Wi-Fi > Wireless** tab.
2. Scroll through the list to view all available networks.
3. Tap the **Networks to access** list to sort by **All available**, **Only access points** or **Only computer-to-computer** connections.

Creating new wireless network connections

1. Tap the **Start > Settings > Connections** tab > **Wi-Fi > Wireless** tab.
2. Tap **Add New...** from the list.
3. Enter all required information to configure the wireless network. Refer to the Help menus to guide you through the configuration screens for each setting.

Editing wireless network connections

1. Tap the **Start > Settings > Connections** tab > **Wi-Fi > Wireless** tab.
2. Select a connection from the list.
3. Tap **Menu > Edit**.
4. Enter all required information to configure the wireless network. Refer to the Help menus to guide you through the configuration screens for each setting.

Adjusting network adapter settings

1. Tap **Start > Settings > Connections** tab > **Wi-Fi > Network Adapters** tab.
2. Select a network adapter from the list.
3. Tap **Edit**.
4. Select to use a server-assigned IP address or enter a specific IP address.
5. Tap **OK** to confirm and save.

Adjusting Bluetooth settings

You can create and adjust Bluetooth connections, accessibility settings and service settings to get the most out of the Acer x960 Smartphone's Bluetooth functions.

Bluetooth connections

You can use Bluetooth to exchange information between your Acer x960 Smartphone and other mobile devices.

For all Bluetooth settings, tap **Settings > Bluetooth** in the Comm. Manager. Here you can adjust Bluetooth profiles, status, accessibility, and services settings. You can also view version information.

Creating new bluetooth connections

The simplest way to set up and configure a new Bluetooth connection is by using the Bluetooth Manager.

1. Tap **Start > Settings > Connections** tab > **Bluetooth > Devices** tab.
2. Tap **Add new device...** Your Acer x960 Smartphone will search for devices in range.
3. Select the device you want to connect to.
4. Tap **Next** and follow all onscreen instructions to set up the connection.

Adjusting Bluetooth visibility

1. Tap the **Start > Settings > Connections** tab > **Bluetooth > Mode** tab.
2. Select whether to turn the Bluetooth function **On** or **Off** and whether the device should be visible to other devices or not.
3. Tap **OK** to confirm and save.

Setting up COM ports

1. Tap the **Start > Settings > Connections** tab > **Bluetooth > COM Ports** tab.

2. Follow the onscreen instructions to register the connected Bluetooth devices as an effective COM port.

Phone settings

Many phone settings are automatically configured by your Acer x960 Smartphone when you insert a SIM card. The device will communicate with your service provider and automatically obtain all necessary settings, such as network name, voice mail and text message center numbers.

You can, however, view and modify these settings yourself if necessary, through the Phone Settings screen.

Tap **Start** > **Settings** > **Personal** tab > **Phone**.

Configuring caller options

You can configure certain caller options to keep control over your incoming and outgoing calls.

Bar outgoing or incoming calls using call barring; choose who to display your identity to with caller ID; specify a number to which calls can be forwarded if you are unavailable using call forwarding; choose to be notified if an incoming call is waiting using call waiting.

Setting up caller ID

1. Tap **Start** > **Settings** > **Personal** tab > **Services** tab.
2. Select **Caller ID** from the list and tap **Get Settings**.
3. Select who to provide your caller ID to.
4. Tap **OK** to confirm and save.

Setting up call forwarding

1. Tap **Start** > **Settings** > **Personal** tab > **Services** tab.

Phone settings

2. Select **Call Forwarding** from the list and tap **Get Settings**.
3. Specify whether to forward all calls or only under certain conditions. Tap the checkboxes to select the option you require and enter number(s) to which the calls will be forwarded.
4. Tap **OK** to confirm and save.

Setting up call waiting

1. Tap **Start > Settings > Personal** tab > **Services** tab.
2. Select **Call Waiting** from the list and tap **Get Settings**.
3. Select whether to be notified or not when a call is waiting.
4. Tap **OK** to confirm and save.

Note: Refer to the Help menus for more detailed information on adjusting phone settings.

Choosing a profile and ring tone

A profile contains settings for alert notification, device volume, ring type and tone.

1. Tap **Start > Programs > Phone > Sound Profiles**. There are three profiles:

Profile	Description
Normal	The default profile. Call alert levels are set to medium.
Vibrate	Intended for discreet use. Call alert is muted and set to vibrate.
Silent	Call alert is muted and vibrate is turned off.

2. Select a profile and use the lists and sliders to adjust settings to customize your profile.
3. Tap **Advance** to set further options for each profile.

4. Tap **OK** to confirm and save.

Managing your contacts

Your Acer x960 Smartphone features an address book that allows you to save contacts to either the internal memory or onto your SIM card.

Further options are explained in this section that are accessible via the Contact screen menu.

Adding and editing contacts

To add a new contact:

1. Enter the telephone number on the Phone screen.
2. Tap **Menu > Save to Contacts**.
3. Tap **<New Contact>** and select whether this is a **SIM Contact** or **Outlook Contact**.
4. Enter the required information.
5. Tap the **Notes** tab to enter any additional information for the contact.
6. Tap **OK** to save.

You can choose to save contacts directly to your SIM card. This is useful if you use your SIM card with multiple phones and you always need your address book to hand.

Note: You can only enter a contact name and telephone number when creating a new SIM contact. If more information is required, create a regular phone contact.

Editing a contact

1. Tap **Start > Contacts**.
2. Tap on the contact you want to edit.

3. Tap **Menu > Edit**.
4. Edit the contact information and tap **OK** to save.

Moving contacts

You can move contacts stored in internal memory to your SIM card, and vice versa.

Moving a contact from internal memory to your SIM card

Note: Moving a contact from internal memory to your SIM will only move the contact's name and phone number. Names longer than 14 characters will be truncated.

1. Press the right softkey button **Contacts** or tap **Start > Contacts**.
2. Tap the internal memory contact you want to save.
3. Tap **Menu > Copy Contact > To SIM**.
4. Edit the information as required.
5. Tap **OK** or press the **OK** button to save the contact to your SIM card.

Moving a contact from your SIM card to internal memory

1. Tap **Start > Contacts**.
2. Tap the SIM contact you want to save.
3. Tap **Menu > Copy Contact > To Contacts**.
4. Edit the information as required.
5. Tap **OK** or press the **OK** button to save the contact to your internal memory.

Sending contacts via text or beam

You can send your contacts details to other phones using text messaging or via beam.

Sending contacts via message

1. Tap **Start > Contacts**.
2. Select a contact.
3. Tap **Menu > Send Contact > Messages**.
4. Select the contact information you want to send and tap **Done**.
5. Specify a recipient and tap **Send**.

Sending contacts via beam

1. Tap **Start > Contacts**.
2. Select a contact.
3. Tap **Menu > Send Contact > Beam**.
4. Select the Bluetooth device to send the contact to.
5. Tap **Send**.

Deleting contacts

To free up space on either the internal memory or on your SIM card, you can delete contacts from your address book.

1. Tap **Start > Contacts**.
2. Select a contact.
3. Tap **Menu > Delete Contact**.
4. Tap **Yes** to permanently delete the contact.

Assigning a ring tone and picture to specific contacts

You can assign a specific ringtone and picture to a particular contact so they are easily identifiable when they call.

1. Tap **Start > Contacts**.
2. Tap on the contact you wish to assign a ringtone/picture to.
3. Tap **Menu > Edit**.
4. Tap **Select a picture...** to open My Pictures. Tap the desired picture to assign a picture to the contact.
5. Scroll to **Ringtone** and tap the field. Select a ringtone from the drop-down list.
6. Tap **OK** or press the **OK** button to confirm and save.

Connecting to a PC and installing software

You can use Microsoft ActiveSync (on Windows XP) or the Windows Mobile Device Center (on Windows Vista) to synchronize the information on your computer with the information on your Acer x960 Smartphone, comparing and updating data on both locations. This serves as backup data in case something happens to your Acer x960 Smartphone.

Connecting to a PC

The packaged mini USB sync cable enables you to synchronize the information on your Acer x960 Smartphone with the data on your computer using ActiveSync.

Other functions

Plug the mini USB sync cable into the mini USB connector on your Acer x960 Smartphone. Plug the USB client connector into an available USB port on your computer.



Configuring USB to PC settings

You can enable advanced networking to enhance your USB to PC connection, should you be experiencing any problems synchronizing your data with ActiveSync.

1. Tap **Start > Settings > Connections** tab > **USB to PC**.
2. Check the **Enable advanced network functionality** checkbox to enable.
3. Tap **OK** or press the **OK** button to confirm and save.

Other functions

Managing your calendar

You can set appointments and event reminders with the calendar feature.

Setting a new appointment:

1. Tap **Start > Calendar**.
2. Tap **Menu > New Appointment**.
3. Enter appointment information and reminder frequency.
4. Tap **OK** or press the **OK** button to confirm and save.

To edit an appointment, tap the entry and then tap **Edit** to open the appointment entry screen.

Creating tasks

Tasks can be set to remind you of specific things you must do and the completion deadlines.

Creating a new task

1. Tap **Start > Programs > Tasks**.
2. Tap **Menu > New Task**.
3. Enter all task information, start and due dates and how often to be reminded.
4. Tap **OK** or press the **OK** button to confirm and save.

To edit an appointment, tap the entry and then tap **Edit** to open the task entry screen.

Note: For more information on other options available in the calendar and task screens, refer to the Help menus.

Browsing the Internet

In order to browse the Internet with your Acer x960 Smartphone, you must be connected to a 3G or wireless network or to a computer with an Internet connection via ActiveSync.

Tap **Start > Internet Explorer** to open the browser.

To adjust your browser settings, tap **Menu > Tools > Options**.

Using Windows Media Player

You can use Windows Media Player to play videos you have taken with your Acer x960 Smartphone as well as other media files, such as MP3 music files.

The following formats are supported:

Type	Formats
Audio	WMA, MP3, WAV, AAC
Video	WMV

Playing back video or audio files

1. Tap **Start > Programs > File Explorer**.
2. Locate the file to playback, and tap once to play it in Windows Media Player.


Starting Windows Live:

1. Tap **Start > Programs > Windows Live**.
2. Sign in with your email address and password and your contacts list appears.

Personalizing your Acer x960 Smartphone

This section takes you through all settings that can be adjusted under the **Personal** tab in the **Settings** screen.

Adjusting the volume

To adjust the volume, tap  at the top of the Home screen. The volume control appears.

- Use the upper slider to adjust the ring volume.
- Use the lower slider to adjust system volume.
- Use the icons at the top of the screen to turn all sounds on, set to vibrate only or mute all sounds.
- If you adjust the volume during a call, the speaker volume will be adjusted.

Configuring start menu programs

You can select the programs you most frequently use and put them in the Start menu as shortcuts.

1. Tap **Start > Settings > Personal tab > Menus**.
2. Select the programs to appear in the Start menu from the list.
3. Tap **OK** to confirm and save.

Configuring sounds and notifications

You can specify sounds to play for certain events or when certain actions are performed.

1. Tap **Start > Settings > Personal tab > Sounds & Notifications > Sounds** tab.
2. Select to enable sounds for events or programs. You can also specify to enable sounds when tapping the screen or pressing buttons.
3. Tap the **Notifications** tab.
4. Select an event from the list and the notification options for that event are displayed.
5. Adjust the settings.

6. Repeat steps 4 and 5 to adjust notification options for other events.
7. Tap **OK** or press the **OK** button to confirm and save.

Configuring backlight settings

You can specify the appearance and conditions under which the screen backlight will be on or off.

1. Tap **Start > Settings > System tab > Backlight > Battery Power** tab.
2. Select the timing for the backlight to turn on and off when your Acer x960 Smartphone is running on battery power.
3. Tap the **External Power** tab. Select the timing of the backlight to turn on or off when your Acer x960 Smartphone is running on external power.
4. Tap the **Backlight Level** tab. Adjust the backlight brightness level and automatic level selection options.
5. Tap **OK** to confirm and save.

Note: Backlight settings greatly affect battery life. Configure these settings carefully to ensure that you get the most out of your battery.

Managing system certificates

System certificates are used to positively identify your Acer x960 Smartphone to other systems.

Tap **Start > Settings > System tab > Certificates** to view all certificates.

Setting clock and alarms

You can set the current date and time for two locations, and set multiple alarms.

Refer to **"Setting the date and time"** on page 44 for information on how to set the time and date.

Setting alarms

1. Tap **Start > Settings > System tab > Clock & Alarms**.
2. Tap the checkbox to activate an alarm.
3. Tap **Alarms** tab **Description** and enter a name for the alarm.
4. Select the day and time for the alarm.
5. Tap **OK** or press the **OK** button to confirm and save.

Adjusting microphone volume

You can adjust the microphone volume level and activate the Automatic Gain Control (AGC) feature.

1. Tap **Start > Settings > System tab > Microphone**.
2. Move the slider to adjust the microphone volume.
3. Tap **OK** or press the **OK** button to confirm and save.

Configuring regional settings

You can adjust regional settings for number, currency, date and time formats to match those used in your country.

1. Tap **Start > Settings > System tab > Regional Settings**.
2. Tap the **Region, Number, Currency, Date** and **Time** tabs to view information for your region. Adjust any if necessary.
3. Tap **OK** or press the **OK** button to confirm and save.

Power saving options

1. Tap **Start > Settings > System tab > Power > Advanced** tab.
2. Select the interval after which your Acer x960 Smartphone will turn off if not in use. You can specify two intervals: one for when on battery power, and one for when on external power.

Viewing power status

Tap **Start** > **Settings** > **System** tab > **Power** > **Battery** tab to view battery power status.

Removing programs

You can remove programs you have installed on your Acer x960 Smartphone to free up extra storage memory.

Note: You can only remove programs you have installed, you cannot remove programs installed during manufacture.

1. Tap **Start** > **Settings** > **System** tab > **Remove Programs**.
2. Tap the program you want to remove from the list.
3. Tap **Remove** and the program will be uninstalled.

Configuring screen options

You can change orientation, align the screen, enable ClearType and adjust text size to make viewing your Acer x960 Smartphone as comfortable as possible.

1. Tap **Start** > **Settings** > **System** tab > **Screen** > **General** tab.
2. Select screen orientation and tap **Align Screen** if you need to re-align the screen.
3. Tap the **ClearType** tab. Select to enable ClearType.
4. Tap the **Text Size** tab. Move the slider to adjust text size.
5. Tap **OK** or press the **OK** button to confirm and save.
6. Tap a program in the list, and tap **Activate** to start, **Stop** to stop or **Stop All** to stop all running programs.

Resetting your Acer x960 Smartphone

You may have to perform a reset if your Acer x960 Smartphone fails to respond when buttons are pressed or the screen is tapped.


Note: Before performing a reset, ensure that you have not accidentally locked your Acer x960 Smartphone. If this is the case, tap Unlock displayed in the bottom right of the screen to unlock the system.

Soft reset

A soft reset allows your Acer x960 Smartphone to get a fresh start, similar to rebooting your computer. All data and settings information are retained after a cold boot.

Note: To reduce risking damage to your Acer x960 Smartphone, only use the supplied stylus to reset the device.

Using the tip of your stylus, lightly press the **Reset** button inside the hole on the side of your Acer x960 Smartphone.

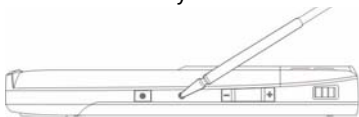

Reset button

Performing a cold boot

A cold boot will clear the RAM of your Acer x960 Smartphone. It is similar to turning a computer off and then turning it back on.

Note: To reduce risking damage to your Acer x960 Smartphone, only use the supplied stylus to reset the device.

Hold down the power button and use the tip of your stylus to lightly press the **Reset** button inside the hole on the side of your Acer x960 Smartphone.




Performing a clean boot

Warning! You should only perform a clean boot when all other reset options have failed to restore your Acer x960 Smartphone to an operational state.

A clean boot will restore your Acer x960 Smartphone to the state it was when you got it from the factory.

Warning! This will erase all your personal information, any contacts stored on your phone and any programs you installed.

If your screen is responding to stylus input: Go to **Start > Programs > Utilities > Default Settings**. Read the warning information and enter the security code in the empty textbox. Tap **OK** to proceed.

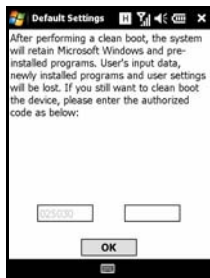

If your screen is not responding to stylus input: Press the reset button while holding the power button down. When you see the Acer screen, press and hold the Record button. You will see a screen asking you to confirm the clean boot, press the camera button to confirm. If you do not press the camera button, your Acer x960 Smartphone will reboot to as normal.

Chapter 8: Accessories and Tips

This chapter shows you how to use accessories with your Acer x960 Smartphone, as well as provide useful tips for when you are using your Acer x960 Smartphone.

Using the stereo headset

Your Acer x960 Smartphone comes packaged with a stereo headset with built-in microphone for handsfree use when making calls.

To use the headset, plug it into the mini USB port at the bottom of the unit.


When the headset is plugged in, all audio is routed to the headset, and the speakers are turned off.


- To answer an incoming call, press the silver button on the microphone.
- Adjust the volume with the integrated volume wheel.
- End the call by pressing the silver button again.

Using a Bluetooth headset

Your Acer x960 Smartphone's Bluetooth functions make it fully compatible with all Bluetooth headsets. This allows you to use the unit handsfree when making calls, without the inconvenience of wires.

To set up your Bluetooth headset:

1. Tap  on the Home screen to enter the Comm. Manager.
2. Tap the Bluetooth icon to turn on Bluetooth connections.
3. Press the right soft key button or tap **Settings** and select Bluetooth Settings from the menu.
4. Tap **Bluetooth Manager** on the Bluetooth Settings screen.
5. Press the left soft key button or tap **New**.
6. Tap **Hands-free/Headset setup**.
7. Make sure your Bluetooth headset is ready and tap **Next**.
8. Tap the icon for your Bluetooth headset.
9. Enter your headset passkey and tap **OK** or press the **OK** button.
10. Tap **Finish** to complete setup.

When you want to answer an incoming call, press the "answer" button on your Bluetooth headset. Press  or **End** to end the call.

Tip: As well as being essential for handsfree operation when driving, you can also use your Bluetooth headset when at home or in the office, to avoid carrying your Acer x960 Smartphone around with you at all times. In ideal conditions, Bluetooth range is up to 10 metres, or 30 feet.

Using your Acer x960 Smartphone as a modem

When connected to your PC, your Acer x960 Smartphone can function as a modem via GPRS or UMTS.


You can also use a USB connection or the Bluetooth function of your Acer x960 Smartphone to connect to your PC or laptop and act as a modem. You must first set up an ISP connection on your PC or laptop.

1. Click **Start > Settings > Control Panel**.
2. Click **Network Connections > Create a new connection**.
3. Click **Next** to begin the New Connection Wizard.
4. Select **Connect to the Internet** and click **Next**.
5. Select **Set up my connection manually** and click **Next**.
6. Select **Connect to a dial-up modem** and click **Next**.
7. Enter the name of your ISP (Internet Service Provider) and click **Next**.
8. Enter your ISP's phone number. The number must begin with '*99#'. Click **Next**.
9. Select one option from the Connection Availability screen and click **Next**.
10. Enter your username and password and click **Next**.
11. Click **Finish** to complete the setup.

You can now establish a Bluetooth connection between your PC and your Acer x960 Smartphone. When you attempt to access the Internet on your PC, the x960 will dial the ISP number specified to establish a connection.

Using a USB connection

1. Close ActiveSync if it is running. This helps Internet sharing to function properly.
2. Tap **Start > Programs > Internet Sharing**.
3. Select USB from the PC connection drop-down menu.
4. Select your network connection type from the network connection drop-down menu.
5. Tap **Connect**.

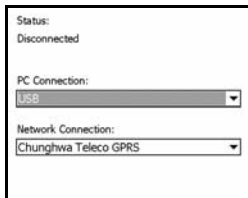

Your Acer x960 Smartphone will now act as a modem.

Using a Bluetooth connection

You can also use Bluetooth to link your PC to your Acer x960 Smartphone to connect to the Internet. Ensure that Bluetooth is enabled from the Comm. Manager (refer to **"Comm. Manager" on page 54**), and that other devices can discover your Acer x960 Smartphone. To do this, open the Comm. Manager, tap **Settings > Bluetooth > Mode** tab, and check **Other devices can discover me**.

Ensure that your computer's Bluetooth adapter is switched on.

- Open **Bluetooth Places** and click **Add...**, then follow the steps of the Add Bluetooth Device Wizard.

Using your Acer x960 Smartphone as a modem

- Double click on your Acer x960 Smartphone device name.




- Select **Let me choose my own passkey** when requested, and enter a passkey.



Using your Acer x960 Smartphone as a modem


- Your Acer x960 Smartphone will ask to allow pairing, and for the Passkey. Enter the same code you entered above and tap **OK**.
- Windows will automatically connect to your Acer x960 Smartphone and detect what services are available.

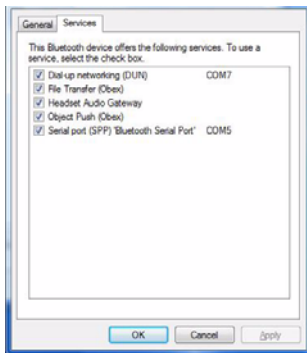

Inserting a micro SD card

Your Acer x960 Smartphone features a memory expansion slot that accepts a micro SD card to expand memory and storage capacity.

Remove the battery cover and open the SD/MMC slot cover and insert the micro SD card into the slot as shown below. Make sure the gold connectors are facing upwards. Push the card in until it clicks into place.

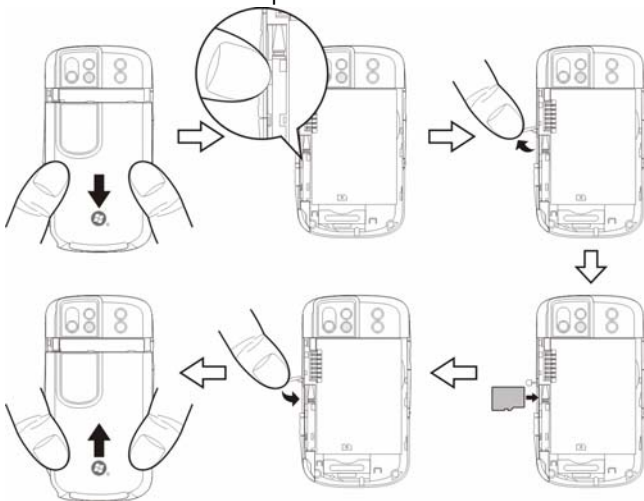

Note: If your Acer x960 Smartphone is in power-saving mode when you insert the card, it will “wake up.”

Security options

Password protection

You can protect your Acer x960 Smartphone with a password to prevent unauthorized use. When enabled, this means the password must be entered before the device can be used.

To enable password protection:

1. Tap **Start > Settings > Lock**.
2. Check the checkbox and select a time after which a password prompt will appear.
3. Choose your password type, either a simple 4-digit PIN or a 'strong' alphanumeric password which must contain at least three of the following: upper or lower case letters, punctuation and numbers.
4. Reconfirm your password.
Tap **OK** or press the **OK** button to save.




You can also enter a hint in case you forget your password. Tap the **Hint** tab and enter your hint. Tap **OK** or press the **OK** button to save.

Appendix

FAQ, troubleshooting and error messages

This section lists frequently asked questions that may arise during the use of your Acer x960 Smartphone, and gives easy answers and solutions to these questions.

Aspect	Question	Answer
Audio	Why is there no sound coming from the device?	If the headset is plugged into the device, the speaker is automatically shut off. Disconnect the headset.
		Check that the device volume setting is not muted. Tap the  icon at the top of the Home screen.
		Check that the volume control is not at its lowest setting.
Touch screen	Why is the touch screen not responding to my stylus taps?	The screen may have lost its alignment. Go to Start > Settings > System tab > Screen to re-align the screen.
Multimedia files	Why can't I view my picture files?	You may be trying to view an image that is not supported. Refer to "Supported formats" on page 50 for more information.

FAQ, troubleshooting and error messages

Aspect	Question	Answer
	Why can't I view my video files?	You may be trying to view a video that is not supported. Refer to "Supported formats" on page 50 for more information.
	Why can't I play my music files?	You may be trying to play a file that is not supported. Refer to "Using Windows Media Player" on page 68 for more information.
System information and performance	How do I check the OS version of my device?	Tap Start > Settings > System tab > SysInfo to check the OS version and other hardware and software information.
	How do I restore the system back to its default factory settings?	Perform a cold boot/cold boot. Refer to "Performing a cold boot" on page 74 for more information.
	What should I do if the system stops functioning normally or crashes?	Perform a cold boot. Refer to "Soft reset" on page 73 for more information.
Power	I couldn't turn on the device.	The battery power may be depleted. Recharge the device. Refer to "Charging the battery" on page 11 for more information.
	Even when fully recharged, the battery seems to run down very quickly.	Check power saving options. Tap Start > Settings > System tab > Power to configure power saving options.

Error messages

Error message	Description
Connection canceled	Operation canceled by the User.
Service unavailable - please try again later	The network is not stable, or server has not responded. Try again later.
Connection unavailable - please check your network settings	<p>No path to the destination is available. Please check the settings in Start > Settings > Connections tab.</p> <ol style="list-style-type: none">1. If your Smartphone is connected to your PC via USB, check both the PC's network settings and ActiveSync settings (when connected via USB, neither Wi-Fi nor GPRS/3G is used).2. If Wi-Fi is enabled, check the Wi-Fi settings from Start > Settings > Connections tab > Comm. Manager (when Wi-Fi is enabled, GPRS/3G will not be used). <p>Note: You might need to log into the wireless environment.</p> <ol style="list-style-type: none">3. If you are using a GPRS/3G network, check the settings from Start -> Settings -> Connections Page -> Connections. If the Acer x960 Smartphone is currently roaming, and the Exclude international GPRS/3G roaming is checked, you will need to uncheck it. <p>Notes:</p> <ol style="list-style-type: none">1. Try using Internet Explorer to connect to a website to verify your network connection.2. When the wireless signal is weak, the data connection may be unstable. Please try again later.

Specifications

Performance

- Samsung SC3 6410, 533 MHz
- System memory:
 - 128 MB of SDRAM (16 MB for modem use)
 - 256 MB of Flash ROM
- Microsoft® Windows Mobile™ 6.1 Professional

Display

- 2.8" VGA TFT touchscreen
- 640 x 480 resolution
- 65K color support
- Microsoft ClearType technology for clearer, crisper font display

Multimedia

- CD-quality stereo output
- Mini USB microphone output
- Mono speaker 0.5 W (max)
- Omni-directional microphone
- Formats supported

Type	Formats
Audio playback	WMA, MP3, WAV, AAC, AMR
Ringtone	SP-MIDI, MIDI, MMF, AMR, AWB, RMI, MP3, AAC
Video recording	3GP, MPEG-4, H.263, AVI, WMV

Specifications

Type	Formats
Video playback	3GP, MPEG-4, WMV, H.263, H.264

USB connector

- 10-pin mini USB connector
- USB Slave
- DC power-in (5 V, 1 A)

Connectivity

- Bluetooth® 2.0+EDR
- IEEE Wi-Fi 802.11 b/g WLAN
- GSM 850 / 900 / 1800 / 1900
- UMTS 2100 / 1900 / 850
- HSDPA / HSUPA / EDGE / GPRS

Camera

- VGA (300,000 pixel) for Video Telephony (front)
- 3.2 megapixel auto-focus (rear)

Expansion

- Micro SD memory card slot up to 8 GB

Battery

- High density, rechargeable 1530 mAh Lithium Polymer battery (changeable)
- Battery life:
 - Up to 4 hours 3G call talk time, with backlight off
 - Up to 6 hours 2G call talk time, with backlight off

Warnings and precautions

- Up to 5 hours of GPS usage
- Up to 15 hours of Pocket PC usage
- 245 hours standby time (WCDMA)
- 275 hours standby time (GSM)

NOTE: Length of battery operation will depend on power consumption which is based on system resource use. For example, constantly using the backlight or using power-demanding applications will shorten battery life between charges.

Design and ergonomics

- Stylish, light and robust design

Height	106.4 mm
Width	59 mm
Thickness	13.7 / 14.8 mm
Weight	131.5 g (including battery and stylus)

Warnings and precautions

- Do not use this product near water.
- Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.
- Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or

Warnings and precautions

other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.

- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product.
- To avoid damage of internal components and to prevent battery leakage, do not place the product on a vibrating surface.
- Never use this product when engaging in sporting activities, exercising, or in any vibrating environment which may cause a short circuit or damage, and even a risk of explosion from the battery pack.

CAUTION when listening to music

To protect your hearing, follow these instructions.

- Increase the volume gradually until you can hear clearly and comfortably.
- Do not increase the volume level after your ears have adjusted.
- Do not listen to music at high volumes for extended periods.
- Do not increase the volume to block out noisy surroundings.
- Decrease the volume if you can't hear people speaking near you.

Battery information

Warnings and precautions

This product uses a Lithium Polymer battery. Do not use it in a humid, wet and/or corrosive environment. Do not put, store or leave your product in or near a heat source, in a high temperature location, in strong direct sunlight, in a microwave oven or in a pressurized container, and do not expose it to temperatures over 60 °C (140 °F). Failure to follow these guidelines may cause the battery to leak acid, become hot, explode or ignite and cause injury and/or damage. Do not pierce, open or disassemble the battery. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. For safety reasons, and to prolong the lifetime of the battery, charging will not occur at low (below 0 °C/32 °F) or high (over 40 °C/104 °F) temperatures.

The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery. Use only Acer approved batteries, and recharge your battery only with Acer approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to the ac charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes

Warnings and precautions

direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15 °C and 25 °C (59 °F and 77 °F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Replacing the battery pack

Acer x960 Smartphone uses lithium batteries. Replace the battery with the same type as that which came bundled with your product. Use of another battery may present a risk of fire or explosion.

Warning! Batteries may explode if not handled properly. Do not disassemble or dispose of them in fire. Keep them away from children. Follow local regulations when disposing of used batteries.

Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Operating environment

Warning! For safety reasons, turn off all wireless or radio transmitting devices when using your Acer x960 Smartphone device under the following conditions. These devices may include, but are not limited to: wireless LAN (WLAN), Bluetooth and/or 3G.

Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used normally, and it and its antenna are positioned at least 1.5 cm (5/8") away from your body. Do not cover the antenna with metal and you should position the device at the above-stated distance from your body. To successfully transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure that the above separation distance instructions are followed until the transmission is completed. Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with hearing aids should not hold the device to the ear with the hearing aid. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have

Warnings and precautions

any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF transmissions.

Pacemakers. Pacemaker manufacturers recommend that a minimum separation of 15.3 cm (6") be maintained between wireless devices and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should do the following:

- Always keep the device more than 15.3 cm (6") from the pacemaker.
- Not carry the device near your pacemaker when the device is switched on. If you suspect interference, switch off your device, and move it.

Hearing aids. Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added. Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless equipment in

your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed, and the air bag inflates, serious injury could result. Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Potentially explosive environments



Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmospheres are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

Follow any restrictions. Do not use the device where blasting is in progress.

Emergency calls

Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the device.
2. Press  as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press .

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

Disposal and recycling information

Do not throw this electronic device into the trash when discarding.

To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, visit

<http://www.acer-group.com/public/Sustainability/sustainability01.htm>



Mercury advisory

For projectors or electronic products containing an LCD/CRT monitor or display:

Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at www.eiae.org. For lamp-specific disposal information, check www.lamprecycle.org.



Taking care of your Acer x960

1. **DO** take care not to scratch the screen of your Acer x960 Smartphone. Keep the screen clean. When working with

your Acer x960 Smartphone, use the supplied stylus or plastic-tipped pens intended for use with touch-sensitive screens. Never use an actual pen or pencil or other sharp object on the screen surface.

2. **DO NOT** expose your Acer x960 Smartphone to rain or moisture. Do not let water enter the circuitry through the front panel buttons or expansion slots. In general, treat your Acer x960 Smartphone as you would a mobile phone or other small electronic device.
3. **DO** be careful not to drop your Acer x960 Smartphone or subject it to any strong impact. Do not place your Acer x960 Smartphone in your back pocket.
4. **DO NOT** expose your Acer x960 Smartphone to extreme temperatures. For example, do not leave your Acer x960 Smartphone on the dashboard of a car on a hot day or when temperatures are below freezing point. Also, keep it away from heaters and other sources of heat.
5. **DO NOT** use or store your Acer x960 Smartphone in any location that is dusty, damp or wet.
6. **DO** use a soft, damp cloth to clean your Acer x960 Smartphone. If the surface of the screen becomes soiled, clean it with a soft cloth moistened with diluted window-cleaning solution.
7. **DO NOT** press down on the screen with force, otherwise you may crack the screen.
8. **DO NOT** apply excessive force to the 5 way joystick otherwise it will break. This applies especially when your Acer x960 Smartphone is face down on a flat surface, during installation of the battery or SIM card.

Safety regulations

Declaration of Conformity for EU countries

Hereby, Acer, declares that this Smartphone series is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Compliant with Russian regulatory certification:



LCD pixel statement

The LCD unit is produced with high-precision manufacturing techniques. Nevertheless, some pixels may occasionally misfire or appear as black or red dots. This has no effect on the recorded image and does not constitute a malfunction.

Radio device regulatory notice

Note: Regulatory information below is for models with wireless LAN and/or Bluetooth only.

General

This product complies with the radio frequency and safety standards of any country or region in which it has been approved for wireless use. Depending on configuration, this product may or may not contain wireless radio devices (such as wireless LAN and/or Bluetooth modules). Information below is for products with such devices.

Certificate Information (SAR)

Safety regulations

This device meets the EU requirements (1999/519/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The limits are part of extensive recommendations for the protection of the general public. These recommendations have been developed and checked by independent scientific organizations through regular and thorough evaluations of scientific studies. To guarantee the safety of all persons, regardless of age and health, the limits include a significant safety buffer.

Before radio devices can be put in circulation, their agreement with European laws or limits must be confirmed; only then may the CE symbol be applied.

The unit of measurement for the European Council's recommended limit for mobile telephones is the "Specific Absorption Rate" (SAR). This SAR limit is 2.0 W/kg, averaged over 10 g of body tissue. It meets the requirements of the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and was included in the European Standard EN 50360 for mobile radio devices. The SAR regulation for mobile telephones is in line with European Standard EN 62209-1. The maximum SAR value is calculated at the highest output level in all frequency bands of the mobile telephone. During use, the actual SAR level is usually much lower than the maximum value, because the mobile telephone works in different output levels. It only transmits with as much output as is required to reach the network. In general the following applies: The closer you are to a base station, the lower the transmission output of your mobile telephone. The highest SAR value for this device, measured in accordance with the standard, is 1.32 W/kg.

Acer Incorporated
8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih, Taipei Hsien 221, Taiwan



Declaration of Conformity

We, Acer Incorporated

8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih, Taipei Hsien 221, Taiwan

Contact Person: Ms. Harriot S. L. Lee

Tel: 886-2-6606-3131 ext 3811 Fax: 886-2-6606-5353

E-mail: Harriot_Lee@acer.com.tw

Hereby declare that:

Product:	Pocket PC Smart Phone
Trade Name:	Acer
Model Number:	X960

is compliant with the essential requirements and other relevant provisions of the following EC directives, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue comply with the requirements.

R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standard:

● **Article 3.1(a) Health and Safety**

- EN60950-1:2001 + A11:2004
- EN62209-1:2006
- EN50360:2001
- EN50332-1: 2000

● **Article 3.1(b) EMC**

- EN301 489-1 V1.6.1
- EN301 489-7 V1.3.1
- EN301 489-17 V1.3.2
- EN301 489-24 V1.4.1
- EN55022:2006 Class B


- EN55024 : 1998 / A1:2001 / A2: 2003

● **Article 3.2 Spectrum Usages**

- EN300 328 V1.7.1
- EN301 511 V9.0.2
- EN301 908-1 V3.2.1
- EN301 908-2 V3.2.1
- EN300 440-1 V1.4.1
- EN300 440-2 V1.2.1

RoHS Directive 2002/95/EC on the Restriction of the Use of certain Hazardous Substances in Electrical and Electronic Equipment

Year to begin affixing CE marking 2008.

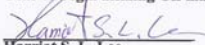
Harriot S. L. Lee
Regulation Center, Acer Inc.

Feb. 13, 2009
Date

A

- ActiveSync
 - synchronizing 67
- application buttons 30

B

- backlight settings 70
- battery
 - charging 11
 - information 89
 - installing 10
- Bluetooth
 - connections 59
 - headset 77
 - sending contacts 65
 - settings 56

C

- calendar 67
- call barring 61
- call forwarding 61
- call history 19
 - dialing a call history number 19
 - options 28
- call waiting 61
- caller ID 61
- calls
 - answering 24
 - ending 24
 - from other applications 20

- on-screen options 24
- putting on hold 24
- rejecting 24
- swapping between 25
- using the on-screen dial pad 19

camera

- editing photo 51
- icons and indicators 47
- information 89
- shooting a video 49
- supported formats 50
- switching cameras in a video call 24
- taking a photo 49
- turning on and off 24

clock and alarms 71

connecting to a PC 66

connectivity 89

contacts

- adding and editing 63
- assigning ring tones 62
- deleting 65
- making calls to a contact 19
- moving to SIM card 64

D

- date and time
 - setting 44
- design 90
- display 88

Index

E

error messages 85

F

FAQs 85

features 1

flight mode 53, 57

G

GPRS 43, 56, 79

H

help

 menus 3

 sources 2

I

input options 32

input settings 32

international numbers 25

L

LED indicators 8, 12

lock

 keypad and display 84

M

microphone volume 71

MMS messages 35

N

naming 45

network

 selecting 56

O

on-screen dial pad 18

on-screen keyboard 31

P

password protection 84

performance 88

personalizing 44

phone

 connections 55

photos & videos

 editing 51

power management 57

profiles 62

R

regional settings 72

ring tones 62

S

safety regulations 90

screen options 73

SD card 83

 information 89

security options 84

SIM Card

 Entering PIN Code 13

 Installing 9

SIM card

 lock 84

SIM toolkit 66

- software
 - list 90
 - removing 72
- sounds and notifications 70
- speakerphone 26
- specifications 88
- Start menu 69
- status icons 43
- stylus 29
- system certificates 71

T

- tasks 67
- themes 45
- troubleshooting 85
- turning on 12

U

- unpacking 5
- USB connector 89

V

- video calls
 - the video call screen 22
- views
 - left 8
- Voice Call / Video Call Menu 22
- voice calls
 - the voice call screen 21
- volume
 - adjusting 69

W

- Windows Media Player 68
- wireless manager 53
- WLAN
 - connections 57
 - settings 57
- word completion 32