

## How to install BeOS 5.0 driver

1. RTL8029AS is ne2000 compatible PCI Interface, so the system will detect the driver and show "NE2000 Compatible PCI" on [/Pref/Network/Network Interfaces](#).
2. Enter the settings:
  - Like
    - IP address = 169.254.1.2
    - Subnet mask = 255.255.0.0
    - Gateway = xxx.xxx.xxx.xxx
  - Choose "Done", then choose "Save" (Restart Network).
3. Enter [/Application/Terminal](#) :
  - \$netstat
  - You will see the IP that you assign and other settings.
  - Ping yourself and other IP. If you can ping successfully, it means the network card can work normally.
4. If it still can't detect the card, please change another slot to try again.