


# Acer n50 Quick Guide

## Just for starters

NOTICE: For initial use, you need to charge your handheld for 4 hours.

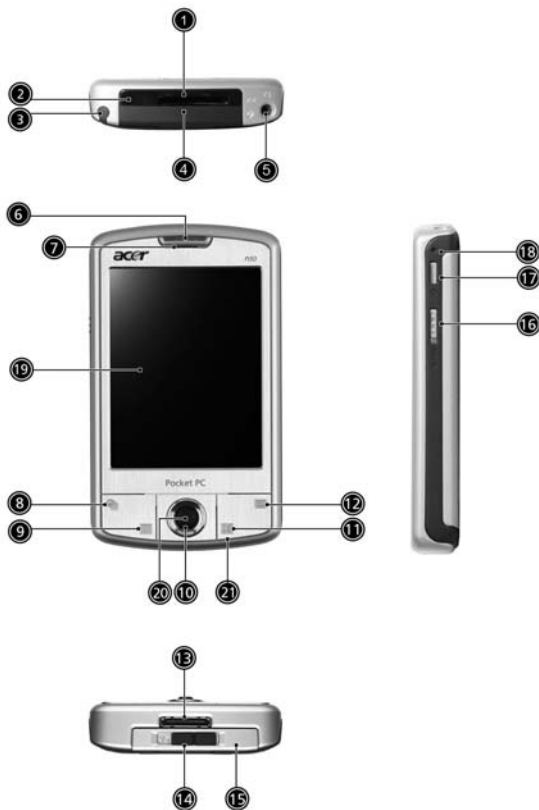


### CAUTION:

Before you set up and operate your device, read and follow the First things first in the User's Manual.

- 1) SD/MMC expansion slot with SDIO feature.
- 2) IrDA.
- 3) Stylus.
- 4) CF Type II expansion slot.
- 5) Earphone jack.
- 6) Status LEDs.
- 7) Auxiliary speaker.
- 8) Today button
- 9) Calendar button
- 10) 5-way directional pad.
- 11) Contacts button
- 12) Messaging button
- 13) 26-pin connector.

- 14) Battery latch.
  - 15) Removable battery.
  - 16) Hold switch
  - 17) Power button.
  - 18) Soft reset.
  - 19) 3.5" TFT LCD.
  - 20) Main speaker.
  - 21) Built-in microphone.
- 

## Charge the Battery First

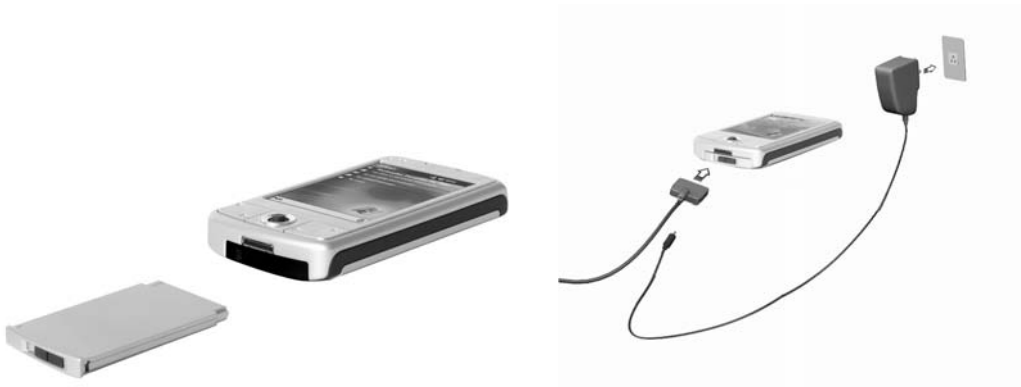


1. Install the battery.
  2. Connect the AC adapter and charge the device for at least 4 hours.
  3. After the battery is charged, press the power button on the left side. Follow the onscreen instructions to set up your handheld.
- 

## Install Microsoft<sup>®</sup> ActiveSync<sup>®</sup>



1. Exit any open programs, including those that run at startup, and disable any virus-scanning software.
2. Insert the Acer n50 Handheld Companion CD into the computer's CD-ROM drive. The CD's welcome page appears.
3. Click the animated forward icon to go to the next screen.
4. Click the Start Here tab on the right side of the screen.
5. Read the instructions and installation notes indicated on the Start Here screen.
6. Click the buttons on the left pane to install each of the individual applications.
  - Outlook 2002 (recommended)
  - ActiveSync® 3.x.x

After installation, the ActiveSync icon  will appear on your computer's system tray (on the lower right-hand corner of the screen).

Refer to the ActiveSync software online Help for information on how to use the software. If at any time, you would like to restart this setup program, simply re-insert the CD into the CD-ROM drive.

---

## Connecting the computer

Connecting the Sync cable



Connect the USB connector on the end of the sync cable to your computer.

OR

Connecting the cradle




Connect the USB connector on the end of the sync cable to your computer.

---

## Your guides

To help you use your Acer n50, we have designed a set of guides:

- Programs on your handheld — This Manual. Bundled in the Acer n50 Handheld Companion CD, it provides online reference for using your Acer n50. The Acer n50 Handheld Help. To view Help, tap  and then Help.
  - Additional programs that can be installed on your handheld — The Acer n50 Handheld Companion CD.
  - Connecting to and synchronizing with your computer — The Acer n50 Handheld Quick Guide. ActiveSync Help on your computer. To view Help, click Help and then Microsoft ActiveSync Help.
  - Last-minute updates and detailed technical information — The Read Me files. Located in the Microsoft ActiveSync folder on your computer and on the Acer n50 Handheld Companion CD.
  - Up-to-date information regarding your handheld — <http://www.acer.com>
  - Service Enquiries — <http://global.acer.com/support/index.htm>
-

# Environmental Policy Declaration

To minimize pollution and ensure utmost protection of the global environment, all applicable environmental regulatory requirements were met during the manufacture of this device.

The manufacturing facilities and management meet the requirements of the ISO 14001 Environmental Management System (EMS).

Do not throw this electronic device into the trash when discarding. To reduce the environmental impact of WEEE (Waste Electrical and Electronic Equipment) and minimize the volume of WEEE entering landfills, please reuse and recycle. Refer to [www.acer.com](http://www.acer.com) for further information regarding Acer's environmental protection practices.

Environmental Labels:



Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please reuse and recycle.



USA

For electronic products containing an LCD/CRT monitor or display:  
LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR  
DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS. FOR MORE  
INFORMATION, CONTACT THE ELECTRONIC INDUSTRIES ALLIANCE AT  
[WWW.EIAE.ORG](http://WWW.EIAE.ORG). FOR LAMP-SPECIFIC DISPOSAL INFORMATION, CHECK  
[WWW.LAMPRECYCLE.ORG](http://WWW.LAMPRECYCLE.ORG).