# Acer LCD TV AT2601W User's Guide

۲

۲

۲

Copyright © 2005. Acer Incorporated. All Rights Reserved.

Acer LCD TV AT2601W User's Guide Original Issue: June 2005


۲

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other company's product names or trademarks are used herein for identification purposes only and belong to their respective companies.

۲

۲



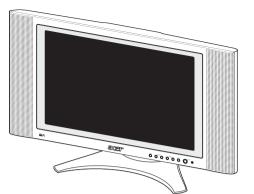

# Contents

Important safety instructions	5
Taking care of your remote control	6
Cleaning and servicing	6
Declaration of Environmental Protection Conformity	6
First things first	7
Basic features and benefits Packing Checklist	7 7
Your LCD TV overview	8
Front panel view Rear panel view Bottom view	8 9 9
Remote control	10
General Keys	11
Teletext keys	13
Card Reader keys	13
Basic connection	14
Connecting the power cord	14
Connecting an antenna	14
Connecting VCR/DVD/AV equipment with a SCART-SCART cable Connecting VCR/DVD/AV equipment with	15
a SCART-component/AV cable	15
Connecting a camera, camcorder, video game or headphones Connect your camera or camcorder to the Video/Audio ports on the bottom of the TV set as shown below.	16 16
Connecting a set-top box, DVD player or personal video recorder	16
Getting started watching your TV	17
Power On	17
Setup Wizard	17
Changing channels	17
Adjusting the volume	17
OSD Navigation	18
Navigating the OSD with Remote Control	18
Advanced Features	19
PIP/PBP/POP	19
Parental Control	19
Empowering Key: Scenario Mode and Favorite Channels	20
Card Reader	22
Card reader OSD navigation	23
Troubleshooting	24
Product specifications	25



## Important safety instructions

Read these instructions carefully. Save them for future reference.

- 1 Follow all warnings and instructions marked on the product.
- 2 Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 3 Do not use this product near water.



4 Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.



 $(\mathbf{\Phi})$ 

5 Slots and openings are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a builtin installation unless proper ventilation is provided.



- 6 This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- 7 Do not allow anything to rest on the power cord. Do not locate this product where persons will step on the cord.



۲

- 8 If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
- 9 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 10 Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
- 11 Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power cord or plug is damaged or frayed.
  - b. If liquid has been spilled into the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
  - e. If the product has been dropped or the case has been damaged.
  - f. If the product exhibits a distinct change in performance, indicating a need for service.
- 12 Use only the proper type of power supply cord set (provided in your accessories box) for this unit. Always disconnect the power cord from the wall outlet before servicing or disassembling this equipment.

(5)

#### Taking care of your remote control

Here are some ways to handle your remote control:

- Dropping, wetting or placing the remote control in the sunlight may cause damage. Handle the remote control with care.
- Do not tamper with batteries. Keep them away from children.
- When you anticipate that the remote control will not be used for an extended period, remove the batteries to prevent possible damage to the remote control in a result of battery leakage.
- Dispose of used batteries according to local regulations. Recycle if at all possible.

### Cleaning and servicing

When cleaning your LCD TV, follow these steps:

- 1 Power off the TV.
- 2 Disconnect the power cord.
- 3 Use a soft cloth moistened with water. Do not use liquid or aerosol cleaners.

#### **Declaration of Environmental Protection Conformity**

- 1. This product was produced in compliance with strict global environmental regulations regarding pollution levels.
- 2. The manufacturer of this product is ISO 14001 certified.
- 3. Do not dispose of this product after use. Please recycle in accordance to your country's regulations.
- 4. LAMP (S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF AC-CORDING TO LOCAL, STATE OR FEDERAL LAWS. FOR MORE INFORMATION, CONTACT THE ELECTRON-IC INDUSTRIES ALLIANCE AT WWW.EIAE.ORG. FOR LAMP SPECIFIC DISPOSAL INFORMATION CHECK WWW.LAMPRECYCLE.ORG.
- 5. Please visit the Acer website (http://www.acer.com) for more environmental protection information.

۲

( )

## First things first

We would like to thank you for making the Acer AT2601W your choice. Your new Acer TV will provide you with years of entertainment, versatility, and satisfaction.


This User's guide introduces you to the various features your LCD TV can offer, and provides clear and concise information about the product, so please read it thoroughly and retain it for future reference.

#### Basic features and benefits

- Wide Display with 1280x768 Resolution and HDMI HDTV Ready Display
- Simultaneous Pre-Viewing of Programs with 4 different Picture-In-Picture Modes
- Excellent Sound Enhancement with SRS WOW Technology
- Enjoy Digital Images with a 6-in-1 Card Reader
- Elegant Remote Control
- Brilliant Color with Gamma Correction
- Sharp and Accurate Image with De-interlacing and Comb Filter

#### **Packing Checklist**

Your LCD TV package should contain the following accessories, in addition to the accessory box. Please ensure that they are all present.

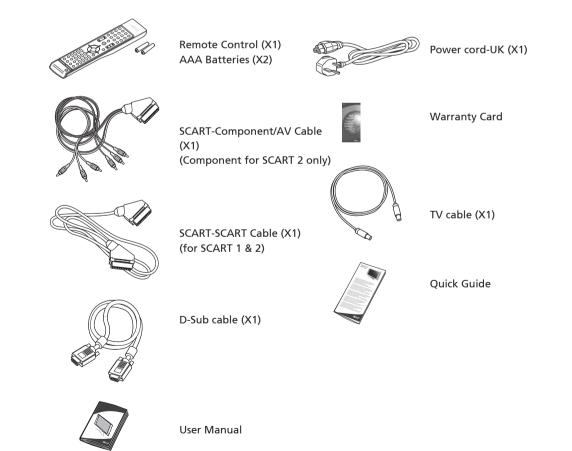


English

(7)

# Your LCD TV overview


## Front panel view

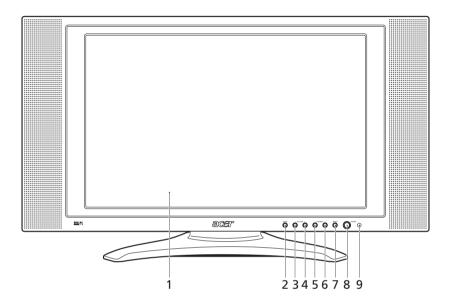


#	ltem	Description
1	LCD Screen	
2	Input	Select source. When OSD is on: Press this button to confirm selection
3	Vol Down	Volume Down. When OSD is on: Also functions the same as Left directional arrow
4	Vol Up	Volume Up. When OSD is on: Also functions the same as Right directional arrow
5	Channel Down	Channel Down. When OSD is on: Also functions the same as Down directional arrow
6	Channel Up	Channel Up. When OSD is on: Also functions the same as Up directional arrow
7	Menu	Turn OSD menu ON/OFF
8	Power	Power ON/OFF
9	Remote Control Window	Infrared Sensor (Do not block)



### Rear panel view

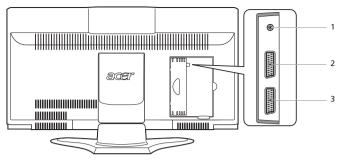

#	ltem	Description
1	RF Connector (TV Tuner) Input	Connects to the antenna or cable service
2	AV1/SCART 1 In	Supports external VCR, DVD player with the SCART cable (for RGB, S-Video, CVBS, Audio left/right input)
	AV1/SCART 1 Out	In TV mode, connect your VCR In or PVR In with the SCART cable to record TV programs
3	AV2/SCART 2 In	Supports external VCR, DVD player with the SCART cable (for RGB, S-Video, CVBS, YPbPr/YCbCr, Audio left/right input) Component (YPbPr/YCbCr) for SCART 2 only
	AV2/SCART 2 Out	In TV mode, connect your VCR In or PVR In with the SCART cable to record TV programs

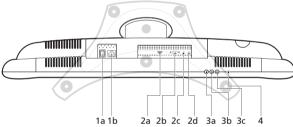

#### Bottom view

۲


#	ltem	Description
 1a	AC Switch	Turns AC In power ON/OFF
1b	AC In	Connects to a power source
2a	HDMI In	Connects to the HDMI out which supports digital video and audio format
2b	D-Sub In	Connects to PC VGA Out
2c	Audio In	Connects to the audio output of your PC or other devices
2d	Audio Out	Connects to another speaker
3a/b	o AV3/Audio In (R/L)	Connects to the audio output(R/L) of your camera, camcorder or video game
	AV3/Audio Out (R/L)	In TV mode, connect the audio(R/L) input of your VCR or PVR to record TV programs (Please set AV3 to "Out" in OSD)
3c	AV3/Video In	Connects to the composite output of your camera, camcorder or video game
	AV3/Video Out	In TV mode, connects to the composite input of your VCR or PVR to record TV programs (Please set AV3 to "Out" in OSD)
4	Headphone	Connects to the headphones

۲

۲

### **Remote control**

۲

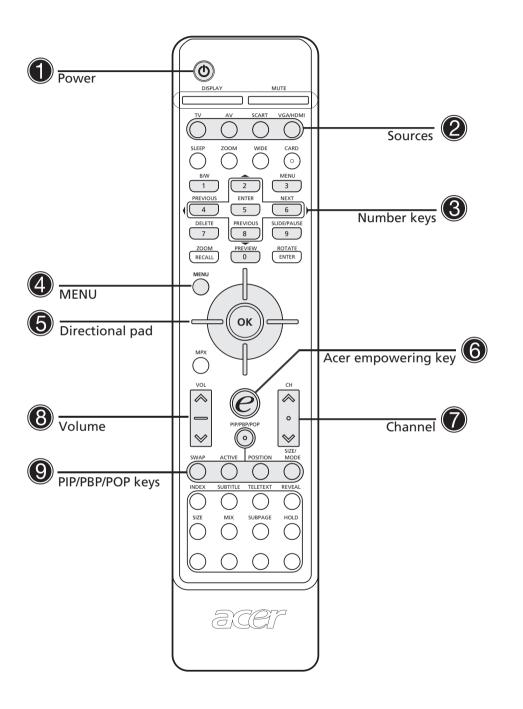

۲

۲

## General Keys


۲

	Item	Description
1	Power button	Press to turn TV on/off.
	DISPLAY	Displays channel number and input source on the upper right-hand corner of the screen.
	MUTE	Press once to mute the sound; press again to restore.
Г	TV	Press to select TV mode.
	AV	Press to select AV3 mode.
	SCART	Press to select SCART1/SCART2 mode.
	VGA/HDMI	Press to select sources between VGA and HDMI
	SLEEP	Set a time period after which the TV should switch itself to standby. Press repeatedly to select the number of minutes.
	WIDE	Press to switch scaling mode between 4:3, 16:9, Panorama and Letterbox
	ZOOM	Press repeatedly to switch image between
		Normal Zoom1 (1.85:1) Zoom 2 (2.35:1)
8	Number keys	Number keys from 0-9.
	ENTER	Press to confirm channel selections by the number keys.
	RECALL	Press to return to the previous channel.
4	MENU	Press to open Menu or leave Menu.
6	4-way scroll key/OK	When OSD is on: Navigate up, down, left and right in the OSD menu / press OK to confirm
	MPX	Press to select the sound system, displayed at the top right-hand corner.
6	e	Acer empowering key for Favorite Channel, Scenario Mode. See page 20.
7	CH (up/down)	Press these buttons to select the TV channel in sequence.
8	VOL (up/down)	Press these buttons to increase and decrease the volume.
Г	PIP/PBP/POP	Switch between PIP/PBP/POP modes. See page 19.
	SWAP	When in PIP/ POP mode: Swap primary and sub screen in toggle.
9	ACTIVE	When in POP mode: Toggle the active screen.
	POSITION	When in PIP mode: Change position of subscreen
	SIZE/MODE	When in PIP mode: Change subscreen size 25%, 37.5%, 50% When in POP mode: Switch POP mode between 1+5 and 1+12

۲

۲

English

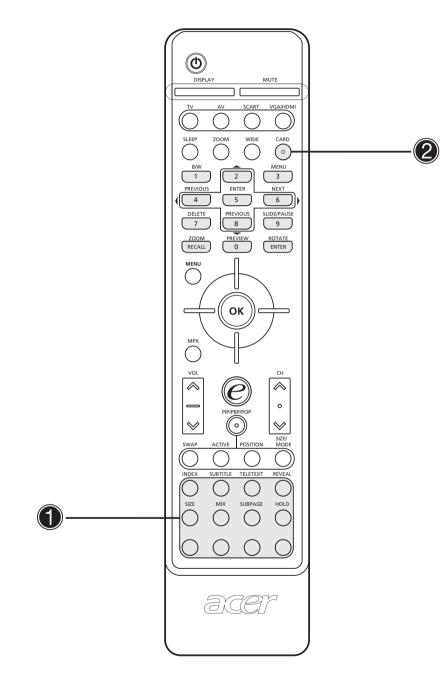

English

(12)

## Teletext keys

Item	Description
	Go to index page
SUBTITLE	Show subtitle on the screen
TELETEXT	Press to switch from TV/AV to Teletext mode.
REVEAL	Press to reveal hidden teletext information.
SIZE	Press once to zoom teletext page to 2X; press again to resume.
MIX	Press to overlay teletext page on the TV image, i.e. subtitle.
HOLD	Press to pause the current teletext page in multi-page viewing mode.
Color buttons (R/G/Y/B)	Operates corresponding button on the teletext page.

۲

## Card Reader keys

	Item	Description
	Card	Enable the card reader keys function
	B/W(black/white)	Invert the displayed color picture to black and white. To revert to the original color, please press the button again
	Menu	Turn the card reader OSD menu on while getting into the picture mode
	Previous	Show previous photo
	Enter	Press to access OSD menu selection in preview mode or go back to original size in zoom mode
		Press to confirm or cancel the deletion
	Next	Show next photo
	Delete	Permanently removes the currently displayed picture from the memo ry card. A confirmation question will appear.
0	Slide/Pause	Press to enter the slide show mode. Pictures will be displayed one by one automatically. Press again to pause the slide show mode
	Zoom	Zoom in on the displayed picture. After pressing the button a sixth time, the displayed picture will revert to its original size
	Preview	Enter into preview mode, and display 8 thumbnail pictures.
	Rotate	Rotates the displayed picture clockwise by 90 degrees each time
	Up Arrow	Navigate up in the preview mode, zoom mode, review mode and card reader OSD selection
	Down Arrow	Navigate down in preview mode, zoom mode, and card reader OSD selection
	Left Arrow	Navigate left in preview mode, zoom mode, and card reader OSD selection
	Right Arrow	Navigate right in preview mode or in zoom mode, review mode and card reader OSD selection

۲

6

۲

Menu key is disabled when using Preview mode.


English

## **Basic connection**

۲

#### Connecting the power cord

- 1 Connect the AC cord into the AC input on the back of the set.
- 2 Connect the male plug to the wall outlet as shown.

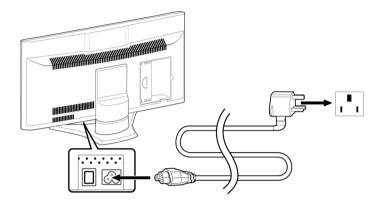


۲

#### Connecting an antenna

Connect the outdoor antenna cable lead-in to the antenna terminal on the back of the TV set as shown.

۲

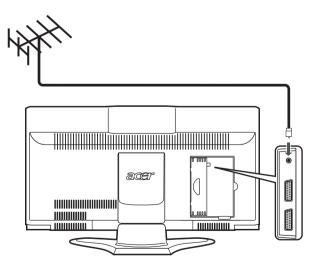


۲

(14)

# Connecting VCR/DVD/AV equipment with a SCART-SCART cable

۲


Connect SCART-SCART cable as shown below.

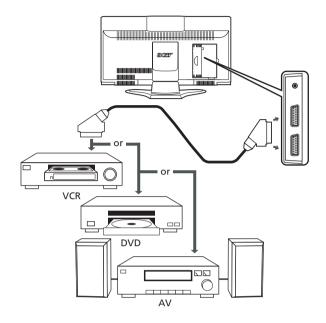

#### Connecting VCR/DVD/AV equipment with a SCARTcomponent/AV cable

Connect SCART-component/AV cable to SCART2 port as shown below.


۲

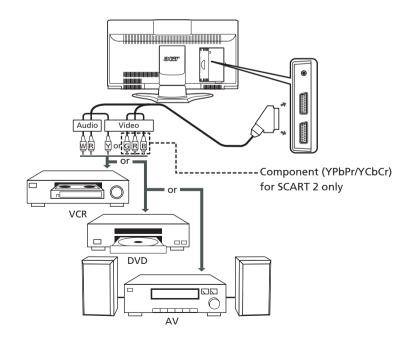

۲

#### Connecting a camera, camcorder, video game or headphones


Connect your camera or camcorder to the Video/Audio ports on the bottom of the TV set as shown below.

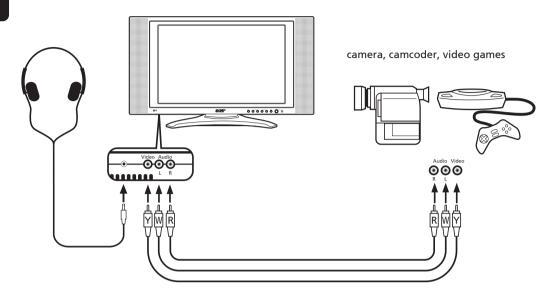

# Connecting a set-top box, DVD player or personal video recorder

Connect your set-top box, DVD player, or personal video recorder to the HDMI port on the bottom of your LCD TV as shown below.

۲

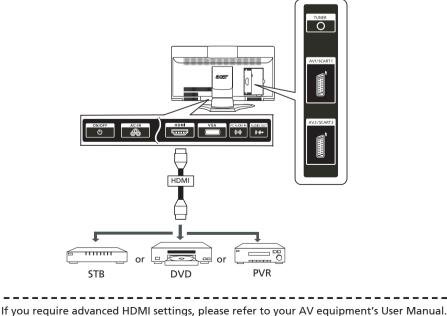

۲

۲


(16)

## Getting started watching your TV

۲


#### Power On

- a. Turn on power switch on bottom of TV.
- b. Press the power button, number keys or channel up/down button on remote control

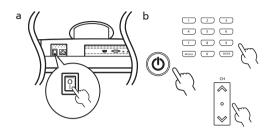

#### Changing channels

 1 Press 0-9 on the remote control to select a channel. The channel changes after 2 seconds. Press ENTER to select the channel immediately.



2 You can also change the channels by pressing and holding the Channel Up/Down button on the remote control. Up will increase the number, while down will decrease the number.

#### Setup Wizard

( )

The first time you power on the TV, the setup wizard will guide you to complete the "language selection" and "channel scanning" setp by step.

Step 1. Please plug in the tuner coaxial cable and then press "OK" key

Step 2. Auto Scanning, please wait Setup completed



#### Adjusting the volume

Adjust the volume using the VOL +/- button on the remote control. Up will increase the volume, while down will decrease the volume.






ß

۲

You can also adjust these settings using the front control panel. Please see "Front panel view" on page 8 for details.

## **OSD** Navigation

Many of the advanced settings and adjustments are available through using the OSD (on screen display) menus, as shown in the example screenshot below.

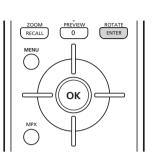

acer					
Picture Au	dio	Setting	Optio	n E	mpowering
	( <b>)</b> )	<b>*</b>			Ø
USER					
Brightness		[80]	0		100
Contrast		[50]			
Colour		[50]		_ <b>U</b>	100
Sharpness		[50]		<b>U</b>	
Colour Temp					[Cold]
Reset Picture					
♦ Move	ок	Enter	M	NU Bacl	< / Exit

( )

Basic operations required to navigate these menus (Picture, Audio, Settings, Options, Empowering) are described in this section. The first time you access the OSD, you will be asked to choose your language settings.



(18)

( )

You can also interact with these menus using the front panel controls. Please see "Front panel view" on page 8 for details.


#### Navigating the OSD with Remote Control

 There are five main OSD menus. These are: Picture 😥 Audio 🔍, Settings 👾, Options 🛐 and Empowering 🍘 . Use the following method to easily navigate these menus.

1 Press the" Menu" button on the remote control or the" Menu" button on the control panel.




2 Select your desired menu by using the Left/Right sides of the directional pad to switch between the five menus.




3 Use the directional pad to interact with the menu. The Up/Down directions will scroll through the menu options, while Left/Right will adjust the different settings (for exmample, in the Picture menu, settings such as brightness, contrast, etc). If there are no adjustments, press Enter to select.

# Advanced Features
 
#### PIP/PBP/POP



 In TV, AV, SCART and VGA/HDMI mode, press PIP/ PBP/POP button once to display the picture in picture (PIP). Press twice to display picture by picture (PBP).



In SCART(YPbPr/YCbCr) and VGA, HDMI mode, press PIP/PBP/POP button three times to display picture on picture (POP). Then, the POP screens will display the TV channel programs one by one.




POP (Picture on Picture)

#### PIP

 ( )

- Press the "TV-SCART-AV-VGA/HDMI" keys, number keys or "CH up/down" key to change the content of the PIP screen.
- 2. Press' Swap'' key to change the content between the primary and the PIP screen.



 Press" Position" key to select the location of the subscreens, from Upper Left -> Upper Right -> Lower Right -> Lower Left, as shown in the image.



 Press the "Size/Mode" key to change the size of the PIP screen between 25%, 37.5%, 50%



#### PBP

- Press the "TV-SCART-AV-VGA/HDMI" keys, number keys or "CH up/down" key to change the content of the PBP screen.
- 2. Press" Swap" key to change the content between the primary and the PBP screen.



#### POP

۲

- 1. Press" Activate" key to activate the TV channel on the top-left POP screen.
- Press the number keys or "CH up/down" key to change the TV channel of the top-left POP screen. Then, press the "activate" key again. The other POP screens will show the following channels in sequence.
- Press the "Size/Mode" key to access the 1 + 5 or 1+12 picture on picture mode as shown in the image below.

OP	POP	POP	POP	POP	POP	PC
		POP	POP			PC
		POP	POP			PO
		POP	POP	POP	POP	PO

#### Parental Control

When in TV mode, you can find a Parental Control feature in the Options menu. Enter a four-digit PIN number using the number keys on your remote control. Use this number to adjust the Parental Control settings, to prevent access to certain channels.

If you forget your PIN number, please enter 6163 to reset.




(19)

#### 

#### Empowering Key: Scenario Mode and Favorite Channels

۲

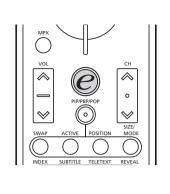

acer			
Picture Audio		Option	Empowering
	<b>Ø</b>	¥.	e
e Key Setting		[Sc	enario Mode]
Favorite Channel			
Scenario Mode			[Standard]
Reset Empowering			
♦ Move OK	Enter	MENU	Back / Exit

( )

Use the OSD to define your "e" Empowering key setting: Scenario mode and Favorite channel. The default value for the "e" key is the Scenario mode. Use the following method: Menu -> Empowering -> e Key Setting. Choose between "Favorite channel" or "Scenario Mode". Now, when you press the "e" key, your chosen selection will be accessed.

#### Scenario Mode

Press the "e" Empowering key and use the Scenario Mode to select pre-defined audio and video settings for optimal enjoyment of the following scenarios: Standard, Movie, Sport, Concert, Game, User.

Mode	Scenario Mode Design Direction
Standard	Standard mode allows you to watch your favourite channels with sharp, brilliant imagery via adaptive brightness and contrast adjustments. Clear-sounding audio is provided by SRS performance.
Movie	For comfortably enjoying movies at home, Movie mode displays dim scenes in clear detail; compensates for colour; and smoothly presents motion images. This is accomplished through optimal Gamma correction plus saturation, brightness and contrast adjustments. Movie mode makes the most of high-definition movie soundtracks by using SRS WOW technology.
Game	Game mode carefully details the exquisite graphics of modern video games, pro- viding lifelike entertainment while protecting your eyesight by adjusting bright- ness and contrast. What's more, Game mode provides a heightened audio experi- ence via SRS WOW technology.
Sports	Sports mode is suited for outdoor sports programmes, with accurate background depth and clear gradation between the bright, outdoor playing field and darker auditoriums. Sports mode also brilliantly enhances colours and presents swiftly moving pictures without residual images. All of this is achieved via specific Gamma corrections and saturation adjustments. Precise audio can be heard, thanks to Tru- Bass performance.
Concert	Concert mode places you in a virtual concert hall, opera house or other dim envi- ronment by means of adaptive brightness and contrast adjustments. Concert mode accentuates symphonic harmonies and the tenor audio range using SRS WOW technology.

English


#### Favorite Channels

Please note that Scenario mode is the default value for the "e" Empowering key. In order to make use of the following instructions, please set Favorite channel as the default using the method described on the previous page.

#### Storing favorite channels

For quick access to your favorite channels, use the following method:

- To store a channel in memory for quick access, select your desired channel, then press and hold the " e" Empowering key on the remote control for more than 2 seconds. This will store the TV program information at the bottom of the favorite list.
- There are a total of five slots in which you can store TV programs.
- If there is no empty slot in the favorite list, the first program will be wiped out and the new TV program is added at the bottom of the favorite list. Simply put, it's" First in, first out".
- When the current program is stored in the favorite list, pressing the" e" key for more than 2 seconds will remove the program from the favorite list.
- To view currently stored favorite channels, press the" e" Empowering key. You will see a screen similar to the one shown below.

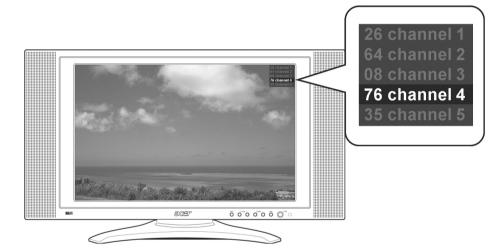

#### Viewing your favorite channels


( )

 On the remote control, if you press the "e" Empowering key for less than 1 second, the favorite channel table will pop up. Your currently selected favorite channel will be highlighted. To view your other favorite channels, press the "e" Empowering key again to toggle the TV programs sequentially according to your favorite list.

(21)

#### Card Reader

The 6 in 1 card reader module gives you the additional capacity of being able to display high quality digital photos stored on popular flash memory medias, and viewing them in style on your Acer LCD TV. The card reader is accessed from the top of your LCD TV, and is shown in the picture below.

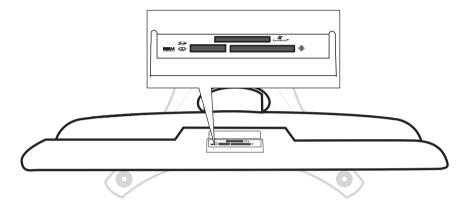

( )

Acer LCD TV card reader features available with the card reader module are listed below:

- Support for the most popular flash memory cards:
  - Compact Flash (CF) Type 1/2: 8MB~1GB;
  - IBM MicroDriveTM: 340MB and 1GB;
  - SmartMedia (SM): 8MB~128MB;
  - Secure Digital (SD): 16MB~512MB;
  - MultiMedia Card (MMC): 32MB~256MB;
  - Memory Stick (MS)/Memory Stick Duo/Memory Stick Pro: 8MB~512MB;

۲

- Supports progressive RGB output at 1024 x 768 @60Hz.
- Supports multiple transition effects.
- Supports thumbnail picture preview of 2x4 pictures.
- Supports four types of picture rotation: 0°,90°,180° and 270°.
- Supports slideshow function



(22)

MicroDrive™ is a registered trademark of IBM, Inc


#### Card reader OSD navigation

The card reader included with the Acer LCD TV provides a setup menu for you to customize the display mode or change the language of on-screen information, etc. To call up the menu, you need to insert a memory card first.

۲

Menu Item	Description
Card Sources	Selects the memory card whose pictures you want to view if more than one type of memory card has been inserted
Photo Information	Displays or hides the information of pictures, such as resolution, num- ber, date and time.
Slide Delay	Sets the interval timing between each picture when the SLIDE SHOW function is activated.
Display Mode	Displays the picture in full screen or maintains its original aspect ratio.
Transition Mode	Sets the transition effect of loading pictures.
Language	Changes the language of displayed information and setup menu

You can navigate the card reader OSD with Remote Control to customize your settings.

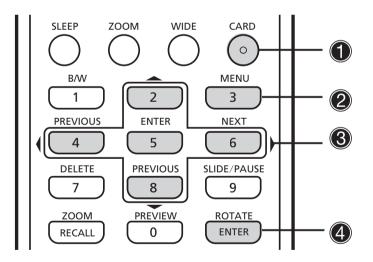

- Press' Card' key to enable the card reader keys function
- Press' Menu" key to Turn the card reader OSD menu on while getting into the picture mode

۲

- Press' Up/Down/Left/Right Arrow' to navigate your selection in card reader OSD
- Press' Enter" to access OSD menu selection

۲

Menu key is disabled when using Preview mode.

\_ \_ \_ \_ \_ \_ \_ \_ \_

۲

(23)

## Troubleshooting

Before you call the Acer service center, please check the following items: The following is a list of possible situations that may arise during the use of your LCD TV. Easy answers and solutions are provided for each one.

#### There is no picture or sound.

- Make sure the power cord is properly inserted in the power outlet.
- Make sure the input mode is correctly set by your selected input.
- Make sure the antenna at the rear of the TV is properly connected.
- Make sure the main power switch is turned on.
- Make sure the volume is not set to minimum or the sound is not set to mute.
- Make sure the headphones are not connected.
- Reception other than those of broadcasting stations can be considered.

#### Picture is not clear.

- Make sure the antenna cable is properly connected.
- Consider whether TV signals are being properly received.
- Poor picture quality can occur due to A-VHS camera or camcorder and other peripheral connections at the same time. Switch off one of the other peripheral.
- The 'ghost' or double image may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture quality.
- The horizontal dotted lines shown on the pictures may be caused by electrical interference, e.g. hair dryer, nearby neon lights and etc. Turn off or remove these equipment.

#### Picture is too dark, too light or tinted.

- Check the color adjustment.
- Check the brightness setting.
- Check the sharpness function.

24

• Fluorescent lamp may have reached the end of service life.

#### Remote control does not work.

- Check the batteries of the remote control.
- Make sure the remote sensor window is not under strong fluorescent lighting.
- Try to clean the remote control sensor lens on the TV with a soft cloth.
- Use the buttons (hot keys) on the TV before the remote control works.

If the above items do not solve your technical issue, please refer to the warranty card for service information.

# **Product specifications**

	Item	Specification
Panel spec	Resolution	1280 x 768
Mechanical	Dimensions(WxHxD mm)	828 x 484 x 248
	Swivel angle	-20~+20
	Weight (kg)/(lb)	14/30
	Wall mounting	Yes (mounting kit not included)
TV system	Destination	Europe
	Color system	PAL/SECAM
	Sound system	B/G/D/K/I/L
	Stereo system	NICAM/FM stereo (A2)
Terminal	Destination	Europe
	AV1/SCART1	SCART (CVBS,RGB,S-Video,Audio R/L)
	AV2/SCART2	SCART (CVBS,RGB,S-Video,YPbPr/YCbCr,Audio R/L)
	AV3	CVBS,Audio R/L
	PC D-sub	YES
	HDMI	YES
	PC audio in	YES
	Card Reader	CFI/II/SM/MS/SD/MMC/MS Pro
Audio system	3D surround	YES
	Speaker	5W+5W
	SRS	WOW
Power supply	Max. power consumption	150W

Note: Acer Inc. reserves the right to make any modification to this guide or the information contained herein at any time without notice.

English