

**TravelMate 510 Series  
Notebook Computer**

**User's Guide**

Copyright © 1999 Acer Incorporated  
All Rights Reserved — Printed in Taiwan

TravelMate 510 Series Notebook Computer User's Guide  
Part No.: 49.45C01.041  
Original Issue: January 1999

Changes may be made periodically to the information in this publication without obligation to notify any person of such revision or changes. Such changes will be incorporated in new editions of this manual. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the serial number, purchase date, and model number in the space provided below. The serial number and model number are recorded on the label affixed to the underside of the computer. All correspondence concerning your unit should include the serial number, model number, and date of purchase.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopy, recording, or otherwise, without the prior written permission of Acer Incorporated.

**TravelMate Notebook Computer**

Model \_\_\_\_\_ Serial No. \_\_\_\_\_

Purchase Date \_\_\_\_\_

TravelMate is a trademark and a product of Acer Inc., developed with Texas Instruments Inc. All other trademarks and registered trademarks are the property of their respective companies. Microsoft, MS-DOS, and Windows are registered trademarks of Microsoft Corporation.

## *Table of Contents*

Notices.....	v
Preface .....	xv
Connecting the Computer.....	xvi
Getting Help Online .....	xviii
Support Information.....	xix
Care and Maintenance .....	xx
Chapter 1 Getting Familiar with your Computer .....	1
Features.....	3
Display.....	5
Indicators.....	7
Keyboard .....	9
Touchpad .....	17
Storage.....	19
Ports.....	21
Audio .....	28
Securing your Computer.....	31
Chapter 2 Operating on Battery Power .....	33
Battery Pack.....	34
Power Management.....	40
Chapter 3 Peripherals and Options .....	45
External Monitor.....	46
External Keyboard .....	48
External Keypad .....	49
External Pointing Device.....	50
Printer .....	52
Audio Devices.....	53
Port Replicator .....	54
PC Cards .....	55
USB Devices.....	56
Miscellaneous Options .....	57
Key Component Upgrades.....	59
Chapter 4 Moving with your Computer .....	63
Disconnecting from the Desktop.....	64
Moving Around .....	65
Taking the Computer Home .....	66
Traveling with the Computer.....	68

***Table of Contents***

Traveling Internationally with the Computer . . . . .	69
<b>Chapter 5 Software . . . . .</b>	<b>71</b>
System Software . . . . .	72
Sleep Manager. . . . .	73
Notebook Manager . . . . .	80
BIOS Utility. . . . .	91
<b>Chapter 6 Troubleshooting . . . . .</b>	<b>107</b>
Frequently-Asked Questions . . . . .	108
Error Messages . . . . .	113
Troubleshooting Tips. . . . .	116
Online Services . . . . .	117
<b>Appendix A Specifications. . . . .</b>	<b>119</b>

## Notices

### FCC Notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna
2. Increase the separation between the device and receiver
3. Connect the device into an outlet on a circuit different from that to which the receiver is connected
4. Consult the dealer or an experienced radio/television technician for help

*Notice: Shield Cables*

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

*Notice: Peripheral Devices*

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

## Notices

### *Caution*

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this computer.

### *Use Conditions*

This part complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### *Notice: Canadian Users*

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

### *Remarque à l'intention des utilisateurs canadiens*

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## FCC Modem Notice

This equipment complies with Part 68 of the FCC Rules. Located on the bottom side of the modem is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. Upon request, you must provide this information to your telephone company.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But, if advance notice is not practical, you will be notified as soon as possible. You will also be informed of your right to file a complaint with the FCC.

## ***Notices***

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If this equipment should fail to operate properly, disconnect the equipment from the phone line to determine if it is causing the problem. If the problem is with the equipment, discontinue use and contact your dealer or vendor.

## **Notices**

### **Important Safety Instructions**

- 1.** Read these instructions carefully. Save these instructions for future reference.
- 2.** Follow all warnings and instructions marked on the product.
- 3.** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4.** Do not use this product near water.
- 5.** Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 6.** Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
- 7.** This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- 8.** Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
- 9.** If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.



## Notices

- 10.** Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 11.** Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
- 12.** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a.** When the power cord or plug is damaged or frayed
  - b.** If liquid has been spilled into the product
  - c.** If the product has been exposed to rain or water
  - d.** If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
  - e.** If the product has been dropped or the cabinet has been damaged
  - f.** If the product exhibits a distinct change in performance, indicating a need for service.
- 13.** Replace the battery with the same type as the product's battery we recommend. Use of another battery may present a risk of fire or explosion. Refer battery replacement to a qualified serviceman.
- 14.** Warning! Batteries may explode if not handled properly. Do not disassemble or dispose of them in fire. Keep them away from children and dispose of used batteries promptly.

***Notices***

- 15.** Use only the proper type of power supply cord set (provided in your accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, type SPT-2, rated 7A 125V minimum, VDE approved or its equivalent. Maximum length is 15 feet (4.6 meters).

## Notices

### Laser Compliance Statement

The CD-ROM or DVD-ROM drive in this computer is a laser product. The CD-ROM or DVD-ROM drive's classification label (shown below) is located on the drive.

**CLASS 1 LASER PRODUCT**

**CAUTION:** INVISIBLE LASER RADIATION WHEN OPEN.  
AVOID EXPOSURE TO BEAM.

**APPAREIL A LASER DE CLASSE 1 PRODUIT**

**LASERATTENTION:** RADIATION DU FAISCEAU LASER  
INVISIBLE EN CAS D'OUVERTURE. EVITER TOUTE  
EXPOSITION AUX RAYONS.

**LUOKAN 1 LASERLAITE LASER KLASSE 1**

**VORSICHT:** UNSICHTBARE LASERSTRAHLUNG, WENN  
ABDECKUNG GEÖFFNET NICHT DEM STRAHL  
AUSSETZEN

**PRODUCTO LÁSER DE LA CLASE I**

**ADVERTENCIA:** RADIACIÓN LÁSER INVISIBLE AL SER  
ABIERTO. EVITE EXPONERSE A LOS RAYOS.

**ADVARSEL:** LASERSTRÅLING VEDÅBNING SE IKKE IND I  
STRÅLEN.

**VARO!** LAVATTAESSA OLET ALTTINA LASERSÄTEILYLLE.

**VARNING:** LASERSTRÅLNING NÅR DENNA DEL ÅR  
ÖPPNAD ÄLÅ TUIJOTA SÄTEESEENSTIRRA EJ IN I  
STRÅLEN

**VARNING:** LASERSTRÅLNING NAR DENNA DEL ÅR  
ÖPPNADSTIRRA EJ IN I STRÅLEN

**ADVARSEL:** LASERSTRÅLING NAR DEKSEL ÅPNESSTIRR  
IKKE INN I STRÅLEN

## Notices

### Lithium-Ion Battery Statement

The following statement refers to the internal lithium-ion battery that powers the computer's clock.

**CAUTION**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

**ADVARSEL!**

Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Léver det brugte batteri tilbage til leverandøren.

**ADVARSEL**

Eksplosjonsfare ved feilaktig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

**VARNING**

Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.

**VAROITUS**

Päristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

**VORSICHT!**

Explosionsgefahr bei unsachgemäßen Austausch der Batterie Ersatz nur durch denselben oder einem vom Hersteller empfohlenem ähnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

**Notices**

## Year 2000 Compliance Statement

The TravelMate 510 series notebook computer is Year 2000-compliant and carries the "NSTL Hardware Tested Year 2000 Compliant" logo. This model has been tested both by Acer's internal test labs and NSTL using NSTL's YMARK2000 certification test. These tests certify that this model will successfully make the year 2000 transition.



For more details, check the Acer Year 2000 Resource Center at <http://www.acer.com/year2000>

## *Notices*

### **Modem Notice**

This equipment has been approved to [Council Division 98/482/EC - "CTR 21"] for pan-European single terminal connection to the Public Switched Telephone Network (PSTN). However, due to differences between the individual PSTNs provided in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN termination point. In the event of problems, you should contact your equipment supplier in the first instance.

## *Preface*

This manual describes features of the TravelMate 510 series notebook computers. The TravelMate series of computers incorporate such features as CardBus, 16-bit stereo audio, internal pointing device, Universal Serial Bus, and all-in-one media storage. The TravelMate 510 series also has unique compact disc (CD) or digital video disc (DVD) player control features.

This manual should answer most of the questions you have about the day-to-day operation of your TravelMate notebook computer.

Use the Just for Starters... instructions that came with your computer to get your computer running for the first time.

You should also take advantage of the online help files that are available with almost all of the programs shipped with your computer.


We hope you enjoy your TravelMate computer. With proper care, your computer will provide you with years of productive service.

## Preface

### Connecting the Computer


Connecting the computer is as easy as 1-2-3.

1. Insert the battery pack into the battery compartment, then slide the battery compartment cover in place.

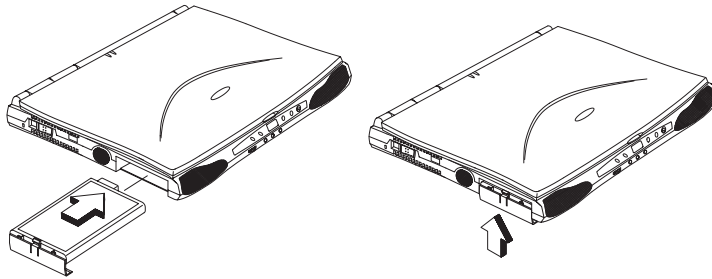

**Note:** When using a battery pack for the first time, fully recharge the battery, then disconnect the adapter to use up the battery before recharging again. Perform this action twice to condition the battery pack.


2. Connect one end of the AC adapter to the DC-in port on the computer's rear panel and the other end to a properly grounded power outlet.

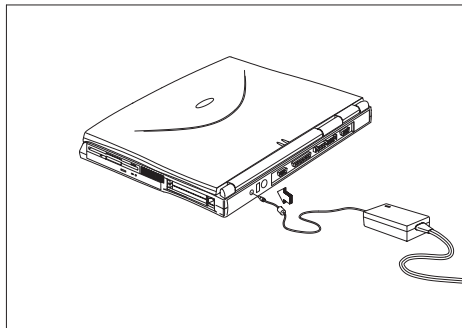



## Preface

3. Slide the display cover latch to the left to open the display. Slide the power switch towards the rear of the computer then release it to turn on the power. The POST (Power-On Self-Test) routine executes and Windows begins loading.

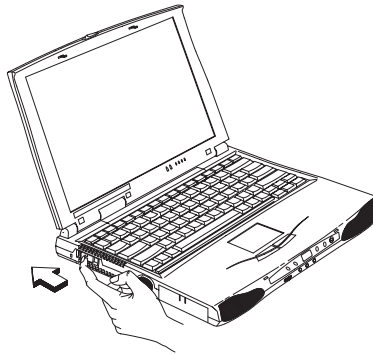

**Note:** To turn off the power, slide and hold the power switch for more than four seconds. If you are using Windows 98, we recommend that you use the Shut down command to turn off the computer. If you turn off the computer and want to turn it on again, wait at least two seconds before powering up.

## *Preface*

### Getting Help Online

This user's guide provides clear and concise information about the computer, so read it thoroughly. To provide you with help when traveling, the computer also has a comprehensive online help.

### Accessing Online Help

Follow these steps to access the online documentation:

1. Press the Windows logo button or click on the **Start** button.
2. Select **Programs**.
3. Click on **TravelMate Online**.

The online help is easy to navigate with hypertext and hypergraphics. Clear illustrations help describe notebook operation as well.

### Getting Online

If you are connected to the Internet and have World Wide Web access, visit our home page (<http://www.acer.com/>) and get the latest information about our products.

## Preface

### Support Information

Your computer is backed by an International Traveler's Warranty (ITW) that gives you security and peace of mind when traveling. Our worldwide network of service centers are there to give you a helping hand.

An ITW passport comes with your computer. This passport contains all you need to know about the ITW program. A list of available, authorized service centers are in this handy booklet. Read this passport thoroughly.



**Note:** Always have your ITW passport on hand, especially when you travel, to receive the benefits from our support centers. Place your proof-of-purchase in the flap located inside the front cover of the ITW passport.

If the country you are traveling in does not have an Acer-authorized ITW service site, you can still get in contact with our offices worldwide.

For technical assistance and support in the United States and Canada, you can call 1-800-816-2237. You can also contact a local dealer or distributor in the country you are traveling in for assistance.

To view support information, follow these steps:

1. Click on **Start, Settings..., Control Panel.**
2. Double-click on **System.**
3. Click on **Support Information.**



**Note:** If you are connected to the Internet and have World Wide Web access, visit our home page (<http://www.acer.com/>) and get an updated list of our worldwide offices, as well as information about our products.

## *Preface*

### Care and Maintenance

#### Taking Care of Your Computer

Your computer will serve you well if you take care of it.

- Do not expose the computer to direct sunlight. Do not place near sources of heat, such as a radiator.
- Do not expose the computer to temperatures below 0°C (32°F) or above 50°C (122°F).
- Do not subject the computer to magnetic fields.
- Do not expose the computer to rain or moisture.
- Do not spill water or any liquid on the computer.
- Do not subject the computer to heavy shock and vibration.
- Do not expose the computer to dust and dirt.
- Never place objects on top of the computer to avoid damaging the computer.
- Never place the computer on uneven surfaces.

#### Taking Care of your AC Adapter

Here are some ways to take care of your AC adapter:

- Do not connect the adapter to any other device.
- Do not step on the power cord or place heavy objects on top of it. Carefully route the power cord and any cables away from all potential traffic.
- When unplugging the power cord, do not pull on the cord itself but pull on the plug.

## *Preface*

- The total ampere ratings of the equipment plugged in should not exceed the ampere rating of the cord if you are using an extension cord. Also, the total current rating of all equipment plugged into a single wall outlet should not exceed the fuse rating.

### **Taking Care of your Battery Pack**

Here are some ways to take care of your battery pack:

- Use only batteries of the same kind as replacements. Turn the power off before removing or replacing batteries.
- Do not tamper with batteries. Keep them away from children.
- Dispose of used batteries according to local regulations. Recycle if at all possible.

### **Cleaning and Servicing**

When cleaning the computer, follow these steps:

- 1.** Power off the computer and remove the battery pack.
- 2.** Disconnect the AC adapter.
- 3.** Use a soft cloth moistened with water. Do not use liquid or aerosol cleaners.

Contact your dealer or see your service technician if any of the following occurs:

- The computer has been dropped or the body has been damaged.
- Liquid has been spilled into the product.
- The computer does not operate normally.



# Getting Familiar with your Computer

---

This computer combines high-performance, versatility, power management features and multimedia capabilities with a unique style and ergonomic design. Work with unmatched productivity and reliability with your new power computing partner.

This chapter gives an in-depth "tour" of the computer's many features.

## Contents

Features . . . . .	3
Display . . . . .	5
Indicators . . . . .	7
Keyboard . . . . .	9
Special Keys . . . . .	9
Lock Keys . . . . .	9
Embedded Numeric Keypad . . . . .	10
Windows Keys . . . . .	11
The Euro Symbol . . . . .	12
Hotkeys . . . . .	13
Keyboard Ergonomics . . . . .	16
Touchpad . . . . .	17
Touchpad Basics . . . . .	17
Storage . . . . .	19
Hard Disk . . . . .	19
Floppy Drive . . . . .	19
CD-ROM or DVD-ROM Drive . . . . .	20
Ports . . . . .	21
Front Ports . . . . .	21
Left Port . . . . .	22
Fast Infrared . . . . .	23
Rear Ports . . . . .	24
Universal Serial Bus . . . . .	25
Right Ports . . . . .	25
PC Card Slots . . . . .	25
Fax/Data Modem . . . . .	27
Audio . . . . .	28



<b>Securing your Computer . . . . .</b>	<b>31</b>
<b>Security Notch . . . . .</b>	<b>31</b>
<b>Passwords . . . . .</b>	<b>31</b>



## Features

### Features

This computer was designed with the user in mind. Here are just a few of its many features:

#### *Performance*

- Pentium® II processor with 256 KB level 2 cache
- Intel® Celeron™ processor with 128 KB level 2 cache
- 64-bit main memory
- Large LCD display and AGP video with 256-bit graphics acceleration
- Internal CD-ROM or DVD-ROM drive<sup>1</sup>
- Internal 3.5-inch floppy drive
- High-capacity, Enhanced-IDE hard disk
- Lithium-ion battery pack
- Power management system with standby and hibernation power saving modes

#### *Multimedia*

- 16-bit high-fidelity stereo audio with 3-D sound and wavetable synthesizer
- Play-now audio capability
- Built-in dual speakers
- Compact disc player control feature
- Ultra-slim, high-speed CD-ROM or DVD-ROM drive

#### *Connectivity*

- High-speed fax/data modem port (available in select

---

<sup>1</sup> Subject to local configuration

## Features

countries)

- USB (Universal Serial Bus) port

### Human-centric Design and Ergonomics

- All-in-one design (CD-ROM or DVD-ROM, FDD, HDD)
- Lightweight and slim
- Sleek, smooth and stylish design
- Full-sized keyboard
- Wide and curved palm rest
- Ergonomically-centered touchpad pointing device
- CD or DVD player control

### Expansion

- CardBus PC card (formerly PCMCIA) slots (two type II/I or one type III) with ZV (Zoomed Video) port support<sup>2</sup>
- Port replicator option for one-step connect/disconnect from peripherals
- Upgradeable memory and hard disk

---

<sup>2</sup> Only the upper slot supports Zoomed Video

## Display

### Display

The large graphics display offers excellent viewing, display quality and desktop performance graphics. The computer supports two different display configurations — High Performance Addressing (HPA) or Thin-Film Transistor (TFT).

#### *Video Performance*

AGP video with 256-bit graphics acceleration and 2.5MB video memory boost video performance.

#### *Simultaneous Display*

The computer's large display and multimedia capabilities are great for giving presentations. If you prefer, you can also connect an external monitor when giving presentations. This computer supports simultaneous LCD and CRT display. Simultaneous display allows you to control the presentation from your computer and at the same time face your audience. You can also connect other output display devices such as LCD projection panels for large-audience presentations.

#### *Dual Display*

The computer's unique graphics chip takes advantage of Windows 98's multi-display capability, allowing you to extend your desktop to an external display device, such as an external monitor or projector. With this feature enabled, you can move program windows to/from the computer LCD and the external monitor.

## Display

### *Power Management*

The power management system incorporates an "automatic LCD dim" feature that automatically dims the LCD when the computer is powered by a battery pack to conserve battery power. See "Power Management" on page 40 for more information on power management features.

### *Opening and Closing the Display*

To open the display, slide the display cover latch to the left and lift up the cover. Then tilt it to a comfortable viewing position. The computer employs a microswitch that turns off the display (and enters standby mode) to conserve power when you close the display cover, and turns it back on when you open the display cover.



---

**Note:** *If an external monitor is connected, the computer turns off the display (but does not enter standby mode) when you close the display cover.*

---

To close the display cover, fold it down gently until the display cover latch clicks into place.



---


**Caution:** *To avoid damaging the display, do not slam it when you close it. Also, do not place any object on top of the computer when the display is closed.*

---





## Indicators
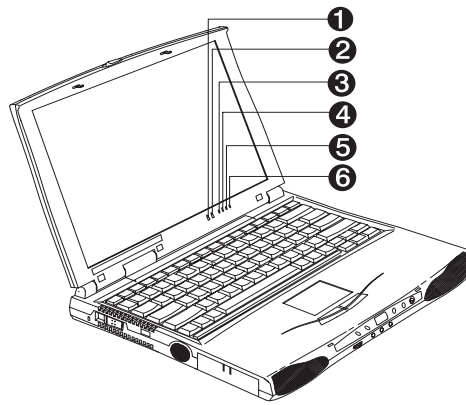
### Indicators



The computer has six easy-to-read status indicators (LEDs) under the display screen.



The Power and Standby indicators are visible even when you close the display cover so you can see the status of the computer while the cover is closed.

#	Icon	Function	Description
1		Power	Lights when the computer is on. Blinks when a battery-low condition occurs.
2		Standby	Lights when the computer enters Standby mode.
3		Media Activity	Lights when the floppy drive, hard disk or CD-ROM or DVD-ROM drive is active.
4		Battery Charge	Lights when the battery is being charged.

## *Indicators*

#	Icon	Function	Description
5		Caps Lock	Lights when Caps Lock is activated.
6		Num Lock (Fn-F11)	Lights when Numeric Lock is activated.


## Keyboard

### Keyboard

The keyboard has full-sized keys and an embedded keypad, separate cursor keys, two Windows keys and twelve function keys.

### Special Keys

#### Lock Keys

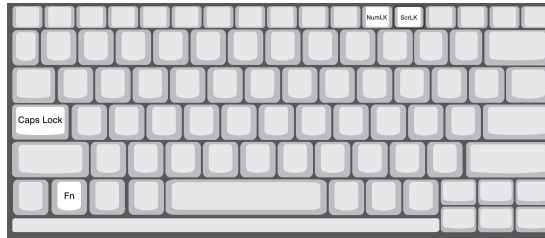

The keyboard has three lock keys which you can toggle on and off.

Lock Key	Description
Caps Lock	When Caps Lock is on, all alphabetic characters typed are in uppercase.
Num Lock (Fn-F11)	When Num Lock is on, the embedded keypad is in numeric mode. The keys function as a calculator (complete with the arithmetic operators +, -, *, and /). Use this mode when you need to do a lot of numeric data entry. A better solution would be to connect an external keypad. See "External Keyboard" on page 48.
Scroll Lock (Fn-F12)	When Scroll Lock is on, the screen moves one line up or down when you press ↑ or ↓ respectively. Scroll Lock does not work with some applications.

## Keyboard

### Embedded Numeric Keypad



The embedded numeric keypad functions like a desktop numeric keypad. It is indicated by small characters located on the upper right corner of the keycaps. To simplify the keyboard legend, cursor-control key symbols are not printed on the keys.

Desired Access	Num Lock On	Num Lock Off
Number keys on embedded keypad	Type numbers in a normal manner.	
Cursor-control keys on embedded keypad	Hold Shift while using cursor-control keys.	Hold Fn while using cursor-control keys.
Main keyboard keys	Hold Fn while typing letters on embedded keypad.	Type the letters in a normal manner.




**Note:** If an external keyboard or keypad is connected to the computer, the numlock feature automatically shifts from the internal keyboard to the external keyboard or keypad.



## Keyboard

### Windows Keys

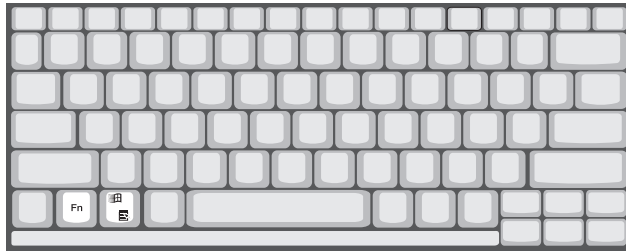

The keyboard has two keys that perform Windows-specific functions.

Key	Description
Windows logo key	Start button. Combinations with this key perform special functions. Below are a few examples: <ul style="list-style-type: none"> <li>⊞ + Tab (Activates next Taskbar button)</li> <li>⊞ + E (Explores My Computer)</li> <li>⊞ + F (Finds Document)</li> <li>⊞ + M (Minimizes All)</li> <li>Shift + ⊞ + M (Undoes Minimize All)</li> <li>⊞ + R (Displays Run dialog box)</li> </ul>
Application key (Fn-Application key)	Opens the application's context menu (same as right-click).

## Keyboard

### The Euro Symbol



If your keyboard is in any of the following languages -- United States-International, United Kingdom, French, German, Italian, Spanish, Portuguese, Danish, Swiss German, Swiss French, Czech, Belgian, Norwegian, Hungarian, Turkish, Swedish or Finnish -- you can type the Euro symbol on your keyboard.



**Note:** *Important! (for US keyboard users): The keyboard type is set when you first set up Windows. For the Euro symbol to work, the keyboard type has to be set to United States-International.*

To verify the keyboard type:

1. Click on **Start, Settings, Control Panel**.
2. Double-click on **Keyboard**.
3. Click on the **Language** tab.
4. Verify that the keyboard type used for "En English (United States)" is set to **United States-International**.
5. If not, select and click on **Properties**; then select **United States-International** and click on **OK**.
6. Click on **OK**.

To type the Euro symbol:

1. Locate the Euro symbol on your keyboard.

## Keyboard

2. Open a text editor or word processor.
3. Hold **Alt Gr** and press the Euro symbol..




**Note:** The **Alt Gr** is only used together with the Euro symbol. Some fonts and software do not support the Euro symbol. Please refer to <http://www.microsoft.com/typography/faq/faq12.htm> for more information.






### Hotkeys








The computer employs hotkeys or key combinations to access most of the computer's controls like screen contrast and brightness, volume output and the BIOS setup utility.

HotKey	Icon	Function	Description
Fn-F1	?	Hotkey help	Displays a list of the hotkeys and their functions.
Fn-F2		Setup	Accesses the notebook configuration utility. See "Notebook Manager" on page 80.

## Keyboard

HotKey	Icon	Function	Description
Fn-F3		Standby	Puts the computer in Standby mode. Press any key to return. See "Standby Mode" on page 41 to learn more about Standby mode.
Fn-F4		Hibernation/ Sleep	Puts the computer in Hibernation/Sleep mode (if Sleep Manager, the hibernation utility, is installed, valid and enabled). Press the power switch to resume. Otherwise, the computer issues a warning beep and continues operation. See "Hibernation Mode" on page 42 for more about Hibernation mode.
Fn-F5		Display toggle	Switches display output between the display screen, external monitor (if connected) and both the display screen and external monitor.
Fn-F6		Screen blank	Turns the display screen backlight off to save power. Press any key to return.
Fn-F7		Touchpad on/off	Turns the internal touchpad on and off. When you connect an external PS/2 mouse, the computer automatically disables the touchpad.

## Keyboard

HotKey	Icon	Function	Description
Fn-F8		Speaker on/ off	Turns the speakers on and off; mutes the sound.
Fn-↑		Contrast up	Increases the screen contrast (available only for models with HPA displays).
Fn-↓		Contrast down	Decreases the screen contrast (available only for models with HPA displays).
Fn-→		Brightness up	Increases the screen brightness.
Fn-←		Brightness down	Decreases the screen brightness.


### Activating Hotkeys

When activating hotkeys, press and hold the first key **Fn** before pressing the other key in the hotkey combination.

## ***Keyboard***

### **Keyboard Ergonomics**


Located below the keyboard, the wide and curved palm rest is ergonomically designed to provide you with a very comfortable place to rest your hands while you type.

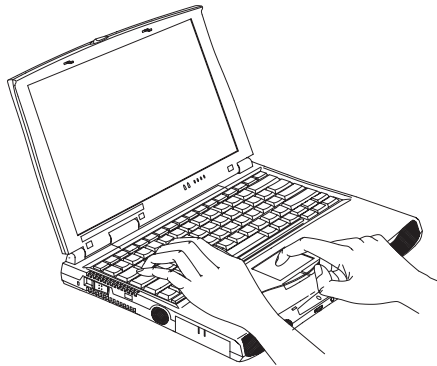

## Touchpad

### Touchpad

The built-in touchpad is a PS/2-compatible pointing device that senses movement on its surface. This means the cursor responds as you move your finger on the surface of the touchpad. The central location on the palm rest provides optimum comfort and support.

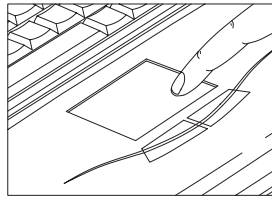

**Note:** When you connect an external PS/2 mouse, the computer automatically disables the internal touchpad.

### Touchpad Basics

The following items teach you how to use the touchpad:

- Move your finger across the touchpad to move the cursor.
- Press the left and right buttons located on the edge of the touchpad to do selection and execution functions. These two buttons are similar to the left and right buttons on a mouse. Tapping on the touchpad produces similar results.

## Touchpad

Function	Left Button	Right Button	Tap
Execute	Click twice quickly		Tap twice (at the same speed as double-clicking the mouse button)
Select	Click once		Tap once
Drag	Click and hold, then use finger to drag the cursor on the touchpad		Tap twice (at the same speed as double-clicking the mouse button) and hold finger to the touchpad on the second tap to drag the cursor
Access context menu		Click once	



**Note:** Keep your fingers dry and clean when using the touchpad. Also keep the touchpad dry and clean. The touchpad is sensitive to finger movements. Hence, the lighter the touch, the better the response. Tapping too hard will not increase the touchpad's responsiveness.



## Storage

### Storage

This computer supplies you with all-in-one media storage:

- High-capacity Enhanced-IDE hard disk
- Standard ultra-slim internal 3.5-inch floppy drive
- High-speed ultra-slim CD-ROM or DVD-ROM drive

### Hard Disk


The hard disk can be upgraded when you need more storage space. Consult your dealer for details.

### Floppy Drive

The ultra-slim internal floppy drive reads and writes on standard 3.5-inch diskettes.

#### *Ejecting a Floppy Disk*

Press the floppy disk eject button to eject a floppy disk from the floppy drive.

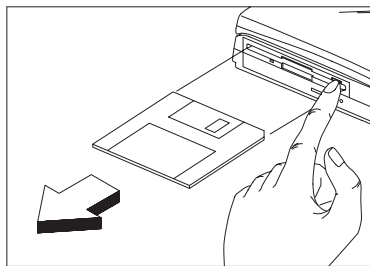


## Storage

### CD-ROM or DVD-ROM Drive

A high-speed CD-ROM or DVD-ROM drive gives you portable multimedia access.

#### *Ejecting the CD-ROM or DVD-ROM Tray*

To eject the CD-ROM drive tray when the computer is turned on, press the CD-ROM or DVD-ROM eject button.

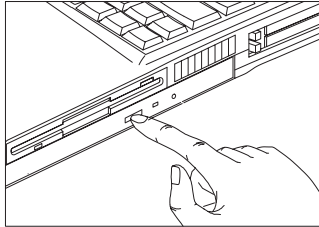

---

**Note:** When power is off, you can eject the CD-ROM or DVD-ROM drive tray using the emergency eject hole (see page 110). You can also eject the CD-ROM drive tray when using the compact disc player control feature (see page 29).

---

**Ports**

**Ports**


Ports allow you to connect peripheral devices to your computer as you would with a desktop PC.



**Note:** See Chapter 3 on how to connect external devices to the computer.

**Front Ports**

The front panel contains ports for external audio connections.

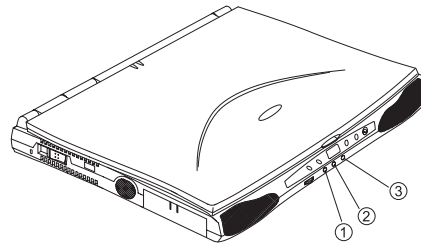



#	Icon	Port	Connects to...
1		Speaker-out jack	Speakers or headphones
2		Audio line-in jack	Audio line-in device with a 3.5mm minijack (e.g., audio CD player, stereo walkman)
3		Microphone-in jack	3.5mm minijack condenser microphone

## Ports

### Left Port

The Left panel contains port for fast infrared connections.

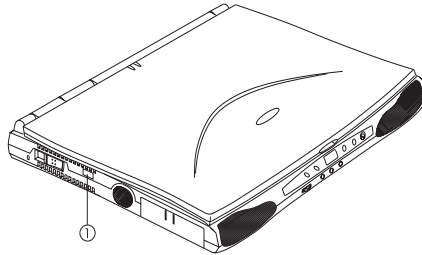


#	Icon	Port	Connects to...
1		Infrared port	Infrared devices (e.g., infrared printers, IR-aware computers)

## Ports

### Fast Infrared

The computer's fast infrared (FIR) port allows you to do wireless data transfer with other IR-aware computers and peripherals such as infrared printers. The infrared port can transfer data at speeds of up to four megabits per second (Mbps) at a distance of up to one meter.


To use FIR, position two IR-aware devices such that their IR ports are no more than one meter apart and offset no more than 15 degrees.

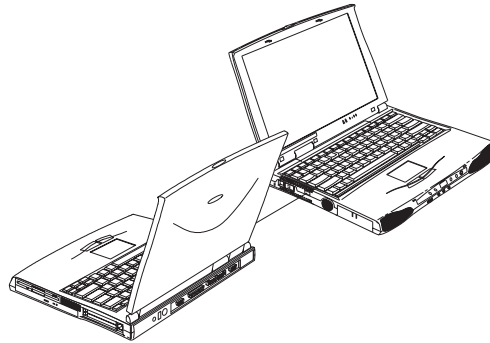

When the two computers are in position, simply begin the data transfer as you normally would. See your file transfer software for details.

# Ports

## Rear Ports

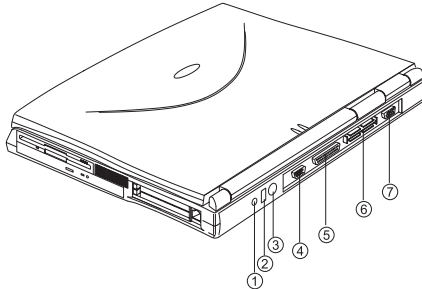


#	Icon	Port	Connects to...
1		DC-in jack	AC adapter and power outlet
2		USB port	USB devices (e.g., USB mouse)
3		PS/2 port	PS/2-compatible devices (e.g., PS/2 keyboard/mouse/keypad)
4		Serial port	Serial devices (e.g., serial mouse)
5		Parallel port	Parallel devices (e.g., parallel printer)
6		Port replicator connector	Port replicator
7		External monitor port	Display monitor (up to 1024x768 resolution, 64K-colors)



## Ports

### Universal Serial Bus

The Universal Serial Bus (USB) port is a high-speed serial bus which allows you to connect and daisy-chain USB peripherals without taking up precious system resources.
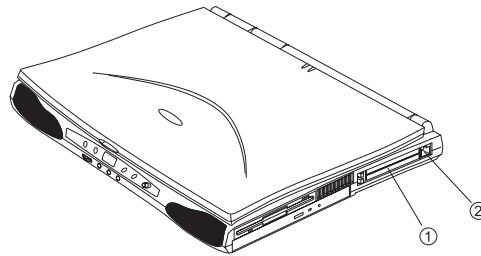
### Right Ports



#	Icon	Port	Connects to...
1		PC Card slots	16-bit PC Cards and 32-bit CardBus PC Cards (ZV support)
2		Modem jack	Phone line (only for models with an internal fax modem)

### PC Card Slots

There are two type II/I or one type III CardBus PC Card slots found on the right panel of the computer. These slots accept credit-card-sized cards that enhance the usability and expandability of the computer.

PC Cards (formerly PCMCIA) are add-on cards for portable computers, giving you expansion possibilities long afforded by desktop PCs. Popular type II cards include flash memory, SRAM, fax/data modem, LAN and SCSI cards. Common type III cards are 1.8-inch ATA drives and cellular modems. CardBus improves on the 16-bit PC card technology by expanding the data path to 32 bits.

## Ports


ZV (Zoomed Video) port<sup>3</sup> support allows your computer to support hardware MPEG in the form of a ZV PC card.



**Note:** Refer to your card's manual for details on how to install and use the card and its functions.

### Inserting a Card

Insert the card into the desired slot and make the proper connections (e.g., network cable), if necessary. See your card manual for details.

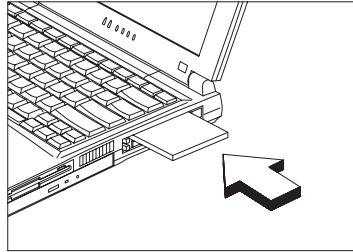

For type III cards, insert the card into the lower slot. For ZV cards, insert the card into the upper slot.

### Ejecting a Card

Before ejecting a PC card:

- Exit the application using the card.
- Left-click on the PC card icon on the taskbar and stop the card operation.


---

<sup>3</sup> Only the upper slot supports Zoomed Video



## Ports

Press the slot eject button once to pop it out; then press it again to eject the PC Card.

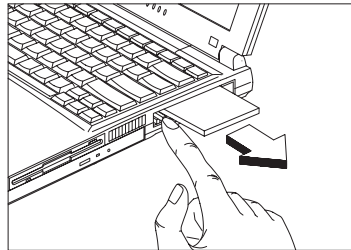


### Fax/Data Modem

The computer has a built-in fax/data modem (available in select countries).




**Caution: This modem port is not compatible with digital phone lines. Plugging this modem into a digital phone line will damage the modem.**

To use the fax/data modem port, connect a phone cable from the modem port to a telephone jack.

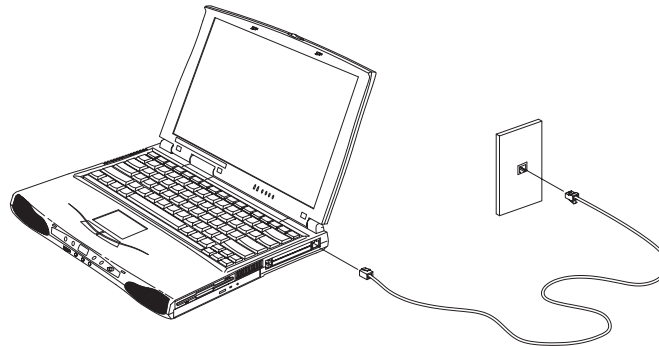

## Audio

The standard computer configuration includes 16-bit high-fidelity stereo audio with further enhancements that include 3D sound for true audio immersion. Front dual speakers direct sound towards you to further enhance sound output. A sensitive microphone is located above the display screen.

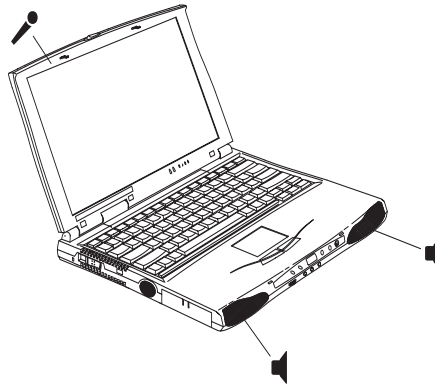


Besides the built-in speakers, there are audio ports on the front panel of the computer. See “Audio Devices” on page 53 for more information on connecting external audio devices.

## Audio

### Playing Audio CDs

This computer allows you to play audio (music) compact discs regardless of whether the computer is on or off. Front panel controls provide smooth and easy operation.

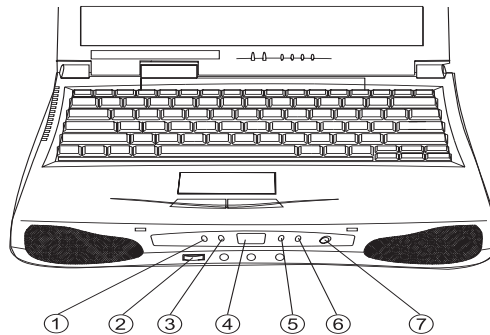


#	Function	Description
1	Previous Track	Jumps to the previous track in the audio CD.
2	Volume Control	Adjusts the volume level from 0-10.
3	Next Track	Jumps to the next track in the audio CD.
4	Status LCD	Displays the current track number; displays "--" if no audio CD is in the CD-ROM or DVD-ROM drive.
5	Play/Pause	Plays/pauses the audio CD.
6	Stop/Eject	Stops playing the audio CD. When CD playback is stopped, press again to eject the CD-ROM or DVD-ROM drive tray.
7	Power	Turns the audio CD player on and off (works only when the computer is off).

## Audio

### *Play-now Audio*

To play audio CDs without turning on the computer, follow these steps:

- 1.** Slide the power switch and release it to turn on the audio CD player. The status LCD turns on.
- 2.** Press the CD eject button to eject the CD-ROM drive tray.
- 3.** Firmly place an audio compact disc on the CD-ROM drive tray spindle until you hear it click in place.
- 4.** Close the CD-ROM drive tray.
- 5.** Use the front panel buttons to play the CD.
- 6.** Use the volume control knob to adjust the volume level. Turn the knob to the right to increase the volume; turn it to the left to decrease the volume.

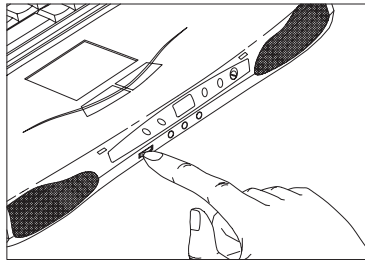

## Securing your Computer


### Securing your Computer

Security features include hardware and software locks — a security notch and a two-level password scheme.

#### Security Notch

A security notch located on the rear panel of the computer lets you connect a Kensington-compatible key-based computer security lock.

Wrap a computer security lock cable around an immovable object such as a table or locked drawer handle. Insert the lock into the notch and turn the key to secure the lock.

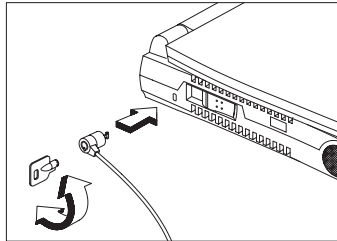

#### Passwords

A two-level password scheme protects your computer from unauthorized access. When set, no one can access the computer without entering the correct password.

There are two types of passwords you can set:

- Setup Password secures your computer against unauthorized entry to and use of the BIOS Utility.
- Power-On Password secures your computer against unauthorized use.

## Securing your Computer

See "BIOS Utility" on page 91 for details.



***Important: Do not forget your password! If you forget your password, you need to contact your dealer.***

### *Setting a Password*

You can set the password using:

- Notebook Manager -- go to page 84.
- BIOS Utility -- go to page 100.

## 2

# Operating on Battery Power

---

The computer operates on AC or battery power. This chapter contains the information you need to know to operate the computer on battery power. It also includes information on how your computer manages and saves power.

### Contents

Battery Pack . . . . .	34
Battery Pack Characteristics . . . . .	34
Installing and Removing the Battery Pack . . . . .	35
Charging the Battery . . . . .	36
Charging Modes . . . . .	36
Checking the Battery Level . . . . .	37
Using the Windows Battery Meter . . . . .	37
Optimizing Battery Life . . . . .	37
Battery-low Warning . . . . .	38
Power Management . . . . .	40
Power Management Modes . . . . .	40
Display Standby Mode . . . . .	40
Hard Disk Standby Mode . . . . .	41
Standby Mode . . . . .	41
Hibernation Mode . . . . .	42
Advanced Power Management . . . . .	44

## ***Battery Pack***

### **Battery Pack**

The computer uses a battery pack that gives you long use between charges.

### **Battery Pack Characteristics**

The battery pack has the following characteristics:

**Employs Current Battery Technology Standards**

The computer uses a Lithium-Ion battery pack which does not have the memory effect problem of Nickel Cadmium (NiCd) batteries.

**Battery-low Warning**

When the battery charge level becomes low, the computer gives off warning beeps and the status indicator flashes at regular intervals. This tells you that the battery power is critically low (and you should save your work). You can correct this situation by recharging the battery pack.

Whenever possible, use the AC adapter. The battery will come in handy when you travel or during a power failure. It is advisable to have an extra fully-charged battery pack available as backup.

#### ***Using a Battery Pack for the First Time***

When using a battery pack for the first time, follow these steps:

- 1.** Disable the Sleep Upon Battery-low parameter in Setup or uncheck the Enable sleep upon battery low in the Power Management screen of Notebook Manager. See page 103 or page 87 respectively.
- 2.** Connect the AC adapter to a power source and to the computer and fully recharge the battery.



## Battery Pack

3. Disconnect the adapter to use up the battery before recharging again.

You only need to do this once or twice with a new battery or with a battery that's been stored without being used for a long time. If the computer is to be stored for more than two weeks, we suggest you remove the battery pack. Battery power from a fully charged battery pack depletes in roughly a day with the computer in Standby mode, a month in Hibernation mode or when power is off.




**Warning! Do not expose battery packs to temperatures below 0°C (32°F) or above 60°C (140°F). This may adversely affect the battery pack.**

### Installing and Removing the Battery Pack



**Important! Before removing the battery pack, make sure that you have an AC adapter connected to the computer; otherwise turn off the computer.**

To install a battery pack, slide it into the battery compartment, then latch the battery compartment cover.

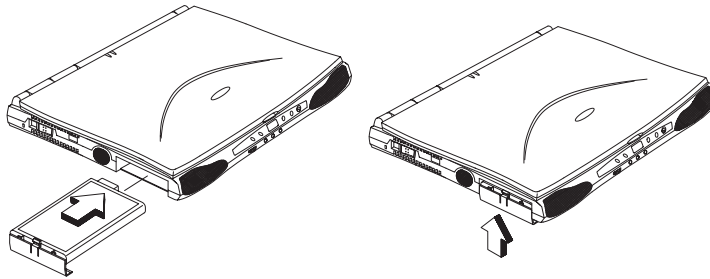

Reverse the procedure to remove the battery pack.

## Battery Pack

### Charging the Battery

To charge the battery, slide the battery pack into the battery bay and plug the AC adapter into the computer and an electrical outlet.

### Charging Modes

The adapter has three charging modes:

Rapid mode

The computer uses rapid charging when power is turned off and a powered AC adapter is connected to it. In rapid mode, a fully depleted battery gets fully charged in approximately three hours.

Charge-in-use mode

When the computer is in use with the AC adapter plugged in, the computer also charges the battery pack if installed. This mode will take longer to fully charge a battery than rapid mode. In charge-in-use mode, a fully depleted battery gets fully charged in approximately:

- six hours if the unit is only playing audio CD or is in Standby mode and
- nine hours if the system is in use.



---

**Note:** We suggest that you charge the battery pack before retiring for the day, letting it charge overnight before traveling. This ensures a fully charged battery for use the next day.

---

## **Battery Pack**

### **Checking the Battery Level**

The computer features battery-low warning signals that are both audible and visible. When the battery pack is low, the computer emits warning beeps and the battery indicator flashes at regular intervals. Also, you can check the battery charge level using the Windows battery meter.

### **Using the Windows Battery Meter**

The Windows battery meter indicates the present battery level. Simply rest your cursor on the battery meter (or AC plug) icon on the taskbar to see the present charge level of your battery.

### **Optimizing Battery Life**

This section helps you get the most out of battery operation. Optimizing battery life prolongs the charge/recharge cycle and improves recharge efficiency. Follow these suggestions to optimize and maximize battery power:

- Purchase an extra battery pack.
- Use Sleep Manager to reserve hard disk space for the Hibernation function. See "Sleep Manager" on page 73.
- Use the AC adapter whenever possible so that the battery is reserved for on-the-go computing.
- Keep the battery pack in the computer powered by the AC adapter. The constant trickle charge maintains the battery level to eliminate the battery self-discharge effect. The charge-in-use function also charges the battery pack.
- Disable the parallel and serial ports if no devices are connected to these ports. You can do this through the Setup Utility. See "Onboard Devices Configuration" on page 97.
- Eject the PC card from the card slot when not in use,

## **Battery Pack**

since the PC card draws extra power. See “Ejecting a Card” on page 26

- Store the battery pack in a cool, dry place. The recommended storage temperature for battery packs ranges from 10 to 30 degrees C. The higher the storage temperature, the faster the battery pack self-discharges.
- The batteries can be recharged about 300 times when used as directed. Excessive recharging decreases battery life.
- Take care of your battery pack and AC adapter. See “Care and Maintenance” on page xx of the preface.

### **Battery-low Warning**

You never have to worry about battery power as long as you are using the AC adapter. However, when you operate the computer on battery power, pay extra attention to the warning beeps and the power indicator on the display panel.

The following signals indicate a battery-low condition:

- The buzzer generates four short beeps every minute, if you enabled the Battery-low Warning Beep parameter in Setup.
- The power indicator flashes at regular intervals until battery power is depleted.

When you receive a battery-low warning, you have around two minutes to save your work. If you do not connect the AC adapter within this period, the computer automatically enters Hibernation mode if the Sleep Upon Battery-low parameter in Setup is enabled and the following conditions exist:

- The Hibernation file created by Sleep Manager is present and valid. See “Sleep Manager” on page 73.
- There is enough battery power left to save system

## Battery Pack

information onto the hard disk.

Otherwise, the computer enters Standby mode.



**Warning: Connect the AC adapter to the computer as soon as possible. Data is lost when computer power is cut off during Standby mode.**

The following table shows the recommended course of action to take when you encounter a battery-low condition.

Situation	Recommended Action
AC adapter and power outlet available	<ol style="list-style-type: none"> <li>1. Connect the AC adapter to the computer.</li> <li>2. Save all necessary files.</li> <li>3. Resume work.</li> </ol> <p>Power off the computer if you wish to recharge the battery rapidly.</p>
An extra fully-charged battery pack available	<ol style="list-style-type: none"> <li>1. Save all necessary files.</li> <li>2. Exit the application.</li> <li>3. Power off the computer.</li> <li>4. Replace the battery pack.</li> <li>5. Power on the computer and resume work.</li> </ol> <p>or</p> <ol style="list-style-type: none"> <li>1. Save all necessary files.</li> <li>2. Enter Hibernation mode (press Fn-F4).</li> <li>3. Install the extra battery pack.</li> <li>4. Resume from Hibernation mode.</li> </ol>
AC adapter or power outlet not available	<ol style="list-style-type: none"> <li>1. Save all necessary files.</li> <li>2. Exit the application.</li> <li>3. Power off the computer.</li> </ol> <p>or</p> <ol style="list-style-type: none"> <li>1. Save all necessary files.</li> <li>2. Enter Hibernation mode (press Fn-F4).</li> </ol>

## *Power Management*

### Power Management

This computer has a built-in power management unit that monitors system activity. System activity refers to any activity involving one or more of the following devices: keyboard, mouse, floppy drive, hard disk, peripherals connected to the serial and parallel ports, and video memory. If no activity is detected for a period of time (called an inactivity time-out), the computer stops some or all of these devices in order to conserve energy.

This computer employs a power management scheme that supports APM (Advanced Power Management) or ACPI<sup>1</sup> (Advanced Configuration and Power Interface) which allows for maximum power conservation and maximum performance at the same time.

If your computer is set for APM, you can set timeout values for your computer's devices before power-saving methods are applied to these devices. If your computer is set for ACPI, Windows handles all power-saving chores for your computer.



**Note:** We recommend you enable power management to prolong your battery life.

### Power Management Modes

#### Display Standby Mode

Screen activity is determined by the keyboard, the built-in touchpad, and an external PS/2 pointing device. If these devices are idle for the period specified by the LCD backlight Timeout value, the display shuts off until you press a key or move the touchpad or external mouse.

---

<sup>1</sup> Available in the future.

## Power Management

### "Automatic Dim" Feature

The computer has a unique "automatic dim" power-saving feature. When the computer is using AC power and you disconnect the AC adapter from the computer, it automatically dims the LCD backlight to save power. If you reconnect AC power to the computer, it automatically adjusts the LCD backlight to a brighter level.

### Hard Disk Standby Mode

The hard disk enters standby mode when there are no disk read/write operations within the period of time determined by the power management system. In this state, the power supplied to the hard disk is reduced to a minimum. The hard disk returns to normal once the computer accesses it.

### Standby Mode

The computer consumes very low power in Standby mode. Data remains intact in the system memory until the battery is drained.

There are four ways to enter Standby mode:

- Pressing the Standby hotkey **Fn-F3**
- If the waiting time specified by the Standby Timeout value or the operating system elapses without any system activity
- Closing the display cover
- When the computer is about to enter Hibernation mode (e.g., during a battery low condition), but the Hibernation file is invalid or not present



**Note:** If the computer does not enter Standby mode after pressing the Standby hotkey, it means the operating system will not allow the computer to enter the power-saving mode.

## Power Management

The following signals indicate that the computer is in Standby mode:

- The buzzer beeps (when the hotkey is pressed to enter into Standby mode)
- The Standby indicator lights



**Warning: Unstored data is lost when you turn off the computer power in Standby mode or when the battery is drained.**

To leave Standby mode and return to normal mode:

- Press any key
- Move the active pointing device (internal or external, PS/2 or serial)
- Have the Resume Timer set and let it be matched
- Open the display cover
- Experience an incoming PC card modem event

### Hibernation Mode

In Hibernation mode, all power shuts off (the computer does not consume any power). The computer saves all system information onto the hard disk before it enters Hibernation mode. Once you turn on the power, the computer restores this information and resumes where you left off upon leaving Hibernation mode.

Before the computer can enter Hibernation mode, the Hibernation file created by Sleep Manager must be present and valid. See "Sleep Manager" on page 73.

Then, there are four ways to enter Hibernation mode:

- Pressing the Hibernation hotkey **Fn-F4**
- If the waiting time specified by the Hibernation Timeout value elapses without any system activity



## Power Management

- If a battery low condition occurs and the Sleep Upon Battery-low parameter in Setup is set to [ENABLED]
- Invoked by the operating system power-saving modes



**Note:** *If the computer beeps but does not enter Hibernation mode after pressing the Hibernation hotkey, it means the operating system will not allow the computer to enter the power-saving mode.*

To exit Hibernation mode, press the power switch. The computer also resumes from Hibernation mode if the resume timer is set and matched.



**Warning:** *Do not change any devices (such as add memory) when the computer is in Hibernation mode.*

### Sleep Mode (ACPI)

If ACPI is installed, all power management functions are handled by the Windows operating system. In this setup, you do not need to set timeout values for devices before they enter a power-saving mode.

Sleep mode may be one of three computer power saving modes: standby, hibernation or power off. Windows automatically determines which of these modes to enter.

To enter Sleep mode under ACPI:

- Press the Sleep hotkey **Fn-F4**
- Allow the idle times for devices and the computer determined by Windows 98 to elapse

How to exit Sleep mode depends upon which power-saving mode the computer is in.

## ***Power Management***

### **Advanced Power Management**

This computer supports the APM standard designed to further reduce power consumption. APM is a power-management approach defined jointly by Microsoft and Intel. An increasing number of software packages support APM to take advantage of its power-saving features and allow greater system availability without degrading performance.

For more information about APM under Windows, refer to your Windows user's manual.

### **Advanced Configuration and Power Interface**

Advanced Configuration and Power Interface (ACPI) is a power-management specification jointly developed by Intel, Microsoft, and Toshiba. ACPI enables Windows to control the amount of power given to each device attached to the computer. With ACPI, Windows can turn off peripheral devices when they are not in use, thereby saving power.

## 3

## Peripherals and Options

---

Your computer offers excellent expansion capabilities with its built-in ports and connectors. This chapter describes how to connect peripherals and hardware options that help you use your computer with ease. When connecting peripherals, read the manual included with the peripheral for operating instructions. You can purchase most of these and other options directly from Acer.

This chapter also includes sections on how to upgrade key components. Key component upgradeability helps keep your computer in step with the latest technology.

### Contents


External Monitor . . . . .	46
Using Dual Display . . . . .	46
Enabling Dual Display . . . . .	47
External Keyboard . . . . .	48
External Keypad . . . . .	49
External Pointing Device . . . . .	50
External PS/2 Mouse . . . . .	50
External Serial Mouse . . . . .	51
Printer . . . . .	52
Audio Devices . . . . .	53
Port Replicator . . . . .	54
PC Cards . . . . .	55
USB Devices . . . . .	56
Miscellaneous Options . . . . .	57
Additional Power Packs . . . . .	57
Battery Pack . . . . .	57
AC Adapter . . . . .	57
Cables . . . . .	57
PS/2 Y-Bridge Cable . . . . .	57
File Transfer Cable . . . . .	58
Key Component Upgrades . . . . .	59
Memory Upgrade . . . . .	59
Memory Configurations . . . . .	59
Installing Memory . . . . .	60
Hard Disk Upgrade . . . . .	61

---

## External Monitor

### External Monitor

To show graphical effects on a larger display, connect an external monitor to the CRT port. Read the monitor manual for additional instructions.

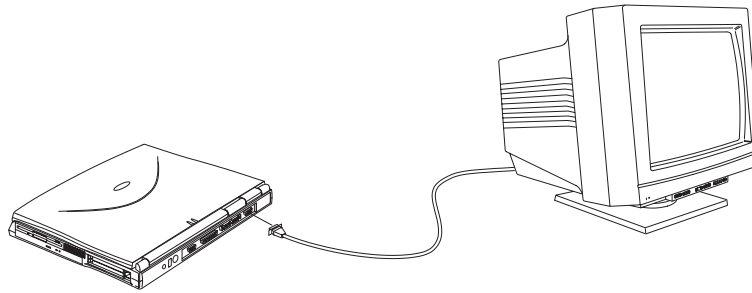

**Note:** If an external monitor is not connected, closing the display cover puts the computer into standby mode.

### Using Dual Display

Your computer takes advantage of Windows 98 multi-display capability, allowing you to expand your desktop to an external display device. This gives you more desktop space to work on.

To use dual display, you can choose to connect other output display devices to the computer through the CRT port. The port is especially useful for presentations and entertainment as it allows you to display your computer output to a television monitor or LCD projector and to extend it with dual display enabled.

## External Monitor

### Enabling Dual Display

To enable and set dual display options, follow these steps:

1. Click on **Start, Settings....**, then **Control Panel**.
2. Double-click on **Display**.
3. Click on the **Settings** tab.

The Display Properties window shows two display devices, labeled **1** and **2**. Typically, 1 would refer to your computer LCD and 2 to the external device.

4. Set these display devices individually by first clicking on the desired device, then clicking on the different tabs to set display properties for that device.
5. Click on display device **2**.
6. Click *Extend my Windows desktop onto this monitor* to enable dual display.



---

**Note:** *The dual display function of the display controller must be enabled (which is true by default) for dual display to work properly. This feature is enabled or disabled in the **NeoMagic** tab when you click on **Advanced...** in the Settings tab of the Display Properties window.*

---


7. Click on **OK**.

## *External Keyboard*

### **External Keyboard**

This computer has a keyboard with full-sized keys and an embedded keypad. If you feel more comfortable using a desktop keyboard, you can install a PS/2-compatible external keyboard.


To connect an external keyboard, plug the external keyboard into the PS/2 connector.

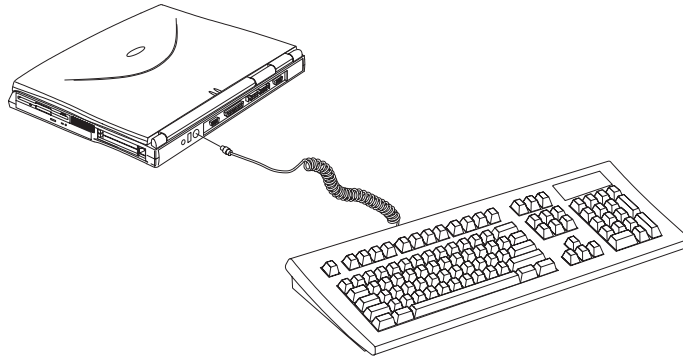

## *External Keypad*

### **External Keypad**

You can also use a 17-key numeric keypad for number-sensitive, data-entry applications. To connect the keypad, plug the keypad connector into the PS/2 port.

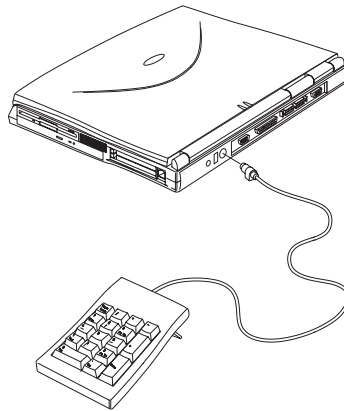

## External Pointing Device

### External Pointing Device


This computer accepts either a PS/2-compatible or serial mouse or similar pointing device.



**Note:** When using an external mouse, you may choose to disable the internal touchpad by pressing Fn-F7.

### External PS/2 Mouse

The built-in touchpad works alternately with an external PS/2 mouse which is hot-pluggable. To use a PS/2-compatible mouse, simply plug it into the PS/2 port.

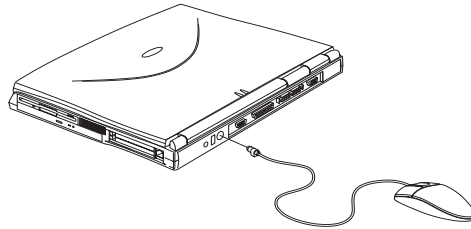




## *External Pointing Device*

### **External Serial Mouse**

If you use a serial mouse, plug it into the serial port.

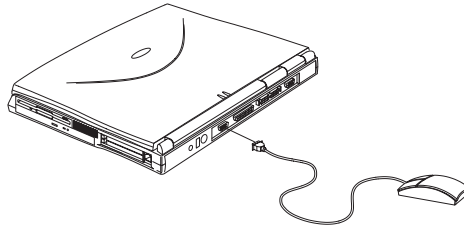


To enable the serial mouse, use the Add New Hardware tool in the Windows Control Panel.

## Printer

### Printer

This computer supports both serial and parallel printers. For a serial printer, plug the printer cable into the serial port. For a parallel printer, plug the printer cable into the parallel port. See your printer manual for operating instructions.

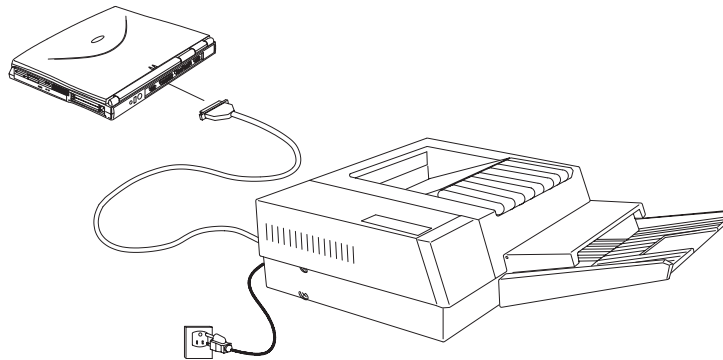


**Note:** If the printer does not function, enter *Setup* and verify that the parallel port is enabled. See “Onboard Devices Configuration” on page 97 for assistance.

## *Audio Devices*

### **Audio Devices**

Audio devices are easy to connect with the audio ports accessible from the front of the computer. You can plug an external microphone into the microphone-in jack or an audio line-in device into the audio line-in jack. Amplified speakers or headphones connect to the speaker/headphone-out jack.

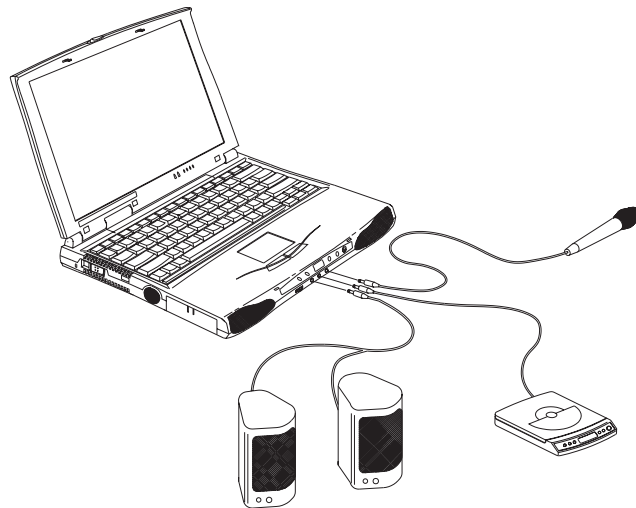


## Port Replicator

### Port Replicator

For one-step connection and disconnection from your peripherals, use the optional full-featured port replicator. This port replicator includes all the ports on your computer and adds a few more.

With the port replicator, you can easily use external devices, such as an external monitor, a printer, a keyboard, or a mouse, with your computer without connecting and disconnecting them to your computer. You only need to connect these devices to the port replicator, then “dock” your computer to the port replicator to make use of these devices.

Refer to the easy-to-use quick reference and installation guide that comes with the port replicator.

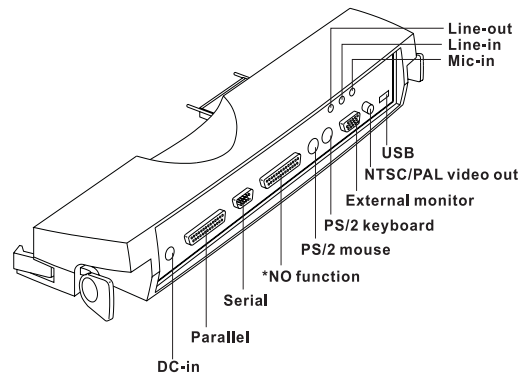

Ports on the Port Replicator

## *PC Cards*

### **PC Cards**


The computer has two CardBus PC card slots that accommodate two type I/II or one type III PC card(s). Please consult your dealer for PC card options available that you can purchase for your computer.

## *USB Devices*

### **USB Devices**

The computer has a USB (Universal Serial Bus) port that allows you to connect peripherals without occupying too many resources. Common USB devices include the mouse and keyboard.

Most USB devices also include a built-in USB port connector which allows you to daisy-chain other USB devices.

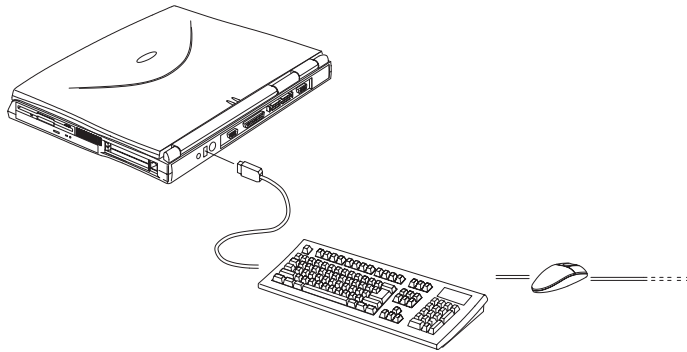

## Miscellaneous Options

### Miscellaneous Options

#### Additional Power Packs

You can order spare batteries and an AC adapter.

##### Battery Pack

It is a good practice to have a spare battery around, especially when you travel. The Lithium-Ion battery, coupled with the power management features of your computer, supplies you with more power on-the-go.

##### AC Adapter

The compact AC adapter charges your battery pack and supplies power to your computer. You can order a spare AC adapter so you do not need to carry it from the office to your home or destination.

#### Cables

##### PS/2 Y-Bridge Cable

The PS/2 Y-bridge cable allows you to connect two PS/2 devices, mouse and keyboard, to your computer simultaneously.




---

**Note:** *The keyboard must be connected to the connector marked keyboard and the mouse must be connected to the connector marked mouse.*

---


## Miscellaneous Options

Connect the single connector end of the Y-bridge cable to the computer's PS/2 port and the double connector ends to the two PS/2 devices.

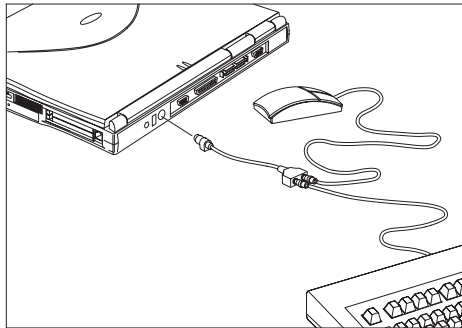

### File Transfer Cable

Besides using the infrared port, you can also transfer files between computers using a file transfer cable. Connect the file transfer cable between the parallel ports of the two computers and use your file transfer utility to perform the transfer.

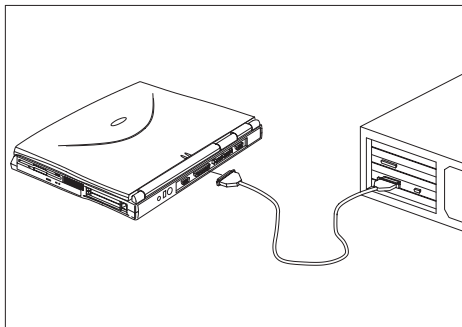



## Key Component Upgrades

### Key Component Upgrades

Your computer delivers superior power and performance. However, some users and the applications they use may demand more. This computer allows you to upgrade key components when you need increased performance.



**Note:** Contact your authorized dealer if you decide to perform a key component upgrade.

### Memory Upgrade

Memory is upgradeable from 32 to 256 MB, employing 32-/64-/128 MB 64-bit Synchronous Dynamic Random Access Memory (SDRAM) soDIMMs (Small Outline Dual Inline Memory Modules).

### Memory Configurations

The following table lists the possible memory configurations:

DIMM 1	DIMM 2	Total Memory
32 MB	0 MB	32 MB
32 MB	32 MB	64 MB
32 MB	64 MB	96 MB
32 MB	128 MB	160 MB
64 MB	0 MB	64 MB
64 MB	32 MB	96 MB
64 MB	64 MB	128 MB
64 MB	128 MB	192 MB

## Key Component Upgrades

DIMM 1	DIMM 2	Total Memory
128 MB	0 MB	128 MB
128 MB	32 MB	160 MB
128 MB	64 MB	192 MB
128 MB	128 MB	256 MB


### Installing Memory

Follow these steps to install memory:

1. Turn off the computer, unplug the AC adapter (if connected) and remove the battery pack. Then turn the computer over to access its base.
2. Remove the screws from the memory door; then lift up and remove the memory door.
3. Insert the memory module diagonally into the slot, then gently press down until it clicks into place.

## Key Component Upgrades

4. Replace the memory door and secure it with the screws.

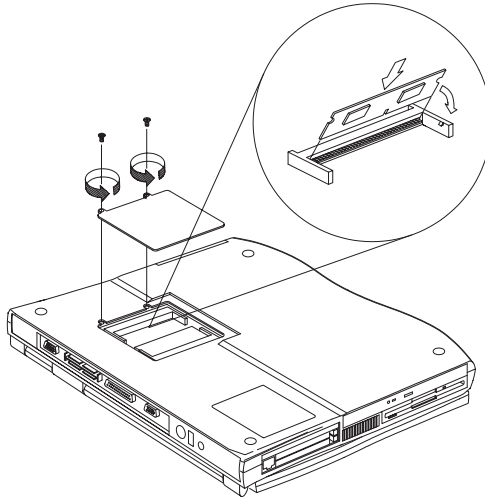

The computer automatically detects and reconfigures the total memory size.

### Hard Disk Upgrade

It is possible to upgrade your hard disk with a higher capacity drive when you need more storage space. The computer uses a 12.7mm or 9.5mm 2.5-inch Enhanced-IDE hard disk. Please consult your dealer if you need to upgrade your hard disk.

***Key Component Upgrades***

## 4

# Moving with your Computer

---

This chapter gives you tips and hints on things to consider when moving around or traveling with your computer.

### Contents

Disconnecting from the Desktop . . . . .	64
Moving Around . . . . .	65
Preparing the Computer . . . . .	65
What To Bring to Short Meetings . . . . .	65
What To Bring to Long Meetings . . . . .	65
Taking the Computer Home . . . . .	66
Preparing the Computer . . . . .	66
What To Bring with You . . . . .	66
Special Considerations . . . . .	66
Setting Up a Home Office . . . . .	67
Traveling with the Computer . . . . .	68
Preparing the Computer . . . . .	68
What To Bring with You . . . . .	68
Special Considerations . . . . .	68
Traveling Internationally with the Computer . . . . .	69
Preparing the Computer . . . . .	69
What To Bring with You . . . . .	69
Special Considerations . . . . .	69

## *Disconnecting from the Desktop*

### Disconnecting from the Desktop

Follow these steps to disconnect your computer from external accessories:

- 1.** Save your work in progress.
- 2.** Shut down the operating system.
- 3.** Turn off the computer.
- 4.** Disconnect the cord from the AC adapter.
- 5.** Disconnect the keyboard, pointing device, printer, external monitor, and other external devices.

If your external devices are connected to the optional port replicator, disconnect the notebook from the port replicator. You do not need to disconnect the external devices from the port replicator.

- 6.** Disconnect the Kensington lock if you are using one to secure the computer.

## ***Moving Around***

### **Moving Around**

*when you are just moving within short distances, for example, from your office desk to a meeting room*

#### **Preparing the Computer**

Before moving the computer, close and latch the display cover to place it in Standby mode. You can now safely take the computer anywhere you go within the building.

To bring the computer out of Standby mode, open the display.

#### **What To Bring to Short Meetings**

A fully charged battery runs the computer for 2-3 hours under most circumstances. If your meeting is shorter than that, you probably do not need to bring anything with you other than the computer.

#### **What To Bring to Long Meetings**

If your meeting will last longer than 3 hours or if your battery is not fully charged, you may want to bring the AC adapter with you to plug in your computer in the meeting room.

If the meeting room does not have an electrical outlet, reduce the drain on the battery by putting the computer in standby mode. Press Fn-F3 or close the display cover whenever you are not actively using the computer. Then tap any key or open the display to resume.

## Taking the Computer Home

### Taking the Computer Home

*when you are moving from your office to your home or vice versa*

#### Preparing the Computer

After disconnecting the computer from your desktop, follow these steps to prepare the computer for the trip home:

1. Remove all media from the drives. Failure to remove the media can damage the drive head.
2. Pack the computer in a protective case that can prevent the computer from sliding around and cushion it if it should fall.



**Caution: Avoid packing items next to the top cover of the computer. Pressure against the top cover could damage the screen.**

#### What To Bring with You

Unless you already have some items at home, bring the following items with you:

- AC adapter and power cord
- The printed user's manual

#### Special Considerations

Follow these guidelines to protect your computer while traveling to and from work:

- Minimize the effect of temperature changes by keeping the computer with you.



## *Taking the Computer Home*

- ❑ If you need to stop for an extended period of time and cannot bring the computer with you, leave the computer in the trunk of the car to avoid exposing the computer to excessive heat.
- ❑ Changes in temperature and humidity can cause condensation. Allow the computer to return to room temperature, and inspect the screen for condensation before turning on the computer. If the temperature change is greater than 18°F (10°C), allow the computer to come to room temperature slowly. If possible, leave the computer for 30 minutes in an environment with a temperature between outside and room temperature.

### Setting Up a Home Office

If you frequently work on your computer at home, it may be worthwhile to purchase a second AC adapter for use at home. With a second AC adapter, you can avoid transporting the extra weight to and from home.

If you use your computer at home for significant periods of time, you might also want to add an external keyboard, monitor, or mouse.

## *Traveling with the Computer*

### Traveling with the Computer

*when you are moving within a larger distance, for instance, from your office building to a client's office building or traveling locally*

#### Preparing the Computer

Prepare the computer as if you were taking it home. Be sure the battery in the computer is charged. Airport security may require you to turn on your computer when bringing it into the gate area.

#### What To Bring with You

Bring the following items with you:

- AC adapter
- Spare, fully-charged battery packs
- Additional printer driver files if you plan to use another printer

#### Special Considerations

In addition to the guidelines for taking the computer home, follow these guidelines to protect your computer while traveling:

- Always take the computer as carry-on luggage.
- If possible, have the computer inspected by hand. The computer can safely pass through security X-ray machines, but never expose the computer to a metal detector.
- Avoid exposing floppy disks to hand-held metal detectors.

## ***Traveling Internationally with the Computer***

### **Traveling Internationally with the Computer**

*when you are moving from country to country*

#### **Preparing the Computer**

Prepare the computer as you would normally prepare it for traveling.

#### **What To Bring with You**

Bring the following items with you.

- AC adapter
- Power cords that are appropriate to the country to which you are traveling
- Spare, fully-charged battery packs
- Additional printer driver files if you plan to use another printer
- Proof of purchase, in case you need to show it to customs officials
- International Traveler's Warranty passport

#### **Special Considerations**

Follow the same special considerations as when traveling with the computer. In addition, these tips are useful when traveling internationally.

- When traveling in another country, check that the local AC voltage and the AC adapter power cord specifications are compatible. If not, purchase a power cord that is compatible with the local AC voltage (e.g., power rating). Do not use converter kits sold for appliances to power the computer.

## *Traveling Internationally with the Computer*

- If you are using the modem, check if the modem and connector is compatible with the telecom system of the country you are traveling in.

# 5

## Software

---

This chapter discusses the important system utilities bundled with your computer.

### Contents

System Software . . . . .	72
Sleep Manager . . . . .	73
Accessing the Sleep Manager . . . . .	74
Sleep Manager Functions . . . . .	76
Create . . . . .	76
Remove . . . . .	78
Minimize . . . . .	78
Exit . . . . .	78
Notebook Manager . . . . .	80
Information Viewer . . . . .	81
POST . . . . .	82
Boot Sequence . . . . .	83
Password . . . . .	84
Setting the Power-On Password . . . . .	85
Setting the Setup Password . . . . .	86
Power Management . . . . .	87
Display Device . . . . .	89
BIOS Utility . . . . .	91
Navigating the BIOS Utility . . . . .	91
System Information . . . . .	92
Basic System Configuration . . . . .	94
Startup Configuration . . . . .	95
Onboard Devices Configuration . . . . .	97
System Security . . . . .	99
Setting a Password . . . . .	100
Changing a Password . . . . .	101
Removing a Password . . . . .	101
Password Icons . . . . .	101
Power Management . . . . .	103
Load Default Settings . . . . .	105

## System Software

### System Software

The computer comes preloaded with the following software:

- Windows operating system
- DMI (Desktop Management Interface)-compliant hardware BIOS utility
- System utilities, drivers and application software



**Note:** To access Windows software applications, click on the Start button and select the application folder. Then click on the application icon to run the selected application. To learn about the software and utility, make use of the online help provided by the software.

## Sleep Manager

### Sleep Manager

Most notebook computers feature built-in power-saving functions. This computer has two power management modes, Standby and Hibernation.

While Standby puts your computer into a light sleep state, Hibernation shuts off all power after saving the current state of your computer. The next time you slide the power switch, the computer resumes from where you left off.

Sleep Manager allows your computer to perform these power-saving functions.



**Note:** See “Power Management” on page 40 to understand how your computer saves and manages power.

Sleep Manager is a utility that works with your computer's BIOS and Windows APM (Advanced Power Management) to manage the Hibernation operation. This includes:

- creating the Hibernation file which contains the current state of the computer
- checking if the Hibernation file is valid
- saving and loading the contents of the Hibernation file when entering to and resuming from Hibernation mode

The Hibernation file resides in a contiguous area on your hard disk.

Sleep Manager can automatically create, recover, and reallocate space for the Hibernation file. If the system memory size changes or the Hibernation file on the hard disk is corrupted, Sleep Manager reallocates the hard disk space for you automatically.


## *Sleep Manager*

### Accessing the Sleep Manager

There are two ways to bring up the Sleep Manager.

On the Taskbar

The computer automatically loads Sleep Manager every time you start Windows. Sleep Manager resides in the background and the Sleep Manager status icon appears on the taskbar.

Double-click on the Sleep Manager status icon (  ), if enabled, to bring up the main Sleep Manager program.

The Sleep Manager icon may or may not appear on the taskbar. A checkbox in the Sleep Manager main screen determines whether to enable or disable the icon on the taskbar.

This icon shows the current status of the Hibernation feature. The icon changes to tell you if the feature is valid or not. Resting your cursor on the icon also shows the status.

Start menu

1. Click on the **Start** button.
2. Select **Programs**.
3. Select **Sleep Manager**.
4. Select the **Sleep Manager** program.



## Sleep Manager

The Sleep Manager displays the screen below:



Item	Description
Buttons	Click to access the Sleep Manager functions
Current Setting	Displays the drive and size of the current reserved space created by Sleep Manager.
On Board Information	<p>Displays the different areas of system memory and their respective sizes. These system resources need to be stored before the computer can enter Hibernation mode, so that the computer can resume successfully.</p> <p>These resources are the contents of:                      Onboard memory (DRAM or dynamic memory), Video RAM (VRAM or video memory), SMRAM (static memory), and Others.</p> <p>The total size of these resources shows as the recommended size in the dialog box.</p>
Recommended Size	Displays the minimum size of the contiguous space you need for the Hibernation feature. The actual size may be a little bit more due to file system alignment.


## Sleep Manager

Item	Description
Enable Indicator in the Taskbar	When this checkbox is checked, the Sleep Manager status appears on the taskbar. Double-click on the Sleep Manager status icon on the taskbar to bring up the main program, or simply rest your cursor on the icon to display the current status.

### Sleep Manager Functions

#### Create

Sleep Manager automatically finds a contiguous area on your hard disk and creates the Hibernation file in this space. You can also perform this function by clicking on the **Create** button. When you click on the **Create** button, a dialog box pops up:

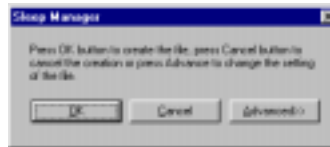

Select **OK** to automatically create the Hibernation file. Sleep Manager displays the recommend size based on onboard system information. You can also choose **Advanced>>>** to manually set the space settings and size. The advanced screen shown below appears.

## Sleep Manager



Sleep Manager automatically checks the system configuration and displays the recommended size. The drive where the space will be created is defined by the system and will be the first available logical drive which has the requested contiguous free disk space on it. The recommended size is the minimum size needed to save the current system status.

If the program cannot find the required space on the hard disk during the space creation process, it shows a message box to inform the user.

### *Not Enough Space for Allocation*

This is an error message that may appear when Sleep Manager is creating the hibernation file. There are several different reasons that may cause this error.

One reason is that the size of the free disk space on your hard disk is less than the required size. For example, if the onboard memory is 32MB and the video memory is 2.5MB, the total free disk space required will be around 34.5MB. If the total free disk space is less than this, the user has to free up space on his hard disk.

## *Sleep Manager*

Another possible reason is that the hard disk has enough free space, but this free space exists as small fragments. The free disk space that Sleep Manager requires needs to be contiguous. To solve this problem, use tools such as Disk Defragmenter (Windows) to compact these free disk spaces. Then run Sleep Manager again to create the file.

One other factor that causes the error is when disk compression utilities are used. Sleep Manager can work with most compression software. However, Sleep Manager can only create the space on a host drive. A host drive stores original file information and cannot be compressed. The free space on the host drive is usually very small, so the compression software needs to be run again to enlarge the size of the host (uncompressed) drive for Sleep Manager.

### Remove

If you want to use or take back the reserved space, click on the **Remove** button. This will disable the Hibernation feature. Instead, the computer will only be able to enter standby mode.

### Minimize

Minimize Sleep Manager by selecting the **Minimize** button. If the Enable indicator in the taskbar box is checked, Sleep Manager will switch to the background by locating itself on the taskbar. You can pop-up Sleep Manager again by double-clicking on this icon.

### Exit

Exit Sleep Manager by selecting the **Exit** button. Sleep Manager will quit and disable the capability of auto-adjusting the reserved space size. Exiting Sleep Manager is **NOT** recommended.

## *Sleep Manager*



**Note:** Do not deactivate (remove or exit) or uninstall Sleep Manager. Do not remove or delete the Hibernation file. Hibernation will not work without Sleep Manager and the Hibernation file.

## Notebook Manager

### Notebook Manager

The computer has a built-in system setup program called Notebook Manager. The Windows-based Notebook Manager allows you to set passwords, the startup sequence of the drives and power management settings. It also shows current hardware configurations.



**Note:** *Certain hotkey functions are disabled when you access Notebook Manager because those functions are also found in the Notebook Manager.*

To start the Notebook Manager, press **Fn-F2** or follow these steps:

1. Click on **Start, Programs, then Notebook Manager.**
2. Select the **Notebook Manager** application to run the program.



**Note:** *Changes made to most settings in the Notebook Manager take effect the next time the computer restarts. If you make changes in the Power Management and Display Device screens, these changes take effect immediately.*

Notebook Manager consists of six sections:

- Information Viewer
- POST
- Boot Sequence
- Password
- Power Management (Option displayed on the Windows 98 ACPI<sup>1</sup> setup screen)
- Display Device

<sup>1</sup> Will be supported in the future.

## Notebook Manager

To select a section, click on the tab of the section you want to view.

### Information Viewer

Information Viewer summarizes and lists information about the specifications and settings of the different components of your computer.



**Note:** Items in this table may differ slightly from the ones on-screen.


Item	Description
CPU	Brand, type and clock speed of the CPU (Central Processing Unit)
Total Memory	Total amount of main memory (in megabytes)
Video RAM	Total amount of video memory (in megabytes)
Hard Disk	Size of hard disk (in megabytes)

## Notebook Manager

Item	Description
CD-ROM or DVD-ROM	Detects presence of the CD-ROM or DVD-ROM drive
Serial Port 1	Resource settings of serial port 1
Parallel Port	Resource settings of the parallel port
Internal Cache	Detects presence and total amount of internal cache memory (in kilobytes)
External Cache	Detects presence and total amount of external cache memory (in kilobytes)
TouchPad	Detects the presence and setting of the internal pointing device
Pointing Device	Type(s) of the pointing device(s) detected, internal and external

## POST

POST defines how the computer behaves during the Power-On Self-Test routines.

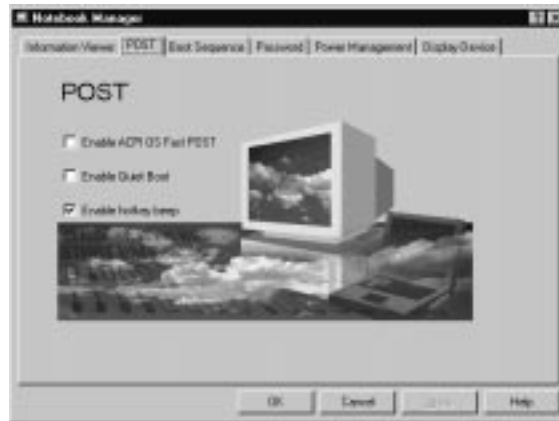



## Notebook Manager

This screen includes the following settings:

- Enable ACPI OS Fast POST
- Enable Quiet Boot. Select to hide POST startup messages, instead displaying the TravelMate computer logo.
- Enable hotkey beep. Select to enable the computer to emit a beep when a hotkey (or key combination) is pressed.

### Boot Sequence

Boot Sequence defines the boot sequence to follow when your computer boots up.



This screen allows you to use Drag and Drop to Change the Order to set the boot sequence of your computer. Options include:

- Floppy Drive. The computer searches for a bootable diskette in the floppy drive. If no bootable diskette is found, the computer boots from the hard disk.
- CD-ROM/or DVD-ROM Drive. The computer searches

## Notebook Manager

for a bootable CD-ROM in the CD-ROM or DVD-ROM drive and boots from there. If no bootable CD is present, the computer boots from the hard disk.

- IDE Hard Drive. The computer boots directly from the hard drive.

Make your selection and click on **Apply** to activate the setting.

### Password

Password is used to set, modify or delete the password(s) for your computer.



There are two passwords used in the system:

- Power-On Password. The Power-On password prevents unauthorized access to the computer during system startup and at resume from Standby/Hibernation modes or an elapsed system resume timer.
- Setup Password. The Setup password prevents unauthorized access to the computer's BIOS Utility.

## Notebook Manager

### Setting the Power-On Password

To set the Power-On Password, follow these steps:

1. Click on the Change Power-On Password button. The following dialog box displays:



2. Click on the Enable Power-On Password checkbox.
3. Click in the New Password textbox and type in up to seven alphanumeric characters (A-Z, a-z, 0-9) which you want to be your Power-On password.
4. Click in the Confirm Password textbox and retype the password.
5. Click on **OK** to accept the setting.



**Note:** To change a password, follow the same steps used to set a password. To remove a password, follow the same steps used to set a password but leave both fields blank.

## Notebook Manager

### Setting the Setup Password

To set the Setup password, follow these steps:

1. Click on the Change Setup Password button.



2. Click on the Enable Setup Password checkbox.
3. Click in the New Password textbox and type in up to seven alphanumeric characters (A-Z, a-z, 0-9) which you want to be your Setup password.
4. Click in the Confirm Password textbox and retype the password.
5. Click on **OK** to accept the setting.



**Note:** To change a password, follow the same steps used to set a password. To remove a password, follow the same steps used to set a password but leave both fields blank.

## *Notebook Manager*

### Power Management

Power Management is used to set various settings related to power management. Below are the screen shots of Windows 95,



and Windows 98.



## ***Notebook Manager***

This includes the following power-saving-related features:

- Enable battery low warning beep.** Select to allow the computer to give off warning beeps when the computer runs low on battery.
- Enable sleep upon battery low.** Select to allow the computer to enter Standby or Hibernation mode when the computer runs low on battery.
- Enable system resume timer.** Select to allow the computer to wake-up from Standby or Hibernation mode if the resume timer is set and matched.
- System Resume Timer.** When Enable system resume timer is selected, click on the button to set the system resume timer.
- Enable APM mode.** In Windows 95, when this box is checked the options in the Advanced Power Management Mode are enabled.
- Advanced.** Selecting this options enables the user to assign a function to the LID switch, hotkey (Fn+F4) and the power switch. The options available for LID switch are: No Action, Standby, Hibernate and Shut down, while the options available for the hotkey and power switch are: Standby, Hibernate and Shut down.

## Notebook Manager

### Display Device

Display Device is used to control various settings related to the display device(s), such as the display brightness/contrast levels.



The items in this screen include:

- Boot Display Device.** Sets the default display device on boot-up.
- Switching display device.** Sets the current display device.



---

**Note:** Make sure an external monitor is connected before External monitor is selected.

---

- Brightness for LCD Panel.** Click and drag to set the LCD screen brightness and contrast levels.



---

**Note:** TFT active-matrix LCDs have fixed and optimized contrast levels.

---

## *Notebook Manager*

Click on the radio button of the desired item, then click on **Apply** to accept. To modify the brightness and/or contrast levels, click and hold the slider control and move to the right to increase or move to the left to decrease the setting. You can also click on the item and use the cursor keys to set the desired level.




**BIOS Utility****BIOS Utility**

The BIOS Utility is a hardware configuration program built into your computer's BIOS (Basic Input/Output System).

Your computer is already properly configured and optimized, and you do not need to run this utility. However, if you encounter configuration problems, you may need to run Setup. Please also refer to Chapter 6, Troubleshooting when a problem arises.

To activate the BIOS Utility, press **F2** during POST while the TravelMate logo is being displayed.

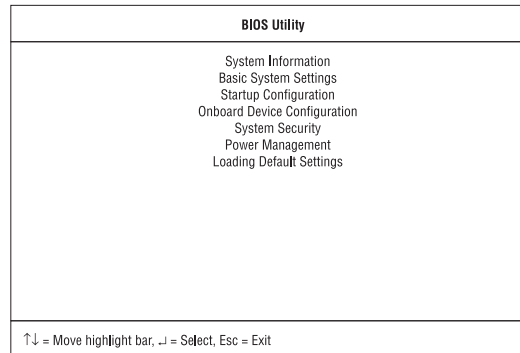**Navigating the BIOS Utility**

There are seven menu options: System Information, Basic System Settings, Startup Configuration, Onboard Device Configuration, System Security, Power Management and Load Default Settings.

To enter a menu, highlight the item using the ↑↓ keys; then press **Enter**.

Within a menu, navigate through the BIOS Utility by following these instructions:

- Press the cursor up/down keys (↑↓) to move between

## BIOS Utility

parameters.

- Press the cursor left/right keys (←/→) to change the value of a parameter.
- Press **Esc** while you are in any of the menu options to return to the main menu.



**Note:** You can change the value of a parameter if it is enclosed in square brackets.

**Note:** Navigation keys for a particular menu are shown on the bottom of the screen.

## System Information

The System Information screen displays a summary of your computer hardware information.

System Information		Page 1/1
CPU Type & Speed	[Celeron 300 Mhz]	
Floppy Disk Drive	[1.44 MB 3.5-inch]	
Hard Disk (MB)	[3250 MB]	
HDD Serial Number	[XXXXXXXXXXXXXXXXXXXX]	
System with	[CD-ROM Attached]	
System BIOS Version	[V1.0 R01-A1]	
VGA BIOS Version	[V1.0 R01-A1]	
Serial Number	[XXXXXXXXXXXXXXXXXXXXXXXXXXXX]	
Asset Tag Number	[XXXXXXXXXXXXXXXXXXXXXXXXXXXX]	
Product Name	[XXXXXXXXXXXXXXXXXXXXXXXXXXXX]	
Manufacturer Name	[XXXXXXXXXXXXXXXXXXXX]	
UUID	[XXXXXXXX-XXXX-XXXX-XXXX-XXXXXXXXXXXX]	

↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help

The following table describes the parameters in this screen. Settings in boldface are the default and suggested parameter settings.

Parameter	Description
CPU	Describes the type of CPU installed in the system.

**BIOS Utility**

Parameter	Description
Floppy Disk Drive	Shows the floppy disk drive type (1.44MB 3.5-inch).
Hard Disk (MB)	Sets the hard disk type.
HDD Serial Number	Shows the hard disk drive serial number.
System with	Shows the high-capacity disc drive installed. Options: <b>CD ROM</b> , or DVD ROM.
System BIOS Version	Shows the system BIOS version.
VGA BIOS Version	Shows the video graphics accelerator BIOS version.
Serial Number	Shows the serial number of the system.
Asset Tag Number	Shows the asset tag number.
Product Name	Shows the official name of the product.
Manufacturer Name	Shows the name of the manufacturer.
UUID	Shows the universally unique identifier number.

## BIOS Utility

### Basic System Configuration

The Basic System Configuration screen contains parameters involving basic computer settings like date and time.

```
Basic System Configuration Page 1/1

Date----- [Mon Aug 28, 1998]
Time----- [12:00:00]

↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help
```

The following table describes the parameters in the screen. .

Parameter	Description
Date	Sets the system date. Format: DDD MMM DD YYYY (day-of-the-week month day year)
Time	Sets the system time. Format: HH:MM:SS (hour:minute:second)

**BIOS Utility****Startup Configuration**

The Startup Configuration screen contains parameters that are related to computer startup.

Startup Configuration		Page 1/1
Boot Display -----	[AUTO]	
USB Function Support -----	[Disabled]	
Holkey Beep -----	[Enabled]	
ACPI OS Fast POST-----	[Disabled]	
Quiet Boot -----	[Enabled]	
PnP OS -----	[Enabled]	
Boot Drive Sequence:		
1st -----	[CD-ROM]	
2nd -----	[Floppy Disk]	
3rd -----	[Hard Disk]	
↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help		

The following table describes the parameters in this screen. Settings in boldface are the default and suggested parameter settings.

Parameter	Description
Boot Display	Sets the display on boot-up. When set to Auto, the computer automatically determines the display device. If an external display device (e.g., monitor) is connected, it becomes the boot display; otherwise, the computer LCD is the boot display. When set to Both, the computer outputs to both the computer LCD and an external display device if one is connected. Options: <b>Auto</b> or Both
USB Function Support	Enables or disables the USB (Universal Serial Bus) function. Options: <b>Disabled</b> or Enabled

## BIOS Utility

Parameter	Description
Hotkey Beep	When enabled, the computer gives off a beep when a hotkey (key combination is pressed). See "The Euro Symbol" on page 12 for details on hotkeys. Options: <b>Enabled</b> or Disabled
ACPI OS Fast Boot	When set to enabled, the Quiet Boot and the PnP OS is disabled or inactive. Options: <b>Enabled</b> or Disabled
Quiet Boot	When set to enabled, the system will boot to the OS as fast as possible and proceed quickly through POST. This mode will not show any boot progression messages, nor will it perform any memory and diagnostic test. Options: <b>Enabled</b> or Disabled
PnP OS	Set it to Enabled if the computer works on Win95, Win98, or Win NT 5.0. For any other OS, set it to Disabled. Options: <b>Enabled</b> or Disabled
Boot Drive Sequence	Allows you to set the sequence wherein the computer will boot 1st, 2nd, and so on. Below are possible boot devices.
Boot from CD-ROM or DVD-ROM	Enables boot-up from the CD-ROM or DVD-ROM drive, if selected as the first option. The computer attempts to boot from the CD-ROM or DVD-ROM drive (looks for a bootable CD-ROM) before following the boot sequence specified in the Boot Drive Sequence.
Floppy	Enables boot-up from the floppy disk drive, if selected as the first option. The computer attempts to boot from the floppy disk drive (look for a bootable floppy) before following the boot sequence specified in the Boot Drive Sequence.

**BIOS Utility**

Parameter	Description
Hard Disk	Enables boot-up from the hard disk drive.

**Onboard Devices Configuration**

The Onboard Devices Configuration screen contains parameter settings for your hardware connection devices.

Onboard Device Configuration		Page 1/1
Serial Port	[Enabled]	
Base Address	[3F8h]	
IRQ	[4]	
Infrared Port	[Disabled]	
Base Address	[2F8]	
IRQ	[3]	
DMA Channel	[3]	
Parallel Port	[Enabled]	
Base Address	[378h]	
IRQ	[7]	
Operation Mode	[ECP]	
ECP DMA Channel	[1]	

↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help



**Caution: The parameters in this screen are for advanced users only. You do not need to change the values in this screen because these values are already optimized.**

The following table describes the parameters in this screen. Settings in boldface are the default and suggested parameter settings.

Parameter	Description
Serial Port	Enables or disables the serial port. Options: <b>Enabled</b> or Disabled
Base Address	Sets the I/O address of the serial port. Options: <b>3F8h</b> , 2F8h, 3E8h or 2E8h

## BIOS Utility

Parameter	Description
IRQ	Sets the interrupt request of the serial port. Options: <b>4</b> or 11
Infrared Port	Enables or disables the infrared port. Options: <b>Disabled</b> or Enabled
Base Address	Sets the I/O address of the infrared port. Options: <b>2F8</b> , 3F8, 3E8 or 2E8
IRQ	Sets the interrupt request of the infrared port. Options: <b>3</b> or 10
DMA Channel	Sets a DMA channel for the infrared port. Options: <b>3</b> or 1
Parallel Port	Enables or disables the parallel port. Options: <b>Enabled</b> or Disabled
Base Address	Sets the I/O address of the parallel port. Options: <b>378h</b> , 278h or 3BCh
IRQ	Sets the interrupt request of the parallel port. Options: <b>7</b> or 5
Operation Mode	Sets the operation mode of the parallel port. Options: <b>ECP</b> , EPP, Bi-directional or Standard
ECP DMA Channel	Sets a DMA channel for the printer to operate in ECP mode. This parameter is enabled only if Operation Mode is set to ECP. Options: <b>1</b> or 3



**BIOS Utility****System Security**

The System Security screen contains parameters that help safeguard and protect your computer from unauthorized use.

System Security		Page 1/1
Setup Password -----	[ None ]	
Power-on Password -----	[ None ]	
Hard Disk Password -----	[ None ]	
Disk Drive Control		
Floppy Drive Lockout -----	[ Disabled ]	
↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help		

The following table describes the parameters in this screen. Settings in boldface are the default and suggested parameter settings.

Parameter	Description
Setup Password	When set, this password protects the BIOS Utility from unauthorized entry. Options: <b>None</b> or Present
Power-on Passwords	When set, this password protects the computer from unauthorized entry during boot-up or resume from hibernation mode. Options: <b>None</b> or Present
Hard Disk Password	When set, this password prevents the internal hard disk from unauthorized access. It consists of 7 alphanumeric characters. Options: <b>None</b> or Present

## BIOS Utility

Parameter	Description
Disk Drive Control Floppy Drive Lockout	Controls the read/write access at the BIOS level. When set to enabled, this feature protects user's data by preventing unauthorized copying onto the floppy disk. Options: <b>Disabled</b> or Enabled

### Setting a Password

Follow these steps:

1. Use the ↑ and ↓ keys to highlight a password parameter (Setup, Power-on, or Hard Disk) and press the **Enter** key. The password box appears:

2. Type a password. The password may consist of up to seven alphanumeric characters (A-Z, a-z, 0-9).

---

**Important:** *Be very careful when typing your password because the characters do not appear on the screen.*

---

3. Press **Enter**. The retype password box appears.

 
4. Retype the password to verify your first entry and press **Enter**.

After setting the password, the computer automatically sets the chosen password parameter to Present.

5. Press **Esc** to return to the main menu.

**BIOS Utility**

6. Press **Esc**. The following dialog box appears.



7. Select **Yes** and press **Enter** to save the password and exit the BIOS Utility.

### Changing a Password



To change a password, follow the same steps used to set a password.

### Removing a Password





To remove a password, use the  $\uparrow$  and  $\downarrow$  keys to highlight a password parameter and press the "Enter" key as the first character.

### Password Icons

Below are the password icons and their descriptions:

Parameters	Description
Power-on Password Icon 	When set to present, prompts the user to input the correct password for the system to continue. It is shown after the TravelMate logo.
Hard Disk Password Icon 	When set to present, prompts the user to input the correct password for the hard disk to operate. It is shown after the Power-on Password Icon.

**BIOS Utility**

Parameters	Description
Password Character Icon 	When typing the characters of the password, the screen displays this icon for each character instead of the actual password character.
Wrong Password Icon 	If the wrong password is entered, this icon will be displayed beside the wrong password.
Successful Password Entry Icon 	If the password is correctly entered, this icon will be displayed beside the correctly entered password.
Failure Password Icon 	The system allows the user 3 chances to type the correct password. After the password has been incorrectly entered 3 times, this icon will be displayed together with a short message stating "system shut-down". The user then has to reboot the system to try to type the correct password again.

**BIOS Utility****Power Management**

The Power Management screen contains parameters that are related to power-saving and power management.

Power Management		Page 1/1
Advanced Power Management Mode -----	[Enabled]	
Turn Off Display- -----	[ 2 Min ]	
Turn Off Hard Disk -----	[ 3 Min ]	
System Standby -----	[ 5 Min ]	
System Hibernate After Standby-----	[ 5 Min ]	
System Resume Timer -----	[Disabled]	
Date -----	[ 04/28/98 ]	
Time -----	[ 12:00:00 ]	
Battery-Low Warning Beep-----	[Enabled]	
Sleep Upon Battery-Low-----	[Enabled]	

↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help

The following table describes the parameters in this screen. Settings in boldface are the default and suggested parameter settings.

Parameter	Description
Advanced Power Management Mode	Enables or disables advanced power management (Windows 95 only). See "Power Management" on page 40 for more information on power management modes. Options: <b>Enabled</b> or Disabled
Turn Off Display	Will blank the display screen after a set amount of inactivity time on the user input devices. This timer will reset when activity occurs on any keyboard, or pointing device. Options: Never, 1, <b>2</b> , 3, 5, 10 or 15 Minutes

## BIOS Utility


Parameter	Description
Turn Off Hard Disk	<p>Will "spin down" the hard disk after a set amount of inactivity on the disk interface. This timer will reset when activity occurs on any primary disk interface, or secondary disk interface.</p> <p>Options: Never, 1, 2, <b>3</b>, 5, 10, 15, 20, 25 or 30 Minutes</p>
System Standby	<p>The system will enter into System Standby mode after a set amount of inactivity time. The timer will be reset once there is activity in any of the following devices: keyboard, pointing devices, communication port, floppy and hard disk drives and bus master requests.</p> <p>Options: Never, 1, 2, 3, 5, 10, 15, 20, 25, 30, 45 or 60 Minutes</p>
System Hibernation After Standby	<p>The system will enter into Hibernation mode after a set amount of inactivity of time. Timer will be reset once there are activity in the following devices: Keyboard, pointing devices, communication port, floppy and hard disks drive and bus master requests.</p> <p>Options: Never, 1, 2, 3, <b>5</b>, 10, 15, 20, 25, 30, 45 or 60 Minutes</p>
System Resume Timer	<p>When enabled and the system resume date and time are valid, the computer resumes (wakes up) at the set time and date.</p> <p>Options: <b>Disabled</b> or Enabled</p>
Date	<p>Sets the date the computer resumes at if System Resume Timer is enabled.</p> <p>Format: month/day/year</p>
Time	<p>Sets the time the computer resumes at if System Resume Timer is enabled.</p> <p>Format: hour/minute/second</p>

## BIOS Utility

Parameter	Description
Battery-low Warning Beep	When enabled the system emits an audible warning beep when the unit is running low on battery. Options: <b>Enabled</b> or Disabled
Sleep Upon Battery-low	When enabled the system switches into Sleep mode when the unit is running low on battery. Options: <b>Enabled</b> or Disabled

### Load Default Settings

When you select this menu item, the following dialog box displays:

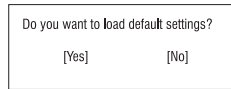

Do you want to load default settings?  
[Yes] [No]

To load factory-default settings for all the parameters, select **Yes** and press **Enter**. Otherwise, select **No** and press **Enter**.

***BIOS Utility***





# 6 Troubleshooting

---

This chapter instructs you on how to deal with common system problems. Read it before calling a technician if a problem occurs. Solutions to more serious problems require opening up the computer. Do not attempt to open the computer by yourself. Contact your dealer or an authorized service center for assistance.

## Contents

Frequently-Asked Questions . . . . .	108
Error Messages . . . . .	113
Troubleshooting Tips . . . . .	116
Online Services . . . . .	117



## Frequently-Asked Questions

### Frequently-Asked Questions

This is a list of possible situations that may arise during the use of your computer, and gives easy answers and solutions to these questions.

*I slid the power switch and opened the display, but the computer does not start or boot-up.*

Look at the Power indicator:

- If it is not lit, no power is being applied to the computer. Check the following:
  - If you are running on battery power, it may be low and unable to power the computer. Connect the AC adapter to recharge the battery pack.
  - Make sure the AC adapter is plugged in properly to the computer and to the power outlet.
- If it is lit, check the following:
  - If the Standby indicator is lit, the computer is in standby mode. Press any key or tap on the touchpad to resume.
  - Is a non-bootable (non-system) diskette in the floppy drive? Remove or replace it with a system diskette and press Ctrl-Alt-Del to restart the system.

The operating system files may be damaged or missing. Insert the startup disk you created during Windows setup into the floppy drive and press Ctrl-Alt-Del to restart the system. This will diagnose your system and make necessary fixes.

*Nothing appears on the screen.*

The computer's power management system automatically blanks the screen to save power. Press any key to turn the display back on.

## Frequently-Asked Questions

If pressing a key does not turn the display back on, two things might be the cause:

- The contrast and/or brightness level might be too low. Press Fn-↑ and Fn-↓ to adjust the contrast level (only for models with HPA LCDs). Press Fn-← and Fn-→ to adjust the brightness level.
- The display device might be set to an external monitor. Press the display toggle hot key Fn-F6 to toggle the display back to the computer.

*Image is not full-screen.*

Make sure the resolution is set to 800x600 or 1024x768 (subject to your LCD specification). Right-click on your Windows desktop and select Properties to bring up the Display Properties dialog box. Then click on the Settings tab to make sure the resolution is set to the appropriate resolution. Resolutions lower than the specified resolution are not full-screen on the computer or on an external monitor.

*No audio from the computer.*

Check the following:

- The volume may be muted. In Windows, look at the volume control icon on the taskbar. If it is crossed-out, click on the icon and deselect the Mute option.
- The speakers may be turned off. Press Fn-F8 to turn the speakers on (this hotkey also turns the speakers off).
- The volume level may be too low. In Windows, look at the volume control icon on the taskbar. Click on the icon and adjust the level. You can also use the volume control knob on the front panel of the computer to adjust the volume.

## Frequently-Asked Questions

If headphones, earphones or external speakers are connected to the line-out port on the computer's front panel, the internal speakers automatically turn off.


*External microphone or audio line-in device does not work.*

Check the following:

- Make sure the external microphone is connected to the microphone-in jack and/or the audio line-in device is connected to the audio line-in jack on the computer's front panel.
- If you cannot hear playback, the speakers may be muted.

*How do I eject the CD-ROM tray with the computer turned off?*

There is a mechanical eject button on the CD-ROM drive. Simply insert the tip of a pen or paperclip and push to eject the CD-ROM tray.

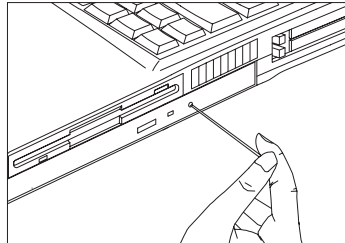

You can also turn on your CD-ROM drive without turning on the power. See "Playing Audio CDs" on page 29 for details.

## Frequently-Asked Questions

*The keyboard does not respond.*

Try attaching an external keyboard to the PS/2 connector on the computer's rear. If it works, contact your dealer or an authorized service center as the internal keyboard cable may be loose.

*The serial mouse does not work.*

Check the following:

- Make sure that the serial cable is plugged securely into the serial port.
- During POST, press **F2** to access the Setup Utility. Go to the Onboard Device Configuration screen and verify that the serial port is enabled. See "Onboard Devices Configuration" on page 97 for details.

*I prefer using an external keyboard and mouse, but both have PS/2 connectors and there is only one PS/2 port on the computer.*

To connect two PS/2-type devices to the computer, you need to use a PS/2 Y-bridge connector. See "PS/2 Y-Bridge Cable" on page 57 for details.

*The printer does not work.*

Check the following:

- Make sure that the printer is connected to a power outlet and it is turned on.
- Make sure the printer cable is connected securely to the computer's parallel port and the corresponding port on the printer.
- During POST, press **F2** to access the Setup Utility. Go to the Onboard Device Configuration screen and verify that the parallel port is enabled. See "Onboard Devices Configuration" on page 97 for details.

## ***Frequently-Asked Questions***

*I want to set up my location to use the internal modem.*

To properly use your communications software (e.g., HyperTerminal), you need to set up your location:

- 1.** Open the Windows Control Panel and double-click on the Modems icon.
- 2.** Click on Dialing Properties and begin setting up your location.

Refer to the Windows manual.

*Why can't I charge my battery to 100% charged when it is 99-95% charged?*

To preserve the life of the battery, the system only lets you charge the battery when its capacity falls below 95%. However, it is recommended that you bring an extra battery and let the battery in the system used up its power before charging it.

## Error Messages

### Error Messages

If you receive an error message, note the message and take the corrective action. The following table lists the error messages in alphabetical order together with the recommended course of action.

Error Messages	Corrective Action
CMOS Battery Bad	Contact your dealer or an authorized service center.
CMOS Checksum Error	Contact your dealer or an authorized service center.
Disk Boot Failure	Insert a system (bootable) diskette in the floppy drive (A:), then press <b>Enter</b> to reboot.
Diskette Drive Controller Error or No Controller Present	Contact your dealer or an authorized service center.
Diskette Drive Error	Contact your dealer or an authorized service center.
Diskette Drive Type Mismatch	Press <b>F2</b> (during POST) to enter the Setup Utility; then press <b>Esc</b> to exit and reconfigure the computer.
Equipment Configuration Error	Press <b>F2</b> (during POST) to enter the Setup Utility; then press <b>Esc</b> to exit and reconfigure the computer.
Hard Disk 0 Error	Contact your dealer or an authorized service center.
Hard Disk 0 Extended Type Error	Contact your dealer or an authorized service center.
I/O Parity Error	Contact your dealer or an authorized service center.

## Error Messages

Error Messages	Corrective Action
Insert system diskette and press <Enter> key to reboot	Insert a system (bootable) diskette in the floppy drive (A:), then press <b>Enter</b> to reboot.
Keyboard Error or No Keyboard Connected	Contact your dealer or an authorized service center.
Keyboard Interface Error	Contact your dealer or an authorized service center.
Memory Size Mismatch	Press <b>F2</b> (during POST) to enter the Setup Utility; then press <b>Esc</b> to exit and reconfigure the computer.
Missing operating system	Follow these steps: <ol style="list-style-type: none"> <li>1. Press <b>F2</b> (during POST) to enter the Setup Utility.</li> <li>2. Enter the Hard Disk 0 submenu and correct the Hard Disk 0 type. See the specification label attached to hard disk drive. We suggest you set the Hard Disk 0 type to [Auto] for hard disk drive auto-detection.</li> <li>3. Exit the Setup Utility (saving the changes).</li> </ol>
Non-system disk or disk error. Replace and strike any key when ready	Insert a system (bootable) diskette in the floppy drive (A:), then press <b>Enter</b> to reboot.
Pointing Device Error	Contact your dealer or an authorized service center.
Pointing Device Interface Error	Contact your dealer or an authorized service center.
Protected Mode Test Fail	Contact your dealer or an authorized service center.



## *Error Messages*

<b>Error Messages</b>	<b>Corrective Action</b>
RAM BIOS Bad	Contact your dealer or an authorized service center.
RAM Parity Error	Contact your dealer or an authorized service center.
Real-Time Clock Error	Press F2 (during POST) to reconfigure the computer.
Video RAM BIOS Bad	Contact your dealer or an authorized service center.

**If you still encounter problems after going through the corrective measures, please contact your dealer or an authorized service center for assistance. Some problems may be solved using the BIOS Setup Utility. See “BIOS Utility” on page 91.**

## *Troubleshooting Tips*

### Troubleshooting Tips

The TravelMate 510 series notebook computer incorporates an advanced design that delivers onscreen error message reports to help you solve problems. In addition, this series of notebook computers ship with PC-Doctor, a powerful diagnostic tool, that helps you determine hardware configuration and clarify hardware or software problems.

- If the system reports an error message or an error symptom occurs, See "Error Messages" on page 113.
- If you suspect the system has a problem, run PC-Doctor to diagnose it. See the following section.

### Using PC-Doctor

Before running the program, take note of the following actions you may need to take:

1. Disconnect any external devices (i.e., PC Cards, external mouse).
2. Open System Properties to check and make sure the components you diagnose are enabled.

To open the properties window for the system, click on **Start, Settings, Control Panel**, then double-click on **System**.

3. Close all application programs (i.e., fax or communication program) if you plan to diagnose the modem.

To run PC-Doctor, simply double-click on the **PC-Doctor** icon located on the Windows desktop. You can also access PC-Doctor by clicking on **Start, Programs, PC-Doctor**, then click on the **PC-Doctor** program.

## Online Services

If PC-Doctor does not report a system error, reinstall the software driver from the Recovery CD for the component you suspect has a problem. If you still have problems, you can access our online and internet technical support services. Please see the following section for details.

### Online Services

There are three ways to access Acer for technical support and information:

- Internet service worldwide, visit <http://www.acer.com>
- Online service in the United States and Canada, call 1-800-816-2237
- Technical support numbers in various countries

You can view a list of technical support numbers by clicking on **Start, Settings, Control Panel**, then double-click on **System**. Click on the **Support Information** button.

### Before you call

Please have the following information available when you call Acer for online service, and please be at your computer when you call. With your support, we can reduce the amount of time a call takes and help solve your problems efficiently.

- 1.** If there are error messages or beeps reported by your computer, write them down as they appear on the screen (or the number and sequence in the case of beeps).
- 2.** If you are able to run the PC-Doctor diagnostic tests, locate the log file by selecting **Windows, Test Log** in the PC-Doctor menu bar.
- 3.** If you haven't registered your notebook computer, you will be required to register during your first call to Acer. You are required to provide the following information:

***Online Services***

Name: \_\_\_\_\_

Address: \_\_\_\_\_  
\_\_\_\_\_

Telephone number: \_\_\_\_\_

Machine and model type: \_\_\_\_\_

Serial number: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

## A Specifications

---

This appendix lists the general specifications of your computer.

### *Microprocessor*

- Pentium® II processor with 256 KB level 2 cache
- Intel Celeron™ processor with 128 KB level 2 cache

### *Memory*

- 32MB main memory expandable to 256 MB
- Two 144-pin soDIMM sockets (SDRAM - Synchronous Dynamic Random Access Memory)
- 64-bit dual memory banks
- 256KB Flash ROM BIOS

### *Data Storage*

- One 3.5-inch internal floppy drive
- One high-capacity, Enhanced-IDE hard disk
- One 5.25-inch internal CD-ROM or DVD-ROM (Subject to local configuration) drive

### *Display and Video*

- 12.1-inch fast-response, high-contrast high-color High Performance Addressing (HPA) LCD, 12.1-inch high-color Thin Film Transistor (TFT) LCD or 13.3-inch TFT color LCD
  - 800x600 SVGA or 1024x768 XGA resolution
  - Integrated 256-bit AGP graphics accelerator and 2.5 MB video memory
  - Simultaneous LCD and CRT display
  - Dual Display feature
-

## Specifications

### *Audio*

- 16-bit stereo audio
- 3-dimensional sound with built-in wavetable synthesizer
- Play-now audio capability
- Dual speakers
- Sound Blaster Pro- and Windows Sound System-compatible
- Separate audio ports for line-out, line-in and microphone-in devices

### *Keyboard and Pointing Device*

- 84-/85-/88-key Windows keyboard
- Ergonomically-centered touchpad pointing device

### *I/O Ports*

- Two type II/I or one type III CardBus socket(s)
- One RJ-11 phone jack
- One DC-in jack (AC adapter)
- One RS-232 serial port (UART16550-compatible)
- One parallel port (ECP/EPP compliant)
- One external monitor port (DDC 2.0-compliant)
- One keyboard/mouse port (PS/2-compatible)
- One port replicator connector
- One speaker-/headphone-out jack
- One audio line-in jack
- One microphone-in jack
- One USB port
- One FIR wireless communication port (IrDA-compliant)

## Specifications

### *Weight and Dimensions*

- 3.1 kg (6.83 lb)
- 308 x 257 x 44.5 mm (12.13 x 10.12 x 1.75 in)

### *Temperature*

- Operating: 10°C ~ 35°C
- Non-operating: -20°C ~ 60°C

### *Humidity (non-condensing)*

- Operating: 20% ~ 80% RH
- Non-operating: 20% ~ 80% RH

### *System*

- Windows 95, 98 or NT operating system (optional)
- DMI-compliant (Windows 95 & 98)

### *Battery Pack*

- 48-WattHour Lithium-Ion battery pack
- Smart battery management technology
- 3-hour rapid charge/6 to 9-hour charge-in-use

### *AC Adapter*

- 60-Watt
- Auto sensing 100~240Vac, 50~60Hz

## *Specifications*

### *Options*

- 32-/64-/128-MB SDRAM memory upgrade module
- PS/2 Y-cable
- Full-function port replicator
- Additional AC adapter and battery pack
- Numeric keypad
- File transfer cable



## Index

### A

AC adapter  
   caring for, xx  
   connecting, xvi  
 Advanced Power  
   Management, 44  
 APM. See Advanced Power  
   Management  
 audio, 28  
   connecting externally, 53  
   controlling volume, 30  
   troubleshooting, 109-110  
 audio CD  
   playing, 30

### B

battery  
   installing, xvi  
 battery pack  
   battery-low warning, 38  
   caring for, xxi  
   characteristics, 34  
   charging, 36  
   charging indicator, 7  
   charging modes, 36  
   checking charge level, 37  
   installing, 35  
   low conditions, 39  
   optimizing, 37  
   removing, 35  
   using the first time, 34  
 BIOS Utility, 91-105  
   Basic System Settings  
     menu, 94  
   entering, 91  
   Load Default Settings  
     menu, 105  
   navigating, 91

### Onboard Devices

  Configuration  
     menu, 97  
   Power Management  
     menu, 103  
   Startup Configuration  
     menu, 95  
   System Security menu, 99  
 boot order  
   setting in Notebook  
     Manager, 83  
 brightness  
   hotkeys, 15  
   setting in Notebook  
     Manager, 89

### C

caps lock, 9  
   on indicator, 8  
 care  
   AC adapter, xx  
   battery pack, xxi  
   computer, xx  
 CD-ROM  
   ejecting, 20  
   ejecting manually, 110  
   troubleshooting, 110  
 charging  
   checking level, 37  
   modes, 36  
 cleaning  
   computer, xxi  
 computer  
   bringing to meetings, 65  
   caring for, xx  
   cleaning, xxi  
   connecting, xvi  
   disconnecting, 64

## ***Index***

- features, 3
- information, 81
- moving around, 65
- on indicator, 7
- power management, 40
- security, 31
- setting up a home office, 67
- taking home, 66
- traveling
  - internationally, 69
  - traveling on local trips, 68
- troubleshooting, 107
- turning on, xvii
- connections
  - AC adapter, xvi
  - audio, 53
  - computer, xvi
  - file transfer cable, 58
  - keyboard, external, 48
  - keypad, external, 49
  - monitor, 46
  - mouse, 50
  - mouse, PS/2, 50
  - mouse, serial, 51
  - printer, 52
  - PS/2 y-bridge cable, 57
  - USB, 56
- contrast
  - hotkeys, 15
  - setting in Notebook Manager, 89
- CPU, 92
- D**
- date
  - setting in BIOS Utility, 94
- diskette
  - ejecting, 19
- diskette drive, 19
- display, 5
  - auto-dim feature, 41
  - hotkeys, 14
  - opening and closing, 6
  - performance, 5
  - power management, 6, 40
  - setting boot device in BIOS Utility, 95
  - setting boot device in Notebook Manager, 89
  - setting in Notebook Manager, 89
  - simultaneous, 5
  - switching device in Notebook Manager, 89
  - troubleshooting, 108, 109
- dual display, 46
- E**
- error messages, 113
- F**
- FAQ. See frequently-asked questions
- Fast Infrared. See infrared
- file transfer cable
  - connecting, 58
- FIR. See infrared
- floppy disk
  - ejecting, 19
- floppy drive, 19
- frequently-asked questions, 108
- H**
- hard disk, 19
  - power management, 41

<i>Index</i>
--------------

- upgrading, 61
  - help
    - Internet home page, xviii
    - online manual, xviii
    - technical support, xix
  - Heuristic Power Management, 40
  - Hibernation mode, 42-43
    - conditions, 42
    - entering, 42
    - hotkey, 14
    - resuming from, 43
    - utility, 73
  - hotkeys, 13
  - HPM. See Heuristic Power Management
- I**
- indicator lights, 7
  - infrared, 23
  - ITW. See warranty
- K**
- keyboard, 9
    - connecting externally, 48
    - embedded numeric keypad, 10
    - hotkeys, 13
    - lock keys, 9
    - troubleshooting, 111
    - Windows keys, 11
  - keypad
    - connecting externally, 49
- L**
- LEDs, 7
- M**
- media access
    - on indicator, 7
  - media bay, 20
  - memory
    - installing, 60-61
    - size configurations, 59
    - upgrading, 59
  - messages
    - error, 113
  - microphone
    - troubleshooting, 110
  - modem, 27
  - monitor
    - connecting, 46
  - mouse
    - connecting externally, 50
    - troubleshooting, 111
- N**
- Notebook Manager, 80-90
    - Boot Sequence, 83
    - Display Device, 89
    - hotkey, 13
    - Information Viewer, 81
    - Password, 84
    - Power Management, 87
    - starting, 80
  - num lock, 9
    - on indicator, 8
  - numeric keypad
    - embedded, 10
- O**
- options
    - cables, 57
    - hard disk upgrade, 61
    - memory upgrade, 59

## Index

- PC Cards, 55
  - port replicator, 54
  - spare AC adapter, 57
  - spare battery, 57
- P**
- palm rest, 16
  - parallel port
    - setting in BIOS Utility, 98
  - password, 31
    - changing in BIOS Utility, 101
    - removing in BIOS Utility, 101
    - setting in BIOS Utility, 100
    - setting in Notebook Manager, 85-86
    - types, 31
  - PC Card, 25
    - ejecting, 26
    - inserting, 26
  - ports, 21
    - rear, 24
    - right, 25
  - power
    - managing in BIOS Utility, 103
    - managing in Notebook Manager, 87
    - turning on, xvii
  - Power Management, 40
  - power management
    - advanced, 44
    - heuristic, 40
  - power management modes
    - display standby mode, 40
    - hard disk standby mode, 41
    - Hibernation mode, 42-43
    - Standby mode, 41-42
- printer
- connecting, 52
  - troubleshooting, 111
- problems, 108
- audio, 109-110
  - CD-ROM, 110
  - display, 108, 109
  - keyboard, 111
  - printer, 111
  - serial mouse, 111
  - startup, 108
  - troubleshooting, 107
- PS/2 mouse
- connecting, 50
- PS/2 y-bridge cable
- connecting, 57
- Q**
- questions
- multiple PS/2 devices, 111
  - setting location for modem use, 112
- S**
- safety
- CD-ROM drive, xi
  - FCC notice, v
  - general instructions, viii
  - lithium battery, xii
- security
- keylock, 31
  - passwords, 31
- serial mouse
- connecting, 51
- serial port
- setting in BIOS Utility, 97

**Index**

- service
    - when to call, xxi
  - Sleep Manager, 73
  - software
    - bundled, 72
  - speakers
    - hotkey, 15
    - troubleshooting, 109
  - specifications, 119
  - Standby mode, 41-42
    - entering, 41
    - hotkey, 14
    - resuming from, 42
    - signals, 42
    - status indicator, 7
  - status indicators, 7
  - storage, 19
    - floppy drive, 19
    - hard disk, 19
  - support
    - information, xix
- T**
- time
    - setting in BIOS Utility, 94
  - touchpad, 17
    - hotkey, 14
    - using, 17-18
  - travel
    - international flights, 69
    - local trips, 68
  - troubleshooting, 107
- U**
- Universal Serial Bus, 25
  - USB
    - connecting, 56
  - USB. See Universal Serial Bus