

Pocket PC Phone
Quick Guide

Copyright © 2009. Acer Incorporated.
All Rights Reserved.

Pocket PC Phone Quick Guide
Original Issue: 01/2009

Changes may be made periodically to the information in this publication without obligation to notify any person of such revisions or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to this product. All correspondence concerning your unit should include the serial number, model number and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated.

Pocket PC Phone

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other companies' product names or trademarks are used herein for identification purposes only and belong to their respective companies.

SAR Information

Your device contains a radio transmitter and receiver, and it is designed, manufactured and tested not to exceed the radio frequency exposure limitations recommended by international guidelines.

For CE/NCC	
Head	
GSM	1.09 W/kg @10g
DCS	0.667 W/kg @10g

Contents

Package contents	1
External views	2
Hardware hotkeys	4
Using the Pocket PC for the first time	5
Installing and removing the SIM card	5
Charging the battery	7
Re-installing or replacing the battery	9
Synchronization	10
Using the headset	11
Using the camera	12
Using the navigation functions	13
Restarting the Pocket PC	15
Reset	16
Restore default settings	17
Cold boot	18

▣ This document lists the functions, specifications and illustrations for reference only. The actual purchased product should be taken as the standard.

 
Package contents





- Pocket PC
 - Getting Started CD
 - Headset
 - USB Y-cable
 - Stylus
 - User Guide
 - AC adapter
 - Battery
 - Leather case
 - USB cable
- (one plug to dual jacks)

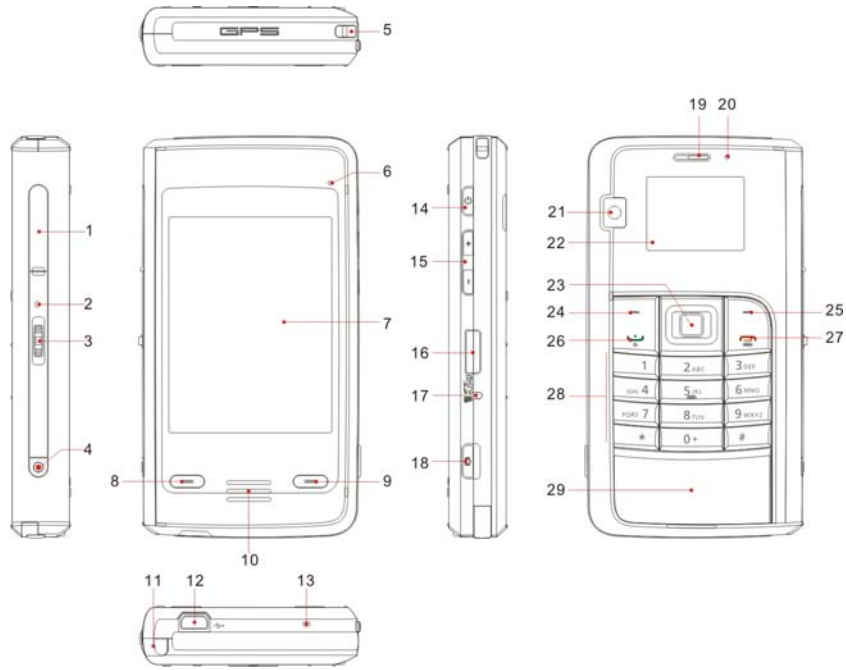


- ① Pocket PC
- ② Stylus
- ③ Battery
- ④ Getting Started CD
- ⑤ User Guide
- ⑥ USB cable
- ⑦ AC adapter




External views



 1. SIM card slot
2. Microphone 2
3. Jog dial
4. Record key
5. Strap holder
6. BT/WLAN/GPS LED indicator
7. Touch screen display
8.  Send/Talk key
9.  End key
10. Speaker
11. Stylus
12. Mini USB connector/headset connector
13. Microphone 1
14. Power key
15. Volume control keys
16. MicroSD slot
17. Reset key
18. **Camera** hotkey
19. Phone receiver
20. Power/phone LED indicator
21. Camera lens
22. Phone display
23. Navigation keypad
24. Left softkey
25. Right softkey
26.  Send/Talk key
27.  End key
28. Numeric keypad
29. Battery cover

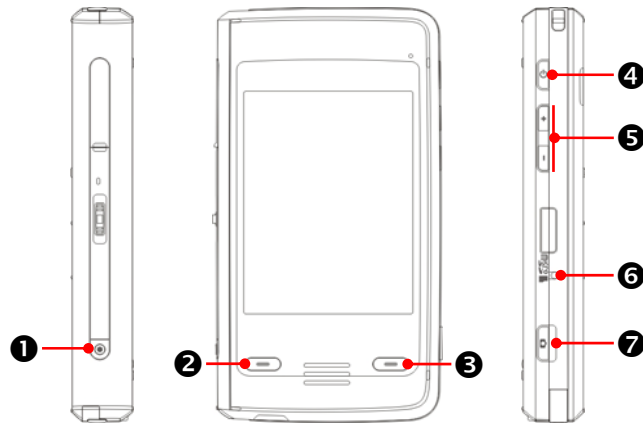Hardware hotkeys





Hardware button	Press	Press and hold
①	Launch Voice Commander	Launch Notes
② 	Launch Phone /dial/redial/answer	Put current call on hold
③ 	<ul style="list-style-type: none"> ■ End a call ■ Disconnect GPRS ■ Return to the Today screen while in other programs 	<ul style="list-style-type: none"> ■ Turn off phone if it is on ■ Turn on phone if it is off
④	Power key = Turn the screen on/off	Turn the Pocket PC on/off
⑤	Adjust volume	--
⑥	Reset key	--
④+⑥	Power key + Reset key = Cold boot	--
⑦ 	Launch Camera or take a picture	--

Using the Pocket PC for the first time

If you are opening this product for the first time, the main battery and the Pocket PC are packed separately inside the product packaging.

Installing and removing the SIM card

1. Before installing the SIM card, launch **Communication Manager**, then tap the  button. When the color of the icon turns orange , this indicates that the Pocket PC wireless connection is disabled.
2. Press the Power key to turn the screen off.
3. Disconnect the USB cable or AC adapter if either of them is connected to your Pocket PC. Removing the SIM card or battery while the Pocket PC is connected to a USB cable or AC adapter may damage your device.

6

4. To install the SIM card

 
Open the slot cover and insert the SIM card with its cut-off corner facing toward the inside of the slot. Remember to close the slot cover.



5. To remove the SIM card

Press the SIM card to pop it out of the slot.


6. To install the battery

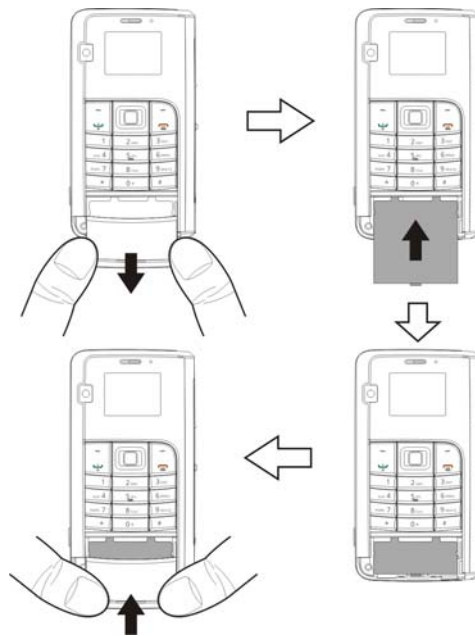


Charging the battery

Do not remove the battery while charging.

 - ➊ Connect the AC adapter plug to any household power outlet.
- ➋ Connect the AC adapter's other plug into the USB port. The Pocket PC will start charging automatically.
- ➌ If you need to connect your Pocket PC to a computer, connect the USB cable to the USB port. Then connect the other end of the USB cable to a USB port on the computer. Your Pocket PC will also be charged while connected.

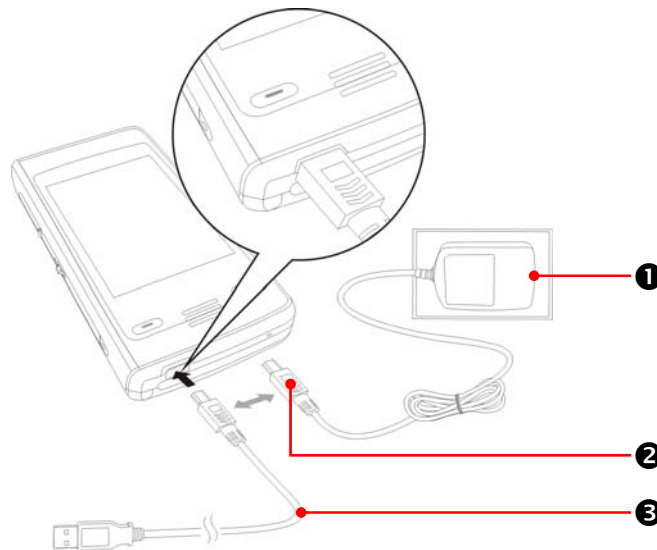

8

1. It will take about eight hours to fully charge the battery the first time. Subsequent charging will only take about three hours. After charging, you can disconnect the AC adapter to take your Pocket PC with you. To ensure smooth operation, charge the battery regularly.
2. The battery icon  in the upper right corner of the screen indicates remaining battery charge.
3. The LED indicator on the right of the Pocket PC indicates the charging and function status.

Red	Red: Device is charging.
	Red flashing every four seconds: Battery level low; missed calls or unread messages.
	Repeatedly flashing red twice: Battery level critical.
Green	Green: Battery fully charged.
	Green flashing every four seconds: GSM is connected and on line.


4. The LED indicator on the left of the Pocket PC indicates connectivity status.

Blue	Flashing blue every four seconds: Bluetooth enabled
Amber	Flashing amber every four seconds: WLAN enabled
White	Flashing white every four seconds: GPS enabled

Re-installing or replacing the battery

If the phone, GPRS or wireless LAN connection are already activated, deactivate them first and then replace the battery.

 1. Remove the battery cover.
2. Release the battery lock.
3. Replace the battery and secure it properly. When you remove the battery, your Pocket PC will enter sleep mode.
4. Slide the battery cover into the groove and click it shut.

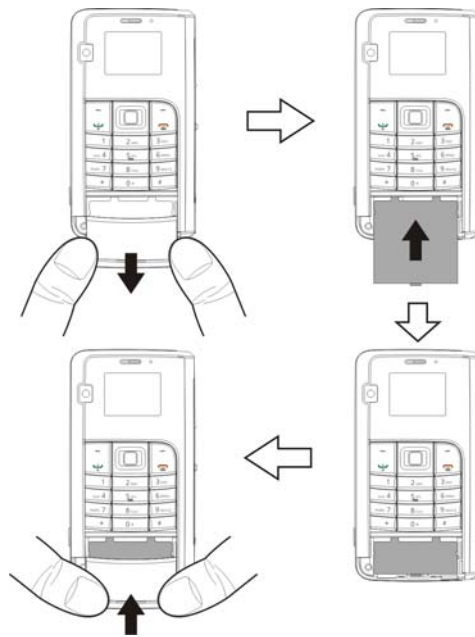

Synchronization

If you use Outlook on your PC, you can synchronize e-mail, contacts, calendar and more with your Pocket PC.

1. Install the synchronization tool on the PC.

 
Install the synchronization tool before connecting your Pocket PC to your PC using the USB cable.

Install the software from the Getting Started CD or download it from <http://www.microsoft.com/downloads/> to install the synchronization tool.


2. Set up a partnership

Connect your PC and Pocket PC with the USB cable and then turn on your Pocket PC. When your PC detects your Pocket PC, it will start the synchronization tool wizard. Follow the onscreen instructions.

Once the wizard has finished, data synchronization will begin.

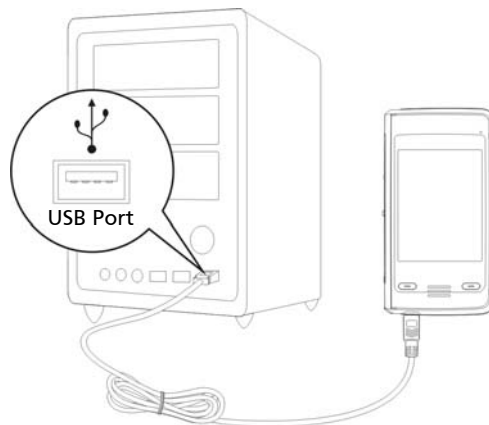


Using the headset

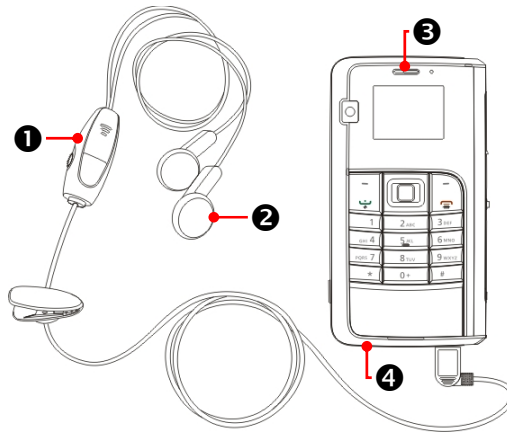 


- ❶ Microphone
- ❷ Earphone
- ❸ Phone receiver
- ❹ Microphone 1 (bottom of Pocket PC)


Using the camera

Press the  key to launch **Camera**.

 ■ Front and sides

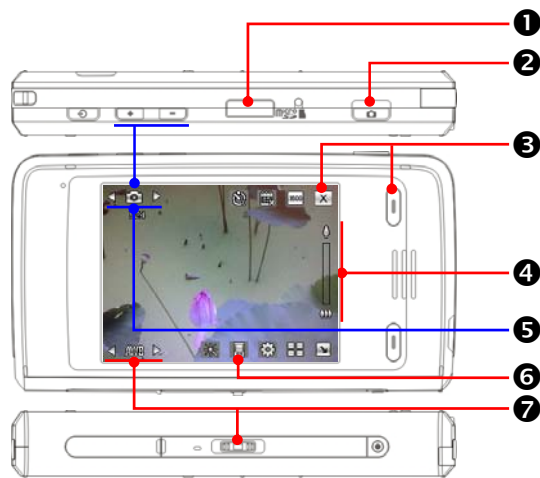


■ Rear

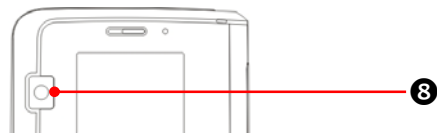 

- | | |
|---------------------------------------------------|---------------------------------------------|
| ① MicroSD card slot | ⑤ Switch to other camera or camcorder modes |
| ② Camera hotkey, camera shutter, camcorder hotkey | ⑥ Select the storage location |
| ③ Quit Camera | ⑦ Select the environment lighting |
| ④ Digital zoom | ⑧ Camera lens |

 Using the navigation functions

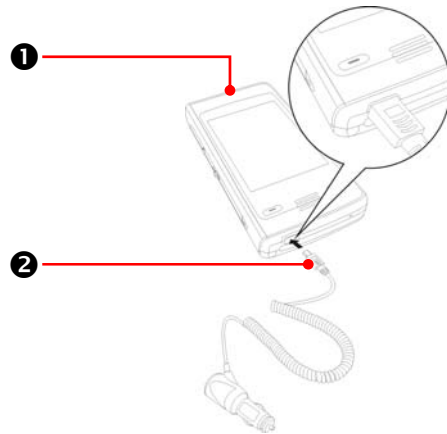


- ❶ Pocket PC
- ❷ Car Charger (optional): When your Pocket PC is low on power, recharge it by connecting one end to the car cigarette lighter/12 volt power outlet and the other end to the USB port at the bottom of the Pocket PC.

14

Installing the Pocket PC in a car

 When using this device, please use with matching car mount. Affix device securely to the car mount. Please be aware that installation in the areas depicted below is forbidden and is strictly prohibited.

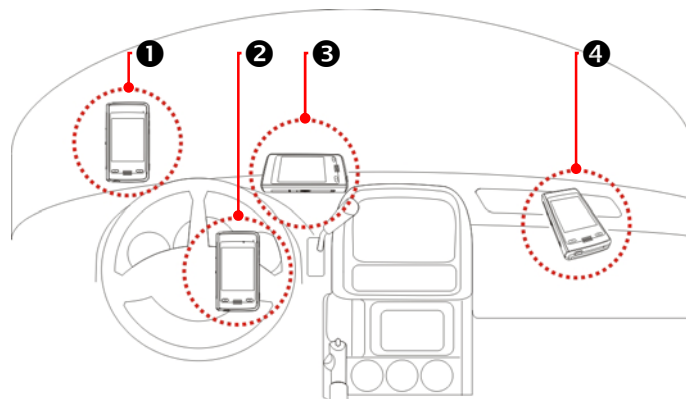

- ❶ Do not place where it will obstruct driver vision
- ❷ Do not place over air bag
- ❸ Do not place where it can not be securely attached
- ❹ Do not place in path of activated air bag

Restarting the Pocket PC

You should restart your Pocket PC if it is unable to maintain normal operation, does not respond or if the screen is frozen.

You have three choices:

1. Reset	Resets the Pocket PC and retains all your data and custom settings.
2. Restore default settings	Use this when the touch screen is functional. It will restore Windows Mobile and factory-installed programs. You will lose all your data and custom settings.
3. Cold Boot	Force a hardware cold boot: You have the option of a simple reset or restoring the default settings.

Reset

- To reset your Pocket PC
Press the Reset key using the
stylus tip.




- You should restart your Pocket PC if it is unable to maintain normal operation, does not response or if the screen is frozen.
- The Pocket PC will boot to the Today screen. This will retain Microsoft Windows Mobile, factory-installed applications, your data, other installed programs and custom settings.

Restore default settings

- To restore the default settings

Tap , **Programs, Utilities**, and then **Default Settings**.



1. If this application is inadvertently accessed, please select the  to exit, the system will not be affected.
2. If you are certain that you wish to perform this action, please select the text box on the right, and enter the authorization code in the block on the left. Then tap **OK**.

 
- If the Pocket PC is unable to maintain normal operation, but the touch screen is functional. Please refer to the instructions in this section to troubleshoot.
- This will reinstall Microsoft Windows Mobile and factory-installed applications. Other settings such as your own data, installed programs and other custom settings will be erased.

Cold boot

- To cold boot your Pocket PC
Hold the Power key with one hand while using stylus tip to push in the Reset key with the other. Simultaneously release both the Power key and Reset key.



- Only do this if you have already tried to reset using another method, and your Pocket PC is still not operating normally, is not responding or the screen is frozen.
- There are two options for cold booting; please refer to the information below, and decide which option you will try.
 1. Don't press any key after the cold boot and allow the Pocket PC to boot to the Today screen. This is identical to the reset described earlier.
 2. If you have tried the previous methods, and they have not solved the problem, then you may:
 - ① Press and hold both Power key and Reset key for a while, then release them simultaneously.
 - ② Wait for a few seconds until the screen wakes up displaying the model name, firmware version and firmware build date of your device, immediately press and hold Record key.
 - ③ Continue pressing Record key and release it when you see an inquiry box shown on the screen.

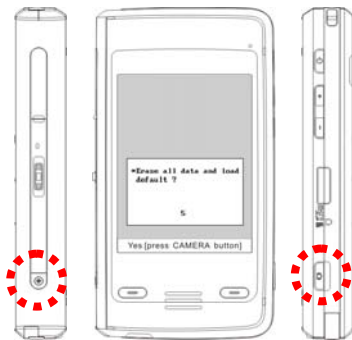

☐ Erase all data and load default?
Yes [press CAMERA button]

This operation will delete all the data you stored on your device and restore it to factory default settings.

- If you press camera button upon seeing Yes [press CAMERA button] at the bottom of screen, all the data you stored, programs you installed and customized settings you made on your Pocket PC will be cleared. Follow the onscreen instructions to complete the resetting after the Pocket PC reboots.
- If you do not press the camera button, the Pocket PC will wait a few seconds and then cancel the procedure.

⚠ Caution!

- This will erase all your data, any programs you installed and your settings. It will load Microsoft Windows Mobile and the factory-installed programs.
- If you want to retain your data, programs and settings you can only:
 1. Perform a reset.
 2. Perform a clean boot, and don't press any key when the system inquiry screen is displayed.

