How To install UPnP driver under Vista



Index	
Download the driver	2
Install the driver	2




Download the driver

Please download the driver from Acer support website. http://support.acer-euro.com/drivers/storage/aeasystore.html

Extract the content of the zip file in a folder in your C: drive.


Install the driver

- 1. Right click on the computer icon on your desktop and select Manage
- 2. Select Device Manger section
- 3. Identify the Aspire easyStore device not fully recognized by the OS
- 4. Right click on it and select Update Driver Software...

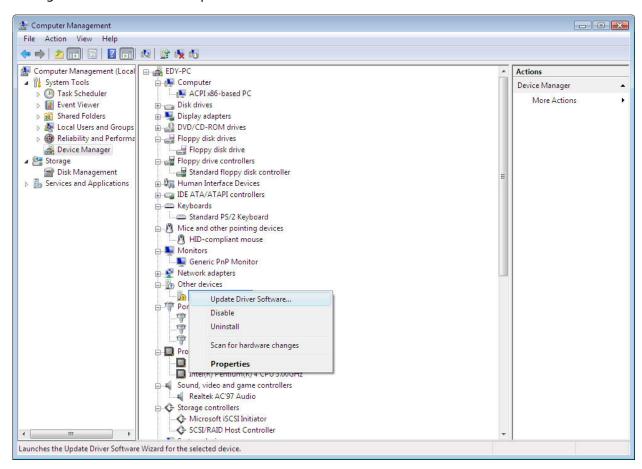




5. Select Browse my computer fro driver software

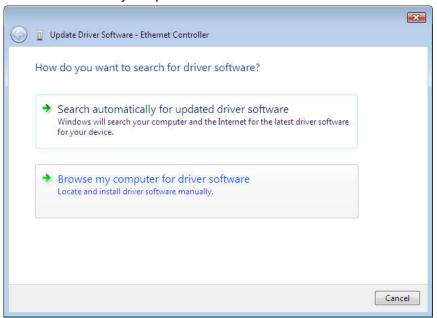

6. Select Let me pick from a list of device drivers on my computer

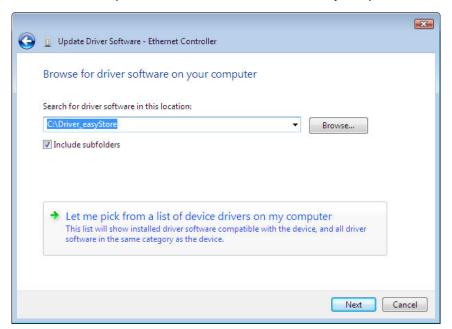


7. Select Show All Devices and click Next





8. Click on Have Disk...

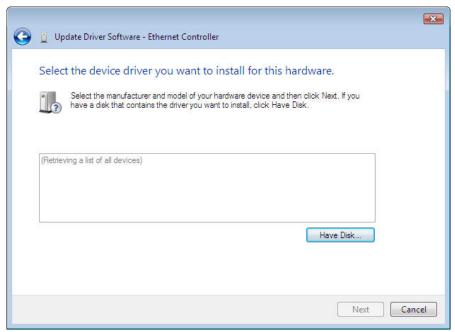


9. Click on Browse and select the folder with the extracted files and select the driver file





10. Click Next to continue

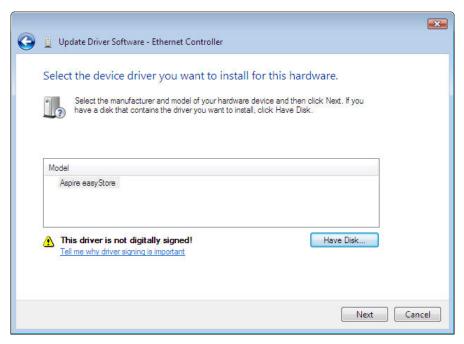

- 11. Click on Yes to install the driver also if it is not digitally signed
- 12. The Aspire easyStore is now installed