

How to install BeOS 4.x driver

1. RTL8029AS is ne2000 compatible PCI Interface, so please enter
/Pref/Network/Network Interfaces to choose "NE2000 Compatible PCI".
2. Enter the settings:
Like
IP address = 169.254.1.2
Subnet mask = 255.255.0.0
Gateway = xxx.xxx.xxx.xxx
Choose "Done", then choose "Save" (Restart Network).
3. Enter /Application/Terminal :
\$netstat
You will see the IP that you assign and other settings.
Ping yourself and other IP. If you can ping successfully, it means the network card can work normally.
4. If it still can't detect the card, please change another slot to try again.