

# *Extensa 2900 Series*

User's Guide

Copyright © 2004  
All Rights Reserved

Extensa 2900 Series Notebook Computer User's Guide  
Original Issue: April 2004

Changes may be made periodically to the information in this publication without obligation to notify any person of such revision or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date, and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your computer. All correspondence concerning your unit should include the serial number, model number, and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopy, recording, or otherwise, without the prior written permission of Acer Incorporated.

Extensa 2900 Series Notebook Computer

Model Number : \_\_\_\_\_

Serial Number: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Place of Purchase: \_\_\_\_\_

All trademarks and registered trademarks are the properties of their respective companies.

# First things first

## Your guides

A set of guides is provided to help you set up and use your Extensa computer:



The ***Just for starters...*** poster shows you how to set up your computer.



This ***User's Guide*** provides clear and concise information on using your computer productively. You are advised to read it thoroughly and keep it handy for future reference.

For more information on Acer's products, services, and support, please visit the web site: <http://www.acer.com>.

## Basic care and tips for using your computer

### Turning your computer on and off

To turn on your computer, open the lid and press the power button above the keyboard.

To turn the power off, you can do any of the following:

- Click on the **Start** button in Windows, and then select **Shut Down** on the popup menu.
- Push the power button.

To use this method, you must first click on the **Power Management** icon in Windows **Control Panel**, and then check that the power button is set to shut down the computer when pressed. See Windows **Help and Support** for more information.



-----

**Note:** If you are unable to shut down the computer in the usual way, press and hold the power button for more than four seconds. You should then wait at least two seconds before turning the computer on again.

## *Taking care of your computer*

Your computer will serve you well if you take care of it.

- Do not expose the computer to direct sunlight. Do not place it near sources of heat, such as a radiator.
- Do not expose the computer to temperatures below 0°C (32°F), or above 50°C (122°F).
- Do not expose the computer to magnetic fields.
- Do not expose the computer to rain or moisture.
- Do not spill water or any liquid on the computer.
- Do not subject the computer to heavy shock or vibration.
- Do not expose the computer to dust or dirt.
- Do not place objects on top of the computer.
- Do not slam the lid shut. Close the computer gently.
- Do not place the computer on unstable or uneven surfaces.

## *Taking care of your AC adapter*

It is important that you look after your AC adapter.

- Do not connect the adapter to any other device.
- Do not step on the power cord or place heavy objects on it. Route the power cord away from areas where people might walk on it or trip over it.
- Do not pull on the power cord when disconnecting from the mains power socket. Grasp and pull the plug instead.
- The total ampere ratings of equipment plugged into a power strip should not exceed the ampere rating for that power strip.

## *Taking care of your battery pack*

It is also important that you look after your computer's battery pack.

- Use the correct battery model for your computer. Do not use other kinds of batteries.
- Turn the power off before removing or replacing the battery.
- Do not tamper with the battery. Keep the battery away from children.
- Dispose of batteries according to local regulations. Recycle if possible.

## *Cleaning and servicing*

When cleaning your computer, it is important that you follow these steps:

- Turn off the computer and remove the battery.
- Disconnect the AC adapter.
- Clean with a soft cloth moistened with a little water. Do not use liquid or aerosol cleaners.

Refer to the chapter entitled "Frequently asked questions" on page 65 if any of the following occurs:

- You drop the computer or damage the case.
- You spill liquid on the computer.
- The computer does not operate normally.



First things first	iii
Your guides	iii
Basic care and tips for using your computer	iii
<b><i>Getting familiar with your computer</i></b>	<b>1</b>
A tour of your computer	3
Front open view	3
Front view	4
Left view	5
Right view	6
Rear view	7
Bottom view	8
Features	10
Indicators	12
Lock keys	14
Embedded keypad	15
Windows keys	16
Hot keys	17
The Euro symbol	19
Touchpad	21
Touchpad basics	21
Launch keys	23
Storage	24
Hard disk	24
AcerMedia bay	24
Ejecting the optical drive tray	25
Emergency ejection of the optical drive tray	25
Connectivity options	26
Ethernet and LAN	26
Fax/Data modem	27
Audio	28
Adjusting the volume	28
Securing your computer	29
Security slot	29
<b><i>Operating on battery power</i></b>	<b>31</b>
Battery pack	33
Battery pack characteristics	33
Installing and removing the battery pack	34
Charging the battery	35
Checking the battery level	35
Optimizing battery life	35
Battery-low warning	36

# Contents

Power management	37
<b><i>Peripherals and options</i></b>	<b>39</b>
External display devices	41
External input devices	41
External keyboard	41
External keypad	41
External pointing device	41
USB devices	42
IEEE 1394 Port	43
Printer	44
Audio devices	44
Expansion devices	45
PC Card	45
Miscellaneous options	46
Battery pack	46
AC adapter	46
Key component upgrades	47
Memory upgrade	47
Swapping AcerMedia drive modules	48
<b><i>Moving with your computer</i></b>	<b>51</b>
Disconnecting from the desktop	53
Moving around	54
Preparing the computer	54
What to bring to short meetings	54
What to bring to long meetings	54
Taking the computer home	55
Preparing the computer	55
What to bring with you	55
Special considerations	55
Setting up a home office	56
Traveling with the computer	56
Preparing the computer	56
What to take with you	56
Special considerations	56
Traveling internationally with your computer	57
Preparing the computer	57
What to take with you	57
Special considerations	57

<i>Software</i>	<b>59</b>
System software	61
Launch Manager	61
BIOS Setup Utility	62
<i>Troubleshooting</i>	<b>63</b>
Frequently asked questions	65
Requesting service	68
International Traveler's Warranty (ITW)	68
Before you call	68
<i>Appendix A Specifications</i>	<b>69</b>
<i>Appendix B Notices</i>	<b>75</b>
<i>Index</i>	<b>87</b>



*Getting familiar with  
your computer*


Your Extensa 2900 series notebook computer combines solid performance, versatility, multimedia capabilities and portability with a stylish design. Increase your productivity by working wherever you are.

This chapter provides an in-depth "tour" of your computer's features.

# A tour of your computer

After setting up your new Extensa notebook computer, as illustrated in the *Just for starters...* poster, take a few minutes to explore the unit.

## Front open view

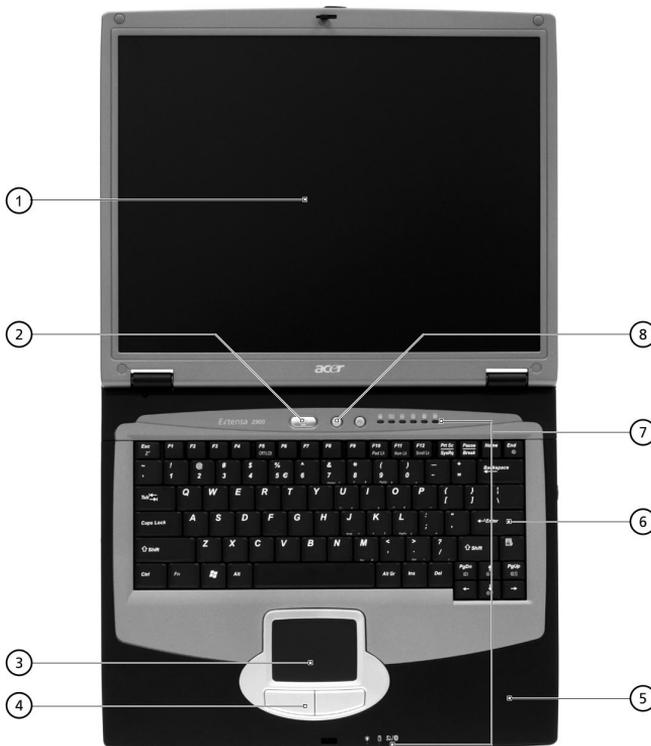

#	Item	Description
1	Display screen	Also called Liquid-Crystal Display (LCD), displays computer output.
2	Power button	Turns on the computer.


#	Item	Description
3	Touchpad	Touch-sensitive pointing device which functions like a computer mouse.
4	Click buttons (left and right)	The left and right buttons function like the left and right mouse buttons.
5	Palmrest	Comfortable support area for your hands when you use the computer.
6	Keyboard	Inputs data into your computer.
7	Status indicators	Light-Emitting Diodes (LEDs) that turn on and off to show the status of the computer, its functions and components.
8	Launch keys	Two special keys for frequently used programs. See "Launch keys" on page 23 for more details.

## Front view



#	Item	Description
1	Latch	Latch for opening and closing the computer.
2	AcerMedia Bay	For hot-swappable modules including CD-ROM, DVD-ROM, DVD/CD-RW Combo, DVD-RW, DVD-Dual, or DVD Super-Multi.


## Left view

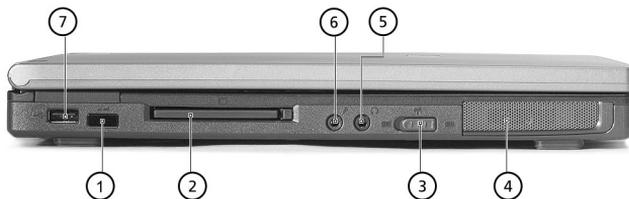

#	Item	Description
1	Infrared port 	Interfaces with infrared devices (e.g., infrared printer, IR-aware computer).
2	PC Card slot 	Accepts one Type II 16-bit PC Card or 32-bit CardBus PC Card.
3	Wireless Communication switch 	Enables and disables Wireless communication devices.
4	Stereo speaker	Outputs sound.
5	Headphone/ Speaker/ Line-out jack 	Connects to headphones or other line-out audio devices (speakers).
6	Microphone/line-in jack 	Accepts input from external microphones, or other audio line-in devices (e.g. audio CD player, stereo walkman and etc.)


#	Item	Description
7	One USB 2.0 port 	Connects to Universal Serial Bus devices (e.g., USB mouse, USB camera).

## Right view

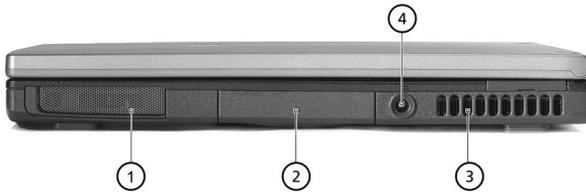

#	Item	Description
1	Stereo speaker	Outputs sound.
2	HDD 	Houses the computer's hard disk.
3	Ventilation slot	Enables the computer to stay cool, even after prolonged use.
4	DC-in jack 	Connects the AC adapter.


## Rear view

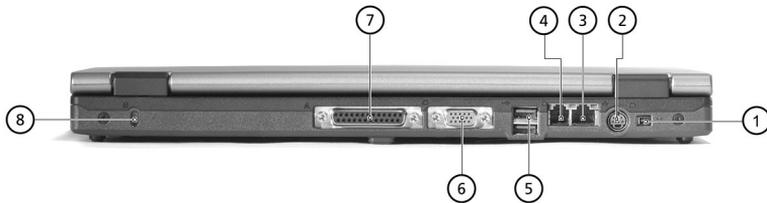

#	Item	Description
1	IEEE 1394 port	Connects to IEEE 1394 devices.
		
2	S-video	Connects to a television or display device with S-video input.
		
3	Ethernet port	Connects to an Ethernet 10/100-based network.
		
4	Modem port	Connects to a phone line.
		
5	Two USB 2.0 ports	Connects to Universal Serial Bus devices (e.g., USB mouse, USB camera).
		
6	External display port	Connects to a display device (e.g., external monitor, LCD projector) and displays up to 16.7 million colors and up to 1600x1200 at 85 Hz and 2048x1536 at 75 Hz resolution.
		

#	Item	Description
7	Parallel port 	Connects to a parallel device (e.g., parallel printer).
8	Security keylock 	Connects to a Kensington-compatible computer security lock.

## Bottom view

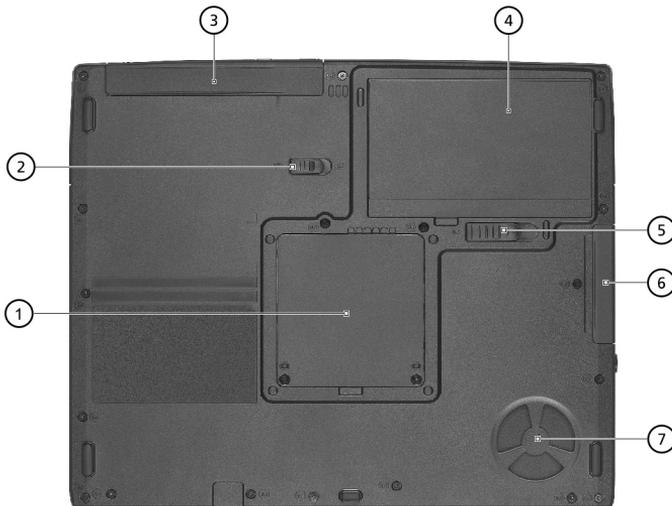

#	Item	Description
1	RAM slot	The slot that houses the computer's main memory.
2	AcerMedia bay release latch	Unlatches the AcerMedia drive for removing the optical drive.

#	Item	Description
3	AcerMedia bay	Houses an AcerMedia drive module.
4	Battery bay	Houses the computer's battery pack.
5	Battery release latch	Unlatches the battery to remove the battery pack.
6	Hard disk bay	Houses the computer's hard disk (secured by a screw).
7	Cooling fan	Helps keep the computer cool.

# Features

## Performance

- Intel® Pentium® M Processor at 1.3 ~1.7 GHz or higher
- Intel 855PM chipset
- Memory upgradeable up to 2 GB with 2 slots
- Internal removable optical drive (AcerMedia bay)
- High-capacity, Enhanced-IDE hard disk
- Li-ion main battery pack
- Power management system with Advanced Configuration Power Interface (ACPI)

## Display

- 14.1" or 15.0" Thin-Film Transistor (TFT) displaying at 1024 x 768 XGA resolution, or 15.0" TFT displaying at 1400 x 1050 SXGA+ resolution
- ATI MOBILITY™ RADEON™ 9200/9700 with 64MB of external DDR video RAM, supporting Microsoft-DirectX-9.0
- 3D graphics engine
- Simultaneous LCD and CRT display support
- S-video for output to a television or display device that supports S-video input
- DualView™ display support

## Multimedia

- 16-bit high-fidelity AC'97 stereo audio
- Built-in dual speakers
- High-speed optical drive (AcerMedia bay)

### *Connectivity*

- High-speed fax/data modem port
- Ethernet/Fast Ethernet port
- Fast infrared wireless communication
- Three USB 2.0 ports (two in rear and one on left)
- IEEE 1394 port
- InviLink 802.11b/g wireless LAN (manufacturing optional)
- Bluetooth ready (manufacturing optional)

### *Human-centric design*

- Rugged, yet extremely portable design
- Stylish appearance
- Full-size keyboard with two programmable launch keys
- Comfortable palm rest area with well-positioned touchpad

### *Expansion*

- One Type II CardBus PC Card slot
- Upgradeable memory

# Indicators

Your computer provides an array of six indicators located below the display screen, and three on the front of the computer.



Icon	Function	Description
	HDD	Lights when Hard Disk Drive is activated.
	ODD	Lights when Optical Disk Drive is activated.
	Scroll Lock	Lights when Scroll Lock is activated.
	Caps Lock	Lights when Caps Lock is activated.
	Pad Lock	Lights when Pad Lock is activated.

Icon	Function	Description
	Num Lock	Lights when Num Lock is activated.
	Wireless/ Bluetooth indicator	Orange indicates that wireless LAN is enabled; blue indicates that Bluetooth (optional) is enabled; dark purple indicates that both wireless LAN and Bluetooth are enabled.
	Power	Lights green when the power is on and flashing when the computer is in standby mode.
	Battery	Lights green. See below Notes.

# Keyboard

The full-sized keyboard includes an embedded numeric keypad, separate cursor keys, two Windows keys and twelve function keys.

## Lock keys

The keyboard has four lock keys which you can toggle on and off.



Lock Key	Description
Caps Lock	When Caps Lock is on, all alphabetic characters typed are in uppercase.
Pad Lock (Fn-F10)	When Pad Lock is on, the embedded keypad is enabled. In this mode the keypad is cursor function.
Num Lock (Fn-F11)	When Num Lock is on, the embedded keypad is in numeric mode. The keys function as a calculator (complete with the arithmetic operators +, -, *, and /). Use this mode when you need to do a lot of numeric data entry. A better solution would be to connect an external keypad.
Scroll Lock (Fn-F12)	When Scroll Lock is on, the screen moves one line up or down when you press the up or down arrow keys respectively. Scroll Lock does not work with some applications.

## Embedded keypad

The embedded numeric keypad functions like a desktop numeric keypad. It is indicated by small characters located on the right-hand-side of the keycaps.



Desired access	Num lock on	Num lock off
Number keys on embedded keypad	Type numbers in a normal manner.	
Main keyboard keys	Hold <b>Fn</b> while typing letters on embedded keypad.	Type the letters in a normal manner.

## Windows keys

The keyboard has two keys that perform Windows-specific functions.



Key	Description
Windows logo key 	Start button. Combinations with this key perform shortcut functions. Below are a few examples:  + <b>Tab</b> (Activates next taskbar button)  + <b>E</b> (Explores My Computer)  + <b>F</b> (Finds Document)  + <b>M</b> (Minimizes All) <b>Shift</b> +  + <b>M</b> (Undoes Minimize All)  + <b>R</b> (Displays the Run... dialog box)
Application key 	Opens a context menu (same as a right-click).

## Hot keys

The computer employs hot keys or key combinations to access most of the computer's controls like screen brightness, volume output and the BIOS Utility.

To activate hot keys, press and hold the **Fn** key before pressing the other key in the hot key combination.



Hot key	Icon	Function	Description
Fn-Esc		Sleep	Puts the computer in Sleep mode. See "Power management" on page 37.
Fn-F5		Display toggle	Switches display output between the display screen, external monitor (if connected) and both the display screen and external monitor.
Fn-End		Speaker toggle	Turns the speakers on and off.
Fn-PgUp		Volume up	Increases the speaker volume.

Hot key	Icon	Function	Description
Fn-PgDn		Volume down	Decreases the speaker volume.
Fn-↑		Brightness up	Increases the screen brightness.
Fn-↓		Brightness down	Decreases the screen brightness.

## The Euro symbol

If your keyboard layout is set to United States-International or United Kingdom or if you have a keyboard with a European layout, you can type the Euro symbol on your keyboard.



**Note for US keyboard users:** The keyboard layout is set when you first set up Windows. For the Euro symbol to work, the keyboard layout has to be set to United States-International.

To verify the keyboard type in Windows Millennium Edition and Windows 2000, follow the steps below:

- 1 Click on **Start, Settings, Control Panel**.
- 2 Double-click on **Keyboard**.
- 3 Click on the **Language** tab.
- 4 Verify that the keyboard layout used for "En English (United States)" is set to United States-International.  
If not, select and click on **Properties**; then select **United States-International** and click on **OK**.
- 5 Click on **OK**.

To verify the keyboard type in Windows XP, follow the steps below:

- 1 Click on **Start, Control Panel**.
- 2 Double-click on **Regional and Language Options**.
- 3 Click on the **Language** tab and click on **Details**.
- 4 Verify that the keyboard layout used for "En English (United States)" is set to United States-International.  
If not, select and click on **ADD**; then select **United States-**

**International** and click on **OK**.

**5** Click on **OK**.

To type the Euro symbol:

- 1** Locate the Euro symbol on your keyboard.
- 2** Open a text editor or word processor.
- 3** Hold **Alt Gr** and press the Euro symbol.



**Note:** Some fonts and software do not support the Euro symbol. Please refer to [www.microsoft.com/typography/faq/faq12.htm](http://www.microsoft.com/typography/faq/faq12.htm) for more information.

# Touchpad

The built-in touchpad is a pointing device that senses movement on its surface. This means the cursor responds as you move your finger on the surface of the touchpad. The central location on the palmrest provides optimum comfort and support.



## Touchpad basics

The following items teach you how to use the touchpad:



- Move your finger across the touchpad to move the cursor.
- Press the left and right buttons located on the edge of the touchpad to do selection and execution functions. These two buttons are similar to the left and right buttons on a mouse. Tapping on the touchpad produces similar results.

Function	Left Button	Right Button	Tap
Execute	Click twice quickly.		Tap twice quickly.

Function	Left Button	Right Button	Tap
Select	Click once.		Tap once.
Drag	Click and hold. Then, slide your finger across the touchpad to drag the cursor over the selection.		Tap twice quickly. On the second tap, slide your finger across the touchpad to drag the cursor over the selection.
Access content menu		Click once.	



**Note:** Keep your fingers, as well as the surface of the touchpad, clean and dry. The touchpad is sensitive to your finger movements: the lighter your touch, the better the response. Tapping hard will not increase the touchpad's responsiveness.

## Launch keys

Located above the keyboard are three buttons. The most-left button is the power button. To the right of the power button are the two launch keys. They are designated as the programmable buttons (P1 and P2).



Launch Key	Default Application
P1	User-programmable.
P2	User-programmable.

# Storage

This computer supplies you with the following media storage:

- High-capacity Enhanced-IDE hard disk
- Hot-Swappable AcerMedia drive

## Hard disk

The high-capacity hard disk is the answer to your storage needs. This is where your programs and data are stored.

## AcerMedia bay

The hot-swappable AcerMedia bay accepts a wide variety of optional media drive modules for use with your computer. These optional items include:

- CD-ROM drive
- DVD-ROM drive
- DVD/CD-RW Combo drive
- DVD-RW drive
- DVD-Dual/Super-Multi drive



.....

**Note:** To swap AcerMedia drive modules, see “Swapping AcerMedia drive modules” on page 48.

## *Ejecting the optical drive tray*

To eject the optical drive tray:

- With the computer turned on, press the optical drive eject button.
- The tray will be released, and partially popped open.
- Gently pull the tray out to its limit.




To load an optical disc:

- Place a CD or DVD on the open tray. Align the disc's center hole with the tray's spindle.
- Gently push down on the disc until it clicks in place on the spindle.
- Gently push in the tray until it clicks closed.

## *Emergency ejection of the optical drive tray*

If you need to eject the optical drive tray when the computer is turned off, push a straightened paper clip into the optical drive emergency eject hole. The tray will be released, and partially popped open.

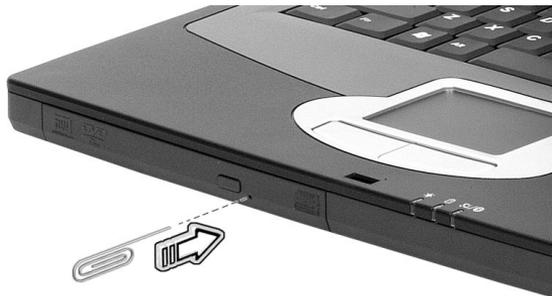

## Connectivity options

Your computer has built-in connectivity options, enabling you to hook up to a network or communicate over a phone line.

### *Ethernet and LAN*

The integrated network feature allows you to connect your computer to an Ethernet-based (10/100 BASE-T) network.

To use the network feature, plug an Ethernet cable into your computer's network jack, and then connect the other end to a network jack or hub on your network.



See Windows Help and Support for information on setting up a network connection.

## *Fax/Data modem*

Your computer features a built-in fax/data modem, enabling you to communicate over a phone line. This means that you can connect to the Internet via a dialup account with an ISP, log in to your network from a remote location, or send faxes.



.....

**Warning:** Your modem is not compatible with digital phone lines. Plugging the computer into a digital phone system will damage the modem.

To use the fax/data modem, plug a phone cable into your computer's modem jack, and then connect the other end to a telephone jack.



.....

**Warning:** Please use the delivered phone cable in the country of use.

## Audio

The computer comes with 16-bit high-fidelity AC'97 stereo audio, and dual stereo speakers.



### *Adjusting the volume*

Adjusting the volume on the computer is as easy as pressing some buttons. See “Hot keys” on page 17 for more information on adjusting the speaker volume.

## Securing your computer

Your computer features hardware and software security solutions, in the form of a slot for a Kensington lock and a password facility.

### Security slot

A slot for a Kensington slot enables you to physically protect your computer from theft. Use this feature as follows:

- Wrap a security lock cable around a heavy or immovable object, such as a drawer handle on a file cabinet, or a table leg.
- Insert the lock into the slot on the computer, turn it 90°, and then lock it in place.



### Setting a password

Passwords protect your computer from unauthorized access. When set, no one can access the computer without entering the correct password.

There are three types of passwords you can set:

- 1 Supervisor Password secures your computer against unauthorized entry to and use of the BIOS Utility.
- 2 User Password secures your computer against unauthorized use.
- 3 Hard Disk Password protects your data by preventing unauthorized access to your hard disk.



**Important! Do not forget your Setup and Hard Disk passwords! If you forget your passwords, please get in touch with your dealer or an authorized service center.**

You can set the passwords using the BIOS Utility.



*Operating on  
battery power*

Your Extensa 2900 series notebook computer operates on battery or AC power.

This chapter provides information for operating on battery power, as well as information on how your computer manages and saves power.

## *Battery pack*

The computer uses a battery pack that gives you long use between charges.

### *Battery pack characteristics*

The battery pack has the following characteristics:

- Employs current battery technology standards.
- Delivers a battery-low warning.

The battery is recharged whenever you connect the computer to the mains power supply. Your computer supports charge-in-use, enabling you to recharge the battery while you continue to operate the computer. However, recharging with the computer turned off results in a significantly faster charge time.

The battery will come in handy when you travel or during a power failure. It is advisable to have an extra fully charged battery pack available as backup. Contact your dealer for details on ordering a spare battery pack.

### *Maximizing the battery's life*

Like all other batteries, your computer's battery will degrade over time. This means that the battery's performance will diminish with time and use. To maximize your battery's life, you are advised to adhere to the recommendations set out below.

### *Conditioning a new battery pack*

Before you use a battery pack for the first time, there is a "conditioning" process that you should follow:

- 1 Insert the new battery without turning the computer on.
- 2 Connect the AC adapter and fully charge the battery.
- 3 Disconnect the AC adapter.
- 4 Turn on the computer and operate using battery power.
- 5 Fully deplete the battery until the battery-low warning appears.
- 6 Reconnect the AC adapter and fully charge the battery again.

Follow these steps again until the battery has been charged and discharged three times.

Use this conditioning process for all new batteries, or if a battery hasn't been used for a long time. If the computer is to be stored for more than two weeks, you are advised to remove the battery pack from the unit.



.....  
**Warning:** Do not expose battery packs to temperatures below 0°C (32°F) or above 60°C (140°F). Extreme temperatures may adversely affect the battery pack.

By following the battery conditioning process you condition your battery to accept the maximum possible charge. Failure to follow this procedure will prevent you from obtaining the maximum battery charge, and will also shorten the effective lifespan of the battery.

In addition, the useful lifespan of the battery is adversely affected by the following usage patterns:

- Using the computer on constant AC power with the battery inserted. If you want to use constant AC power, you are advised to remove the battery pack after it is fully charged.
- Not discharging and recharging the battery to its extremes, as described above.
- Frequent use; the more you use the battery, the faster it will reach the end of its effective life. A standard computer battery has a life span of about 500 charges.

## *Installing and removing the battery pack*



.....  
**Important!** Before removing the battery from the unit, connect the AC adapter if you want to continue using your computer. Otherwise, turn off the computer first.

To install a battery pack:

- 1 Align the battery with the open battery bay; make sure that the end with the contacts will enter first, and that the top surface of the battery is facing up.
- 2 Slide the battery into the battery bay and gently push until the battery locks in place.

To remove a battery pack:

- 1 Slide the battery release latch to release the battery.
- 2 Pull the battery from the battery bay.

## *Charging the battery*

To charge the battery, first make sure that it is correctly installed in the battery bay. Plug the AC adapter into the computer, and connect to a mains power outlet. You can continue to operate your computer on AC power while your battery is charging. However, charging the battery with the computer turned off results in a significantly faster charge time.



**Note:** You are advised to charge the battery before retiring for the day. Charging the battery overnight before traveling enables you to start the next day with a fully charged battery.

## *Checking the battery level*

The Windows Power Meter indicates the current battery level. Rest the cursor over the battery/power icon on the taskbar to see the battery's present charge level.

## *Optimizing battery life*

Optimizing battery life helps you get the most out of battery operation, prolonging the charge/recharge cycle and improving recharging efficiency. You are advised to follow the suggestions set out below:

- Purchase an extra battery pack.
- Use AC power whenever possible, reserving battery for on-the-go use.
- Eject a PC Card if it is not being used, as it will continue to draw power.
- Store the battery pack in a cool, dry place. The recommended temperature is 10°C to 30°C. Higher temperatures cause the battery to self-discharge faster.
- Excessive recharging decreases the battery life.
- Look after your AC adapter and battery.

## Battery-low warning

When using battery power pay attention to the Windows Power Meter.



-----

**Warning: Connect the AC adapter as soon as possible after the battery-low warning appears. Data will be lost if the battery to become fully depleted and the computer shuts down.**

When the battery-low warning appears, the recommended course of action depends on your situation:

Situation	Recommended Action
The AC adapter and a power outlet are available.	<ol style="list-style-type: none"> <li>1. Plug the AC adapter into the computer, and then connect to the mains power supply.</li> <li>2. Save all necessary files.</li> <li>3. Resume work.</li> </ol> <p><b>Turn off the computer if you want to recharge the battery rapidly.</b></p>
An extra fully charged battery pack is available.	<ol style="list-style-type: none"> <li>1. Save all necessary files.</li> <li>2. Close all applications.</li> <li>3. Shut down the operating system to turn off the computer.</li> <li>4. Replace the battery pack.</li> <li>5. Turn on the computer and resume work.</li> </ol>
The AC adapter or a power outlet is unavailable. You have no spare battery pack.	<ol style="list-style-type: none"> <li>1. Save all necessary files.</li> <li>2. Close all applications.</li> <li>3. Shut down the operating system to turn off the computer.</li> </ol>

## *Power management*

Your computer features a built-in power management unit that constantly monitors system activity. System activity refers to any activity involving one or more of the following devices: keyboard, touchpad/mouse, hard disk drive, optical drive, peripherals connected to the computer, and video memory. If no activity is detected for a period of time (the settings are controlled in Windows Power Management), the computer turns off some, or all, of these devices in order to conserve power.

Your computer employs a power management scheme that supports Advanced Configuration and Power Interface (ACPI), enabling maximum power conservation without compromising system performance. ACPI allows Windows to control the amount of power given to each device attached to the computer. In this way, Windows handles all power-saving chores for your computer. Refer to Windows Help and Support for more information.



*Peripherals and  
options*

Your Extensa 2900 series notebook computer offers good expansion capabilities.

This chapter provides information on connecting peripherals to expand your system. It also describes how to upgrade key components to enhance system performance and keep your computer in step with the latest technology.

You are advised to consult your dealer for information on peripherals. In addition, make sure that you read the manuals and other documentation provided with new hardware.

## *External display devices*

You can connect an external (VGA) monitor or projector to your computer's external display port.

Use the **Fn + F5** hot key to toggle the display setting between the computer's LCD panel and the external display device. See "Hot keys" on page 17 for more information.

## *External input devices*

You can connect a variety of input devices to your computer's USB ports, providing increased functionality and greater ease-of-use. In addition, the USB ports can be used to connect many other peripheral devices, such as digital cameras, printers and scanners. See "Expansion devices" on page 45 for more information on connecting PC Card devices.

## *External keyboard*

Your computer features a full-size keyboard. However, if you prefer, you can connect an external keyboard to one of your computer's USB ports. This enables you to enjoy the comfort and added features of a full-size desktop system keyboard when inputting typed data on your notebook computer.

## *External keypad*


Your computer features an embedded keypad that, when combined with the Num Lock feature, enables you to easily input typed numeric data. Alternatively, you can connect a 17-key numeric keypad to one of your computer's USB ports. This enables you to enjoy the benefits of a numeric keypad without interfering with your use of the computer's keyboard for typing text.

## *External pointing device*

Your computer features a sensitive touchpad pointing device with two click buttons. However, if you prefer to use a conventional mouse or other pointing device, you can connect it to one of your computer's USB ports.

## USB devices

Your computer features three Universal Serial Bus (USB) 2.0 ports for connecting a range of USB peripherals. See “External input devices” on page 41, and “Printer” on page 44 for information on connecting a USB keyboard, keypad, mouse or printer. Other common USB devices include digital cameras, scanners, and external storage devices.

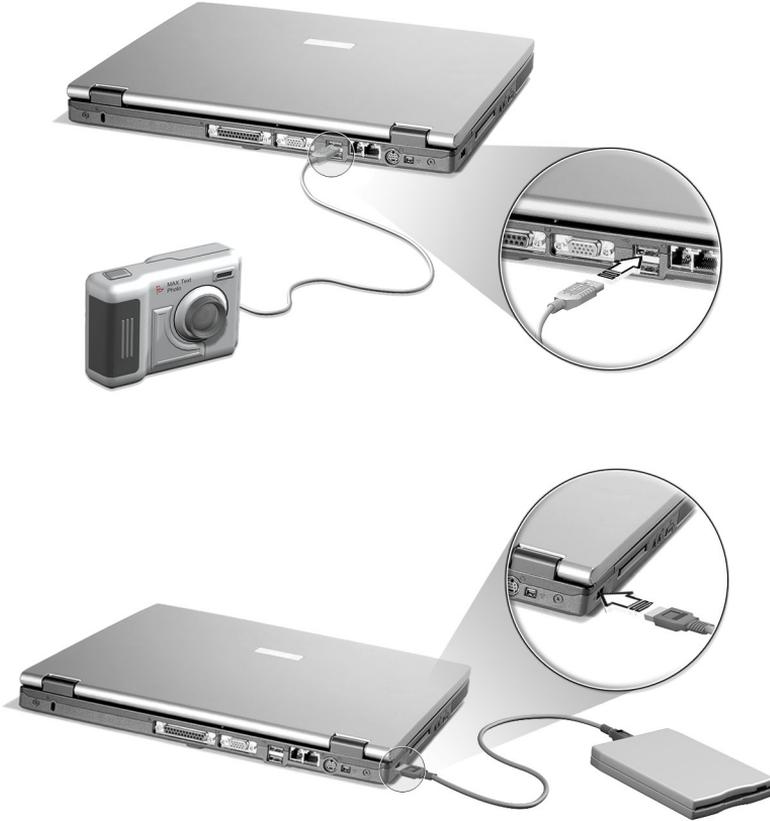


USB is plug and play, which means that you can connect and start using a USB device without having to restart your computer. You can also disconnect the device at any time.

A further advantage of USB is the ability to use USB hubs. This means that several devices can share a USB port simultaneously.

## *IEEE 1394 Port*

The computer's IEEE 1394 port allows you to connect to an IEEE 1394 supported device like a digital video camera.

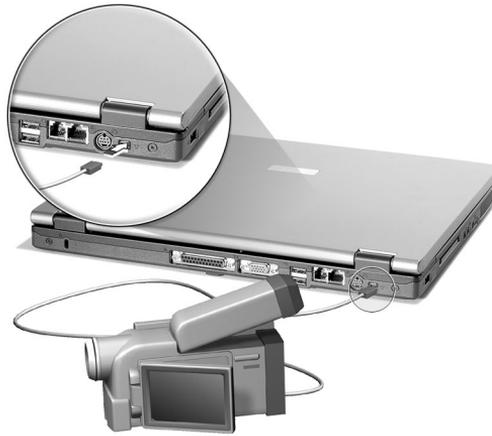

See your video or digital camera's documentation for details.

## Printer

Your computer supports both parallel and USB printers.

Refer to the printer's manual for information on:

- Setting up the hardware
- Installing the necessary drivers in Windows
- Operating instructions

To use a USB printer, simply connect the device to one of your computer's USB ports, and then wait for Windows to find the new hardware.

To connect a parallel printer, first shut down the operating system. Connect the printer to the parallel port, and then restart the computer. Wait for Windows to find the new hardware.

## Audio devices

Your computer offers built-in stereo speakers. See the section entitled "Audio" on page 28 for more information on these features. However, in addition to the integrated devices, the two audio ports on the left side of the unit enable you to connect external audio input and output devices.

You can plug an external microphone into your computer's microphone-in jack. This offers the convenience of greater freedom of movement, as well as improved audio input quality.

Connect headphones to the headphone jack for private listening and improved audio output quality.

# Expansion devices

## PC Card

The Type II CardBus PC Card slot found on the left side of the computer accepts credit-card-sized cards that enhance the usability and expandability of the computer. These cards should have a PC Card logo on them.

PC Cards (formerly PCMCIA) are add-on cards for portable computers, giving you expansion possibilities long afforded by desktop PCs. Popular PC cards include flash, fax/data modem, LAN, wireless LAN and SCSI cards. CardBus improves on the 16-bit PC card technology by expanding the bandwidth to 32 bits.



**Note:** Refer to your card's manual for details on how to install and use the card.


To insert a PC Card:

- 1 Align the card with your computer's PC Card slot. Make sure that the edge with the connectors is facing the slot, and that the card is the right way up. Many cards are marked with an arrow to help you insert them correctly.
- 2 Slide the card into the slot, and push gently until the card connects.
- 3 If necessary, connect the card's cable to the jack on the outer edge of the card.
- 4 Windows will automatically detect the card's presence.



To remove a PC Card:

- 1 Close the application that is using the PC Card.
- 2 Double click on the PC Card icon on the taskbar, and then select the option to safely remove the card. Wait for the message telling you that it is now safe to remove the card.
- 3 Press the PC Card eject button to partially eject the card **(a)**.
- 4 Pull the card from the slot **(b)**.

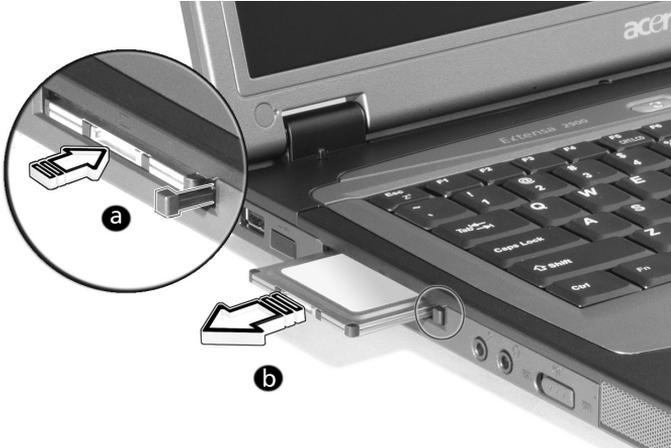

## Miscellaneous options

### Battery pack

It is a good idea to have a spare battery, especially when you travel with your computer. This greatly increases your productive range when you are on the move.

### AC adapter

Having a spare AC adapter allows you to keep one in two different places. For example, you could have one AC adapter at home and another at work. This means that you don't have to carry an AC adapter when traveling between your two base locations.

## Key component upgrades

Your computer is designed to deliver solid performance. However, in time, you might find that your applications demand even more computing power. For this reason, you are able to upgrade key components.



.....  
**Note:** Contact your authorized dealer if you decide to perform a key component upgrade.


### Memory upgrade

Memory is expandable to 2 GB, employing 128/256/512/1024-MB industry standard Small Outline Dual Inline Memory Modules (soDIMMs). The computer supports Double Data Rate (DDR) SDRAM.


There are two memory slots on your computer, one of which is occupied by standard memory. You can upgrade memory by installing a memory module into the one available slot, or replacing the standard memory with a higher-capacity memory module.

#### Installing memory:

- 1 Turn off the computer. Make sure that the AC adapter is disconnected, and then remove the battery pack.
- 2 Turn the computer over to access the memory compartment on the bottom of the unit. Remove all screws **(a)** from the memory compartment door, and then lift the door off **(b)**.

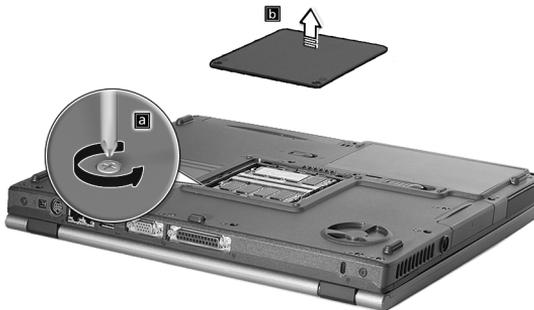

- 3 Insert the memory module diagonally in the slot **(a)**, and then press down gently until it clicks in place **(b)**.

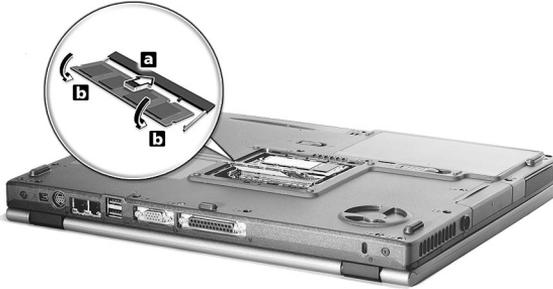

- 4 Replace the memory compartment door, and fasten the screw.

The computer automatically detects the new module and reconfigures the memory.


## Swapping AcerMedia drive modules



**Note:** The hard disk drive module is not hot-swappable. You have to turn off your computer before you can swap the module.

You can swap the AcerMedia drive with any optional AcerMedia modules. First slide the AcerMedia release latch as shown in the

illustration (a). Then remove the optical drive from the AcerMedia bay (b).

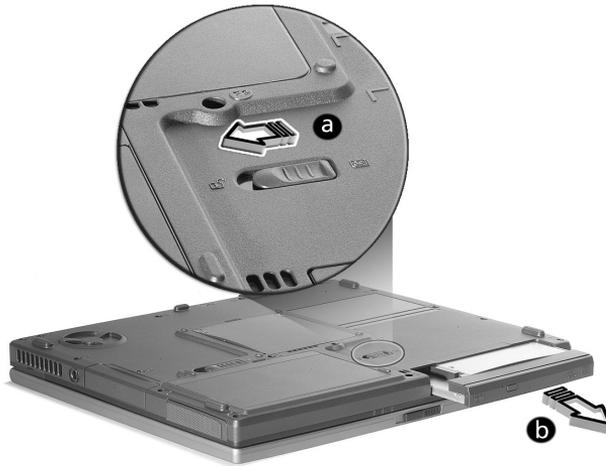

Then insert the optional AcerMedia module into the AcerMedia bay until it clicks into place.





*Moving with your  
computer*

Your Extensa 2900 series notebook computer is ideal for taking with you when you move around.

This chapter provides tips on things to consider when traveling with your computer.

## *Disconnecting from the desktop*

Before moving with your computer, you must turn it off and disconnect all peripherals:

- 1 Save your work and close all applications.
- 2 Shut down Windows to turn off your computer.
- 3 Unplug the AC adapter from the mains outlet, and then disconnect it from the computer.
- 4 Disconnect any external devices, such as a keyboard, mouse, or printer, that are attached to your computer.
- 5 If you are using a security lock cable, disconnect the lock from the computer.
- 6 Pack your computer in a strong, waterproof bag or case.

## *Moving around*

Sometimes you might need to move your computer a short distance. For example, you might need to move from your office desk to a meeting room. In these situations, you don't have to shut down the operating system.

### *Preparing the computer*

First, disconnect any peripherals that you don't want to take with you. Next close the lid, placing your computer in Standby mode. You can now safely carry it around the building with you.

When you are ready to use your computer again, open the lid and then press the power button to bring it out of Standby mode.

### *What to bring to short meetings*

If your battery is fully charged, you probably won't need to take anything else with you to the meeting.

### *What to bring to long meetings*

For longer meetings, take along the AC adapter. You can use mains power throughout the meeting, or you can run down your battery first, and then connect the AC adapter after receiving the battery-low warning.

If the meeting room does not have an available power outlet, reduce your computer's power consumption by putting it in Standby mode during long periods of inactivity. It is advisable to take along a spare battery if you have one.

## *Taking the computer home*

When you move between your office and home you will need to prepare your computer for the short trip.

### *Preparing the computer*

After disconnecting your computer from the desktop, prepare the unit as follows:

- 1 Remove all media from the drives. Loaded media can damage the drive heads during transit.
- 2 Pack the computer in a protective case that is padded to guard against knocks. Make sure that the unit cannot slide around inside the case.



.....  
**Caution:** Avoid packing items next to the top of the computer, as this could result in damage to the screen.

### *What to bring with you*

If you don't have spare items at home, it is advisable to take along the AC adapter and this User's Guide.

### *Special considerations*

To protect your computer in transit, it is advisable to pay attention to the following:

- Minimize the effect of temperature changes. Keep your computer with you instead of placing it in storage holds.
- Avoid leaving your computer in a hot car.
- Changes in temperature and humidity can cause condensation to form within your computer. Before turning the computer on, allow it to return to room temperature, and then check the screen for signs of condensation. If the temperature change is greater than 10°C (18°F), allow the computer to come to room temperature slowly by placing it in a room with a temperature between the outside and room temperatures.

## *Setting up a home office*

If you frequently work on your computer at home, as well as at work, it may be worthwhile purchasing a second AC adapter. This will allow you to travel lighter, as you can keep an AC adapter in each location.

You might also find it worthwhile keeping a second set of peripherals at home, such as a keyboard, keypad, mouse and printer.

## *Traveling with the computer*

Sometimes you might need to make longer trips with your computer.

### *Preparing the computer*

Prepare the computer as you would for moving between your office and home. It is advisable to make sure that the battery is fully charged. If you are traveling by air, you might be required to turn on the computer during security checks.

### *What to take with you*

It is advisable to take the following items with you:

- AC adapter.
- Spare, fully charged battery packs.
- Additional printer driver files (if you plan to use another printer).
- Phone and network cables (if you plan to use the computer's modem and network connections).

### *Special considerations*

In addition to the considerations for taking your computer home, keep the following in mind:

- Always take your computer as carry-on luggage.
- If possible, have your computer manually inspected at security checks. Although the computer can pass safely through security X-ray machines, you should never expose it to a metal detector.

# *Traveling internationally with your computer*

Occasionally you might need to travel between countries with your computer.

## *Preparing the computer*

Prepare the computer as you would for normal travel. Remember to take special precautions for air travel.

## *What to take with you*

It is advisable to take the following items with you:

- AC adapter.
- Power cords that are appropriate for the countries you plan to visit.
- Spare, fully charged battery packs.
- Additional printer driver files (if you plan to use another printer).
- Phone and network cables (if you plan to use the computer's modem and network connections). Check that your modem is suitable for the telephone system in the countries you plan to visit. You might have to use a PC Card modem in some locations.

## *Special considerations*

In addition to the considerations for normal travel with your computer, keep the following in mind when traveling internationally:

- Check that your power cord is suitable for the local power supply. If necessary, purchase a power cord that meets local requirements. Avoid using converter kits.
- If you plan to connect over a phone line, check that the computer's modem and your phone cord are suitable for the local phone system. If necessary, purchase a PC Card modem that meets local requirements.



*Software*

Your Extensa 2900 series notebook computer includes system utilities.

This chapter provides information on the important software that comes with your computer.

## System software

Your computer comes preloaded with the following software:

- Microsoft® Windows® operating system
- Hardware BIOS Setup Utility
- System utilities, drivers and application software




-----

**Note:** To run software applications in Windows, first click on the Start button. Next, select the appropriate folder, and then click on the application icon. To learn about the software and utility, make use of the online help provided by the software.

## Launch Manager

Launch Manager allows you to set the two launch keys located above the keyboard. See “Launch keys” on page 23 for the location of the launch keys.

You can access the Launch Manager by clicking on **Start, All Programs,** and then **Launch Manager** to start the application.

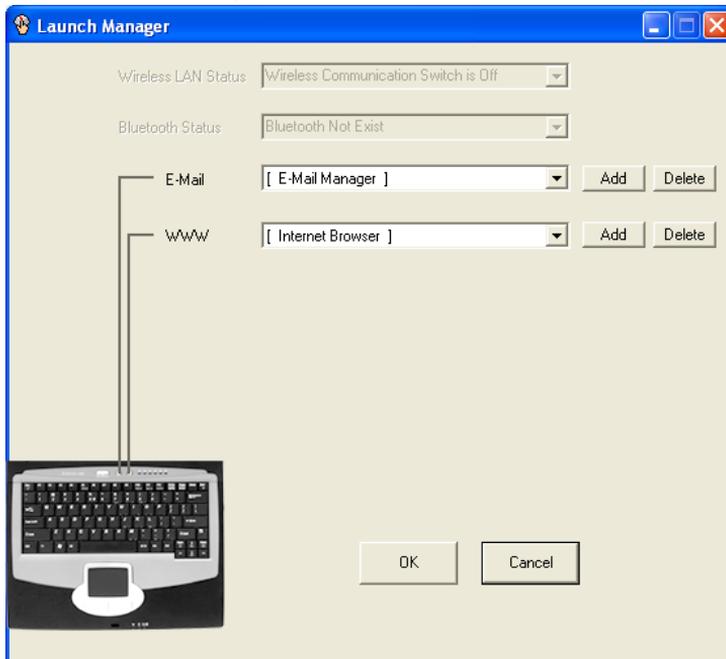

## *BIOS Setup Utility*

The Basic Input/Output System (BIOS) contains important information used to configure the hardware and system software settings. Your computer reads the BIOS when it first starts up, before it loads the operating system.

Your computer's BIOS includes a built-in setup utility called Phoenix Software System Configuration Utility (SCU). It can be started shortly after you turn the computer on, by pressing the F2 key during Power-On Self Test (POST).

The BIOS Setup Utility displays summary information on your computer, its devices, processor and memory.

Your computer is already configured for optimal performance, and so you should not need to run this utility. However, you may need to change the BIOS settings if you encounter configuration problems in the future. Refer to "Frequently asked questions" on page 65 if a problem arises.

# *Troubleshooting*

This chapter instructs you on how to deal with common system problems. Please read it before calling a technician.

Solutions to more serious problems may require opening the computer. Do not attempt to open and service the computer by yourself. Contact your dealer or an authorized service center for assistance.

## *Frequently asked questions*

This section suggests solutions to commonly encountered problems.

### ***I press the power button, but my computer does not start or boot-up.***

Look at the Power status indicator. If it is not lit, no power is being delivered to the computer. Check the following:

- If you are running on battery power, the battery may be low and unable to power the computer. Connect the AC adapter to recharge the battery pack.
- If you are running on mains power, make sure that the AC adapter is properly plugged in to the computer and to the power outlet.

### ***Nothing appears on the screen.***

The computer's power management system automatically blanks the screen to save power. Press any key to turn the display back on.

If pressing a key does not turn the display back on, check the following:

- The brightness level might be too low. Press **Fn + →** hot key to increase the screen brightness level.
- The display device might be set to an external monitor. Press the **Fn + F5** hot key to toggle the display setting.
- The system may be in standby mode. Try pressing the power button to resume.

### ***The image is not full-screen.***

Make sure that the resolution is set to a resolution your system supports:

- Right click on your Windows desktop and select Properties to bring up the Display Properties dialog box. Alternatively, click on the Display icon in Control Panel.
- Click on the Settings tab to check the resolution setting. Resolutions lower than the specified resolution result in a display that is less than full-screen.

***There is no audio coming from my computer.***

Check the following:

- The volume may be muted. In Windows, look at the volume control icon on the taskbar. If it is crossed-out, click on the icon and deselect the Mute option.
- The volume level may be too low. In Windows, click on the volume control icon on the taskbar, and then use the slider control to increase the volume level.
- If headphones are connected to the headphone jack on the computer, your computer's built-in speakers will be turned off.

***My external microphone does not work.***

Check the following:

- Make sure that the external microphone is properly plugged into the microphone-in jack on the computer.
- Make sure that the volume is not muted or set too low.

***I can't eject the optical drive tray with my computer turned off.***

The computer needs to be turned on for the optical drive eject button to function. If you need to eject the optical drive tray when the computer is turned off, push a straightened paper clip into the optical drive emergency eject hole. See "Emergency ejection of the optical drive tray" on page 25 for more information.

***The keyboard does not respond.***

Try attaching an external USB keyboard to one of your computer's USB ports. If it works, the internal keyboard might have become disconnected. Contact your dealer or an authorized service center.

***The optical drive cannot read a disc.***

Check the following:

- Make sure that the disc is supported by the drive. If your computer has a CD-ROM drive, it can read CDs but cannot read DVDs. If your computer has a DVD drive, it can read both CDs and DVDs.
- When placing a disc in the drive tray, make sure that it is secure on the spindle of the drive tray.
- Make sure that the disc is free from scratches or smudges. If the disc is dirty, clean it using a disc cleaning kit.
- If the disc is OK, the drive head might be dirty. Clean it using a drive head cleaning kit.

***The printer does not work.***

Check the following:

- Make sure that the printer is connected to a power outlet and it is turned on.
- Check that the cable is properly connected to the appropriate ports on both the computer and the printer.
- If you are using a printer connected to your computer's parallel port, restart the computer. Windows needs to find the new hardware and install the necessary drivers.

***I want to set up my location to use the internal modem.***

Follow these steps:

- Click on **Start**, and then click on **Control Panel**.
- Double-click on **Phone and Modem Options**.
- In the **Dialing Rules** tab, begin setting up your location.

Refer to Windows Help and Support for more information.

***When the battery is 95-99% full, it won't charge to 100% capacity.***

To preserve the life of the battery, the system only lets you charge the battery when its capacity falls below 95%. It is recommended that you run down the battery, and then fully recharge it.

## Requesting service

### *International Traveler's Warranty (ITW)*

Your computer is backed by an International Traveler's Warranty (ITW) that gives you security and peace of mind when traveling. Our worldwide network of service centers are there to give you a helping hand.

An ITW passport comes with your computer. This passport contains all you need to know about the ITW program. A list of available, authorized service centers is in this handy booklet. Read this passport thoroughly.

Always have your ITW passport on hand, especially when you travel to receive the benefits from our support centers. Place your proof-of-purchase in the flap located inside the front cover of the ITW passport.

If the country you are traveling in does not have an Acer-authorized ITW service site, you can still get in contact with our offices worldwide.

Please consult [www.acersupport.com](http://www.acersupport.com).

### *Before you call*

Please have the following information available when you call Acer for online service, and please be at your computer when you call. With your support, we can reduce the amount of time a call takes and help solve your problems efficiently.

If there are error messages or beeps reported by your computer, write them down as they appear on the screen (or the number and sequence in the case of beeps).

You are required to provide the following information:

Name: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

Telephone number: \_\_\_\_\_

Machine and model type: \_\_\_\_\_

Serial number: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

*Appendix A*  
*Specifications*

This appendix lists the general specifications of your computer.

### *Microprocessor*

- Intel® Pentium® M Processor at 1.3~1.7 GHz or higher

### *Memory*

- Main memory expandable up to 2 GB
- Two DDR DIMM slots
- Support 128 MB, 256 MB, 512 MB & 1GB DDR SDRAM modules
- 512 KB flash ROM BIOS

### *Data storage*

- One high-capacity, Enhanced-IDE hard disk
- One 5.25-inch internal hot-swappable optical drive (AcerMedia bay)

### *Display and video*

- 14.1" or 15.0" Thin-Film Transistor (TFT) displaying at 1024 x 768 XGA resolution, or 15.0" TFT displaying at 1400 x 1050 SXGA+ resolution
- ATI MOBILITY™ RADEON™ 9200/9700 with 64MB of external DDR video RAM, supporting Microsoft-DirectX-9.0
- Simultaneous LCD and CRT display support
- S-video for output to a television or display device that supports S-video input
- DualView™ display support

### *Audio*

- 16-bit AC'97 stereo audio
- Dual speakers
- Separate audio ports for headphone-out, and line-in/microphone-in devices

### *Keyboard and pointing device*

- 85-/86-key Windows keyboard
- Ergonomically-centered touchpad pointing device

### *I/O ports*

- One Type II CardBus PC Card slot
- One RJ-45 jack (Ethernet 10/100)
- One RJ-11 phone jack (V.92)
- One DC-in jack for AC adapter
- One parallel port
- One VGA port for external monitor
- One speaker/headphone-out jack (3.5mm mini jack)
- One microphone-in jack
- One IEEE 1394 port
- One S-video TV-out port
- Three USB 2.0 ports (two in rear and one on left)
- One FIR port (IrDA)

### *Weight and dimensions*

- 2.79 kg (6.15 lbs) for 14.1" LCD model  
2.84 kg (6.26 lbs) for 15" LCD model
- 333.6 mm (W) x 276.3 mm (D) x 32 mm (H)

### *Environment*

- Temperature:
  - Operating: 5°C ~ 35°C
  - Non-operating: -20°C ~ 65°C
- Humidity (non-condensing):
  - Operating: 20% ~ 80% RH
  - Non-operating: 20% ~ 80% RH

### *Operating system*

- ACPI support
- DMI 2.0-compliant
- Microsoft Windows operating system

### *Power*

- Battery pack
  - 63 Wh Li-ion battery pack
  - 2.5-hour rapid charge/3.5-hour charge-in-use
- AC adapter
  - 65-Watt
  - Auto sensing 90~264Vac, 47~63Hz

### *Options*

- 128 MB/256 MB/512 MB/1GB memory upgrade modules
- Additional Li-Ion battery pack
- Additional AC adapter
- USB floppy drive
- CD-ROM, DVD-ROM, DVD/CD-RW Combo, DVD-RW, DVD-Dual, or DVD Super-Multi drive



*Appendix B*  
***Notices***

This appendix lists the general notices of your computer.

## *FCC notice*

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

## *Notice: Shielded cables*

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

## *Notice: Peripheral devices*

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

## *Caution*

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this computer.

## *Use conditions*

Federal Communications Commission

Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful; interference,

and (2) this device must accept any interference received, including interference that may cause undesired operation.

The following local Manufacturer/Importer is responsible for this declaration:

Product Name: Notebook Personal Computer

Model: Extensa 2900, CL51

Name of Responsible Party: Acer America Corporation

Address of Responsible Party: 2641 Orchard Parkway, San Jose, CA 95134, U.S.A.

Contact Person: Young Kim

Phone No.: 408-922-2909

Fax No.: 408-922-2606

### *Notice: Canadian users*

This Class B digital apparatus complies with Canadian ICES-003.

### *Remarque à l'intention des utilisateurs canadiens*

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## *Modem notices*

### *FCC*

This equipment complies with Part 68 of the FCC rules. Located on the bottom side of the modem is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. Upon request, you must provide this information to your telephone company.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But, if advance notice is not practical, you will be notified as soon as possible. You will also be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If this equipment should fail to operate properly, disconnect the equipment from the phone line to determine if it is causing the problem. If the problem is with the equipment, discontinue use and contact your dealer or vendor.

**CAUTION:** To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.

## ***TBR 21***

This equipment has been approved [Council Decision 98/482/EC - "TBR 21"] for single terminal connection to the Public Switched Telephone Network (PSTN). However, due to differences between the individual PSTNs provided in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN termination point. In the event of problems, you should contact your equipment supplier in the first instance.

## ***Declaration of Conformity***

Hereby, Acer, declares that this Extensa 2900 series is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. (Please visit <http://global.acer.com/products/notebook/reg-nb/> for complete documents.)

## ***List of Applicable Countries***

EU member states as of April 2003 are: Belgium, Denmark, Germany, Greece, Spain, France, Ireland, Italy, Luxembourg, the Netherlands, Austria, Portugal, Finland, Sweden, and the United Kingdom. Usage allowed in the countries of European Union, as well as Norway, Switzerland, Iceland and Liechtenstein. This device must be used in strict accordance with the regulations and constraints in the country of use. For further information, please contact local office in the country of use.

## ***Telecommunications notices***

### ***A-Tick notice***

For safety reasons, only connect headsets with a telecommunications compliance label. This includes customer equipment previously labelled permitted or certified.

## *Important safety instructions*

Read these instructions carefully. Save them for future reference.

- 1** Follow all warnings and instructions marked on the product.
- 2** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 3** Do not use this product near water.
- 4** Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 5** Slots and openings are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
- 6** This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- 7** Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
- 8** If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
- 9** Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 10** Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
- 11** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a** When the power cord or plug is damaged or frayed.
  - b** If liquid has been spilled into the product.
  - c** If the product has been exposed to rain or water.
  - d** If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

- e** If the product has been dropped or the case has been damaged.
  - f** If the product exhibits a distinct change in performance, indicating a need for service.
- 12** Replace the battery with the same type as the product's battery we recommend. Use of another battery may present a risk of fire or explosion.
  - 13** Warning! Batteries may explode if not handled properly. Do not disassemble or dispose of them in fire. Keep them away from children and dispose of used batteries promptly.
  - 14** Use only the proper type of power supply cord set (provided in your accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, type SPT-2, rated 7A 125V minimum, VDE approved or its equivalent. Maximum length is 15 feet (4.6 meters).

## *Laser compliance statement*

The CD or DVD drive used with this computer is a laser product. The CD or DVD drive's classification label (shown below) is located on the drive.

CLASS 1 LASER PRODUCT

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.

APPAREIL A LASER DE CLASSE 1 PRODUIT

LASERATTENTION: RADIATION DU FAISCEAU LASER INVISIBLE EN CAS D'OUVERTURE. EVITER TOUTE EXPOSITION AUX RAYONS.

LUOKAN 1 LASERLAITE LASER KLASSE 1

VORSICHT: UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET NICHT DEM STRAHL AUSSETZEN

PRODUCTO LÁSER DE LA CLASE I

ADVERTENCIA: RADIACIÓN LÁSER INVISIBLE AL SER ABIERTO. EVITE EXPONERSE A LOS RAYOS.

ADVARSEL: LASERSTRÅLING VEDÅBNING SE IKKE IND I STRÅLEN.

VARO! LAVATTAESSA OLET ALTTINA LASERSÄTEILYLLE.

VARNING: LASERSTRÅLNING NÅR DENNA DEL ÅR ÖPPNAD ÅLÅ TUIJOTA SÄTEESEENSTIRRA EJ IN I STRÅLEN

VARNING: LASERSTRÅLNING NAR DENNA DEL ÅR ÖPPNADSTIRRA EJ IN I STRÅLEN

ADVARSEL: LASERSTRÅLING NAR DEKSEL ÅPNESSTIRR IKKE INN I STRÅLEN

## *Lithium battery statement*

**The Extensa 2900 series uses the lithium battery, BATCL50L or BATCL50L4.**

### **CAUTION**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

### **ADVARSEL!**

Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Léver det brugte batteri tilbage til leverandøren.

### **ADVARSEL**

Eksplosjonsfare ved feilaktig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

### **VARNING**

Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.

### **VAROITUS**

Päristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

### **VORSICHT!**

Explosionsgefahr bei unsachgemäßen Austausch der Batterie Ersatz nur durch denselben oder einem vom Hersteller empfohlenem ähnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

## *LCD pixel statement*

The LCD unit is produced with high-precision manufacturing techniques. Nevertheless, some pixels may occasionally misfire or appear as black or red dots. This has no effect on the recorded image and does not constitute a malfunction.

## *Macrovision copyright protection notice*

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision

Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, 4,819,098, 4,907,093 and 6,516,132 licensed for limited viewing uses only.

**Note: Below regulatory information is for models with wireless LAN and/or Bluetooth only.**

## *Regulatory Notice*

### *General*

This product complies with the radio frequency and safety standards of any country or region in which it has been approved for wireless use.

Depending on configurations, this product may or may not contain wireless radio devices (such as wireless LAN and/or Bluetooth™ modules). Below information is for products with such devices.

### *European Union (EU)*

This device complies with the essential requirements of the European Council Directives listed below:

73/23/EEC Low Voltage Directive

- EN 60950

89/336/EEC Electromagnetic Compatibility (EMC) Directive

- EN 55022
- EN 55024
- EN 61000-3-2/-3

### 99/5/EC Radio & Telecommunications Terminal Equipment (R&TTE) Directive

- Art.3.1a) EN 60950
- Art.3.1b) EN 301 489 -1/-17
- Art.3.2) EN 300 328-2
- Art.3.2) EN 301 893 \* applied to 5GHz only

 (for 2.4 GHz device)  (for 5 GHz device)

\* The applicable number varies according to the different Notified Body ID No. applied to the wireless module installed in this product. These numbers are subject to change without notice.

### *List of Applicable Countries*

EU member states as of April 2003 are: Belgium, Denmark, Germany, Greece, Spain, France, Ireland, Italy, Luxembourg, the Netherlands, Austria, Portugal, Finland, Sweden, and the United Kingdom. Usage allowed in the countries of European Union, as well as Norway, Switzerland, Iceland and Liechtenstein. This device must be used in strict accordance with the regulations and constraints in the country of use. For further information, please contact local office in the country of use.

### *Canada - Industry Canada (IC)*

This device complies with RSS 210 of Industry Canada.

### *USA - Federal Communications Commission (FCC)*

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

### *Caution: Exposure to Radio Frequency Radiation*


The radiated output power of the wireless module is far below the Federal Communications Commission (FCC) radio frequency exposure limits.

Nevertheless, the wireless module shall be used in such a manner that the potential for human contact during normal operation is minimized.

The transmitter and the antenna are permanently installed inside the notebook, and are specific for this model (not for generic computer). For compliance with FCC radiation exposure limits, it should be operated with a separation distance of 20cm or more between the antenna and the body of user, and the antenna should not be operated next to a nearby person.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## Diversity antenna position

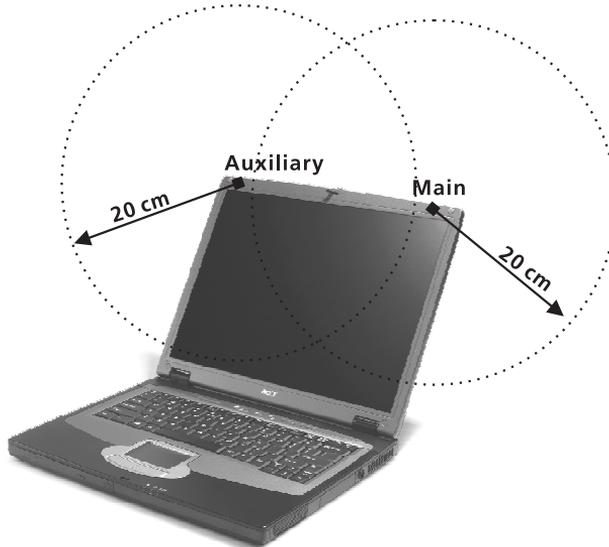



**Acer Incorporated**  
 8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih,  
 Taipei Hsien 221, Taiwan.  
 Tel : 886-2-2696-1234  
 Fax : 886-2-2696-3535  
 www.acer.com

### Declaration of Conformity

We,

Acer Inc.  
 8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih,  
 Taipei Hsien 221, Taiwan.

Contact Person: Mr. Easy Lai  
 Tel: 886-2-8691-3089 Fax: 886-2-8691-3000  
 E-mail: [easy\\_lai@acer.com.tw](mailto:easy_lai@acer.com.tw)

Hereby declare that:

Product: Notebook PC  
 Trade Name: Acer  
 Model Number: Extensa 2900, CL51  
 SKU Number: Extensa 29xxxxxx ("x" = 0~9, a~z, A~Z, or blank)

Is in compliance with the essential requirements and other relevant provisions of the following EC directives.

Reference No.	Title
89/336/EEC	Electromagnetic Compatibility (EMC directive)
73/23/EEC	Low Voltage Directive (LVD)
1999/5/EC	Radio & Telecommunications Terminal Equipment Directive (R&TTE)

The product specified above was tested conforming to the applicable Rules under the most accurate measurement standards possible, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue to comply with the requirements.

*Easy Lai*  
 -----  
 Easy Lai / Director  
 Qualification Center  
 Product Assurance, Acer Inc.

2004/4/1

-----  
 Date

# Index

## A

- AcerMedia drive 24
- audio 28
  - adjusting the volume 28
  - connecting externally 44
  - troubleshooting 66

## B

- battery pack
  - battery-low warning 36
  - caring for v
  - characteristics 33
  - charging 35
  - checking charge level 35
  - installing 34
  - low conditions 36
  - maximizing life 33
  - optimizing 35
  - removing 35
  - using the first time 33

- BIOS Setup Utility
  - entering 62

- brightness
  - hot keys 18

## C

- caps lock 14
  - on indicator 12

- care
  - battery pack v
  - computer iv

- CD
  - troubleshooting 66

- charging
  - checking level 35

- cleaning
  - computer v

- computer
  - bringing to meetings 54
  - caring for iv
  - cleaning v
  - disconnecting 53
  - features 10
  - moving around 54
  - security 29

- setting up a home office 56
- taking home 55
- traveling internationally 57
- traveling on local trips 56
- turning off iii

## connections

- audio 44
- external display devices 41
- external input devices 41
- keyboard, external 41
- keypad, external 41
- mouse 41
- printer 44
- USB 42

- connectivity options 26
  - Ethernet 26

## D

- display
  - hot keys 17
  - troubleshooting 65
- DVD
  - troubleshooting 66

## E

- Ethernet connection 26
- Euro 19

## F

- FAQ. See frequently-asked questions
- frequently-asked questions 65
- front view 3

## G

- guide iii

## H

- hard disk 24
- help iii
- Hibernation mode
  - hot key 17

## I

- ITW. See warranty

## K

- keyboard
  - connecting externally 41
  - lock keys 14
  - troubleshooting 66

keypad  
connecting externally 41

**L**

launch keys 23  
left view 5

**M**

memory  
installing 47–48  
upgrading 47  
microphone  
troubleshooting 66  
modem  
setting location 67  
mouse  
connecting externally 41

**N**

notice  
DVD copyright protection 82  
num lock 14  
on indicator 13

**O**

options  
memory upgrade 47  
PC Cards 45  
spare AC adapter 46  
spare battery 46

**P**

PC Card  
inserting 45  
removing 46  
power management 37  
printer  
connecting 44  
troubleshooting 67  
problems 65  
audio 66  
CD 66  
display 65  
DVD 66  
keyboard 66  
printer 67  
startup 65

**R**

rear view 7  
right view 6

**S**

safety  
CD or DVD 81  
FCC notice 77  
general instructions 80  
lithium battery 82  
modem notices 78  
scroll lock 14  
on indicator 12  
security  
slot 29  
service  
when to call v  
software  
bundled 61  
speakers  
hot key 17  
troubleshooting 66  
status indicators 12  
status LCD 12  
storage 24  
AcerMedia drive 24  
hard disk 24  
support  
information 68

**T**

touchpad 21  
using 21–22  
travel  
international flights 57  
local trips 56

**U**

USB  
connecting 42

**V**

volume  
adjusting 28

**W**

warranty  
International Traveler's  
Warranty 68