


# AcerAltos 11000 System

## User's Guide

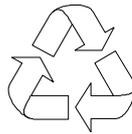

100% Recycled Paper

---

## Copyright

Copyright © 1998 by this company. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

## Disclaimer

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective companies.

---

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully. Save these instructions for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not use this product near water.
4. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
5. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
6. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
7. This product is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
8. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.

- 
9. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed 15 amperes.
  10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
  11. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
  12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
    - a. When the power cord or plug is damaged or frayed
    - b. If liquid has been spilled into the product
    - c. If the product has been exposed to rain or water
    - d. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
    - e. If the product has been dropped or the cabinet has been damaged
    - f. If the product exhibits a distinct change in performance, indicating a need for service

- 
13. Replace the battery with the same type as the product's battery we recommend. Use of another battery may present a risk of fire or explosion. Refer battery replacement to a qualified serviceman.
  14. **Warning!** The battery could explode if not handled properly. Do not recharge, disassemble or dispose of it in fire. Keep it away from children and dispose of any used battery promptly.
  15. Use only the proper type of power supply cord set (provided in your keyboard/manual accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, type SVT/SJT, rated 6A 125V minimum, VDE approved or its equivalent. Maximum length is 15 feet (4.6 meters).

---

## CD-ROM Safety Warning

### **DANGER**

INVISIBLE RADIATION WHEN OPEN.  
AVOID EXPOSURE TO BEAM.

### **VORSICHT**

UNSICHTBARE LASERSTRAHLUNG WENN GEÖFFNET.  
NICHT IN DEN STRAHL SEHEN.

### **ATTENTION**

RADIATION DU FAISCEAU LASER INVISIBLE. EN CAS  
D'OUVERTURE. EVITER TOUTE EXPOSITION AUX RAYONS.

### **VARO**

AVATTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE  
LASERSÄTEILYLLE ÄLÄ KATSO SÄTEESEEN.

### **VARNING!**

OSYNLING LASERSTRÄLNING NÄR DENNA DEL ÄR ÖPPNAD.  
BETRAKTA EJ STRÄLEN.

### **VARNING**

OSYNLING LASERSTRÄLNING NÄR DENNA DEL ÄR ÖPPNAD.  
STIRRA EJ IN I STRÄLEN.

### **ADVARSEL**

LASERSTRÄLING VED ÄBNING. SE IKKE IND I STRÄLEN.

CLASS 1 LASER PRODUCT  
APPAREIL A LASER DE CLASSE 1  
LASER KLASSE 1  
LOUKAN 1 LASERLAITE  
PRODUIT LASER  
CATEGORIE 1

---

## Caution on Lithium Batteries

### CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

### ADVARSEL!

Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering. Udsiftning må kun ske med batteri af samme fabrikat og type. Léver det brugte batteri tilbage til leverandøren.

### ADVARSEL

Eksplosjonsfare ved feilaktig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

### WARNING

Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.

### VAROITUS

Päristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

### VORSICHT!

Explosionsgefahr bei unsachgemäßen Austausch der Batterie Ersatz nur durch denselben oder einem vom Hersteller empfohlenem ähnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

---

## **FCC Class B Radio Frequency Interference Statement**

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/television technician for help.

**Notice 1:**

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Notice 2:**

Shielded interface cables, if any, must be used in order to comply with the emission limits.

---

## About this Manual

### Purpose

This user's guide aims to give you the information you need to operate the system properly and tells you how to install internal components.

### Manual Structure

This user's guide consists of three chapters.

#### *Chapter 1 System Board*

This chapter describes the system board and all its major components. It contains the system board layout, jumper settings, cache and memory configurations, and information on other internal devices.

#### *Chapter 2 CPU Board*

This chapter describes the dual-processor CPU board. It includes the CPU board jumper settings and cache and system memory configurations. Step-by-step instructions tell you how to install the CPUs and memory modules.

#### *Chapter 3 BIOS Utility*

This chapter gives information about the system BIOS and tells how to configure the system by changing the settings of the BIOS parameters.

---

## Conventions

The following conventions are used in this manual:

Text entered by user

, , , etc.



Represents text input by the user.

Represent the actual keys that you have to press on the keyboard.

### **NOTE**

Gives bits and pieces of additional information related to the current topic.

### **CAUTION**

Gives precautionary measures to avoid possible hardware or software problems.

### **IMPORTANT**

Reminds you to take specific actions relevant to the accomplishment of procedures.

---

## Table of Contents

### Chapter 1 System Board

1.1	Features .....	1-1
1.2	Major Components.....	1-3
1.3	Layout.....	1-4
1.4	Jumpers and Connectors .....	1-5
1.4.1	Jumper and Connector Locations .....	1-5
1.4.2	Jumper Settings .....	1-6
1.4.3	Connector Functions.....	1-7
1.5	ESD Precautions.....	1-9
1.6	Video Memory Upgrade .....	1-10
1.6.1	Supported Video Resolutions.....	1-10
1.7	Installing Expansion Cards.....	1-13
1.7.1	Installing a PCI Card.....	1-13
1.7.2	Installing an ISA Card.....	1-14
1.8	ASM Pro .....	1-16
1.9	Remote Diagnostic Management .....	1-17
1.9.1	Installing an RDM Module.....	1-17
1.10	Error Messages.....	1-18
1.10.1	Software Error Messages.....	1-18
1.10.2	System Error Messages.....	1-18
1.10.3	Correcting Error Conditions .....	1-21

---

## **Chapter 2 CPU Board**

2.1	Layout.....	2-2
2.2	Jumpers and Connectors .....	2-3
2.2.1	Jumper Settings .....	2-4
2.2.2	Connector Functions .....	2-4
2.3	Memory Upgrade.....	2-5
2.3.1	Memory Configurations .....	2-5
2.3.2	Installing a DIMM .....	2-7
2.3.3	Removing a DIMM .....	2-8
2.3.4	Reconfiguring the System .....	2-9
2.4	Installing a Pentium II Processor.....	2-10
2.4.1	Installing the Processor Heatsink and Fan .....	2-11
2.4.2	Installing the Processor Module.....	2-13
2.5	Uninstalling the Processor.....	2-15
2.5.1	Removing the Processor from the Slot ....	2-15
2.5.2	Removing the Processor Heatsink and Fan .....	2-17
2.6	Installing the Termination Board .....	2-19
2.7	CPU Board Installation.....	2-20

## **Chapter 3 BIOS Utility**

3.1	Entering Setup.....	3-2
3.2	System Information.....	3-3
3.2.1	Processor.....	3-4
3.2.2	Processor Speed.....	3-5
3.2.3	Bus Frequency .....	3-5
3.2.4	Internal Cache.....	3-5

---

3.2.5	External Cache.....	3-5
3.2.6	Floppy Drive A .....	3-5
3.2.7	Floppy Drive B .....	3-6
3.2.8	IDE Primary Channel Master .....	3-6
3.2.9	IDE Primary Channel Slave.....	3-6
3.2.10	Total Memory .....	3-6
3.2.11	Serial Port 1 .....	3-6
3.2.12	Serial Port 2 .....	3-7
3.2.13	Parallel Port .....	3-7
3.2.14	Pointing Device .....	3-7
3.2.15	Memory Parity Mode .....	3-7
3.2.16	Onboard USB.....	3-7
3.3	Product Information .....	3-8
3.3.1	Product Name .....	3-8
3.3.2	System S/N .....	3-8
3.3.3	Main Board ID .....	3-9
3.3.4	Main Board S/N.....	3-9
3.3.5	System BIOS Version.....	3-9
3.3.6	System BIOS ID .....	3-9
3.3.7	BIOS Release Date .....	3-9
3.4	Disk Drives .....	3-10
3.4.1	Floppy Drives .....	3-12
3.4.2	IDE Drives.....	3-12
3.5	Power Management .....	3-16
3.5.1	Power Management Mode.....	3-16
3.6	Startup Configuration .....	3-18
3.6.1	Fast POST Mode.....	3-18

---

3.6.2	Silent Boot .....	3-19
3.6.3	Num Lock After Boot .....	3-19
3.6.4	Memory Test .....	3-19
3.6.5	Initialize SCSI Before IDE .....	3-19
3.6.6	System Boot Drive .....	3-20
3.6.7	Boot from IDE CD-ROM .....	3-20
3.7	Advanced Configuration.....	3-21
3.7.1	Onboard Devices Configuration.....	3-22
3.7.2	PnP/PCI System Configuration.....	3-29
3.7.3	Memory/Cache Configuration .....	3-34
3.7.4	Non-PnP ISA Device Configuration .....	3-36
3.8	System Security Setup.....	3-40
3.8.1	Disk Drive Control .....	3-40
3.8.2	Setup Password .....	3-41
3.8.3	Power-on Password.....	3-45
3.9	Date and Time .....	3-46
3.9.1	Date .....	3-47
3.9.2	Time.....	3-47
3.10	Remote Diagnostic Configuration.....	3-48
3.11	Load Setup Default Settings .....	3-49
3.12	Abort Settings Change .....	3-50
3.13	Leaving Setup.....	3-51

---


## List of Figures

1-1	System Board Layout .....	1-4
1-2	System Board Jumper and Connector Locations .....	1-5
1-3	Installing a Video Memory Chip .....	1-10
1-4	Installing a PCI Card .....	1-13
1-5	Installing an ISA Card.....	1-15
1-6	Installing the RDM Module .....	1-17
2-1	CPU Board Layout .....	2-2
2-2	Pentium II CPU Board Jumper Locations .....	2-3
2-3	Installing a DIMM .....	2-7
2-4	Removing a DIMM .....	2-8
2-5	Matching the Fan-Heatsink Clips with the Holes on the Processor .....	2-10
2-6	Removing the Thermal Tape Protector .....	2-11
2-7	Inserting the Clip Ends into the Processor Holes ....	2-11
2-8	Locking a Wide Clip End.....	2-12
2-9	Locking a Narrow Clip End.....	2-12
2-10	Installing the Pentium II Retention Mechanism.....	2-13
2-11	Installing a Pentium II Processor Module.....	2-14
2-12	Securing the Pentium II Processor Module.....	2-14
2-13	Unlocking the Module Latches .....	2-15
2-14	Removing the Pentium II Processor Module.....	2-16
2-15	Releasing the Clip.....	2-17
2-16	Detaching the Processor Heatsink and Fan.....	2-18
2-17	Installing the Termination Board.....	2-19
2-18	Installing the CPU Board.....	2-20

---

## List of Tables

1-1	System Board Jumper Settings .....	1-6
1-2	Connector Functions .....	1-7
1-3	Video Resolutions .....	1-11
1-4	System Error Messages .....	1-19
2-1	Settings for CPU Core/Bus Frequency Ratio (JP1).....	2-4
2-2	Connector Functions .....	2-4
2-3	Memory Configurations .....	2-5
3-1	Parallel Port Operation Mode Settings .....	3-26
3-2	Drive Control Settings .....	3-41

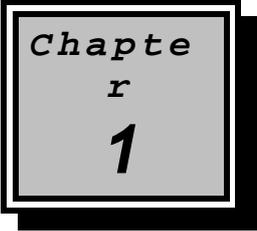A graphic consisting of a grey square with a black border, containing the text "Chapter 1" in a serif font. The word "Chapter" is on the top line, "r" is on the second line, and "1" is on the third line. The graphic is set against a black rectangular background.

Chapter  
r  
1

## ***System Board***

---

### **1.1 Features**

The ACERALTOS11000 is a dual-processor system board built on an ATX baseboard that supports the Intel Pentium II CPU processor running at 333/66 MHz, 350/100 MHz, 400/100 MHz, 450/100 MHz, and 500/100 MHz with external multiprocessor GTL. It contains an exclusive connector for the CPU board that carries two slots for the Pentium II CPU modules.

The host bus interface supports a Pentium II processor with 66 or 100 MHz bus frequency. It also supports synchronous DRAM (SDRAM) DIMMs.

The ACERALTOS11000 supports PCI IDE, universal serial bus (USB) host/hub, and enhanced power management. It also supports Ultra DMA/33 synchronous DMA-compatible devices.

A 50-pin Fast SCSI (Small Computer System Interface) and a 68-pin Wide SCSI comes with the ACERALTOS11000 to connect SCSI devices. Wide SCSI supports 16-bit transfers while fast SCSI uses a 8-bit bus that doubles the clock rate to support data rates of 20 Mb/s.

The ACERALTOS11000 system board also supports the USB (Universal Serial Bus) connector, and other standard features such as two UART NS16C550 serial ports, one parallel port with Enhanced Parallel Port (EPP)/Extended Capabilities Port (ECP) features, a diskette drive interface, and two embedded hard disk interfaces. The board also includes a built-in 10/100 Mb/s LAN controller.

---

The system board supports two optional features, ASM Pro and the remote diagnostic management (RDM), that allow better server management. ASM Pro detects problems in CPU thermal condition, CPU working voltage detection ( $\pm 12V/\pm 5V/3.3V/1.5V$ ), and PCI bus utilization calculation. It also detects if the CPU fan or the chassis fan malfunctions. RDM allows execution of the RDM diagnostic program from a remote RDM station to fix detected problems or to reboot the system.

This system is fully compatible with MS-DOS V6.X, DOS/V, IBM OS/2 Warp, Novell Netware, Novel SFT III, SCO UNIX, and Windows NT.

---


## 1.2 Major Components

The system board has the following major components:

- CPU board slot
- Two ISA and five PCI bus slots
- 256-KB Flash ROM for system BIOS
- System clock/calendar with battery backup
- One 50-pin Fast SCSI and two 68-pin Wide SCSI interfaces
- One RDM interface with two 24-pin connectors
- IDE hard disk and diskette drive interfaces
- Onboard 1-MB Video DRAM
- Power connector for two redundant 420-watt SPS
- Super I/O, SCSI, VGA, memory, and Advanced Server Management (ASM) controller chipsets
- External ports:
  - PS/2-compatible keyboard port (optional AT-keyboard port)
  - PS/2-compatible mouse port
  - Parallel port
  - Video port
  - RJ-45 connector
  - Universal Serial Bus (USB) connector

## 1.3 Layout

Figure 1-1 shows the system board components.

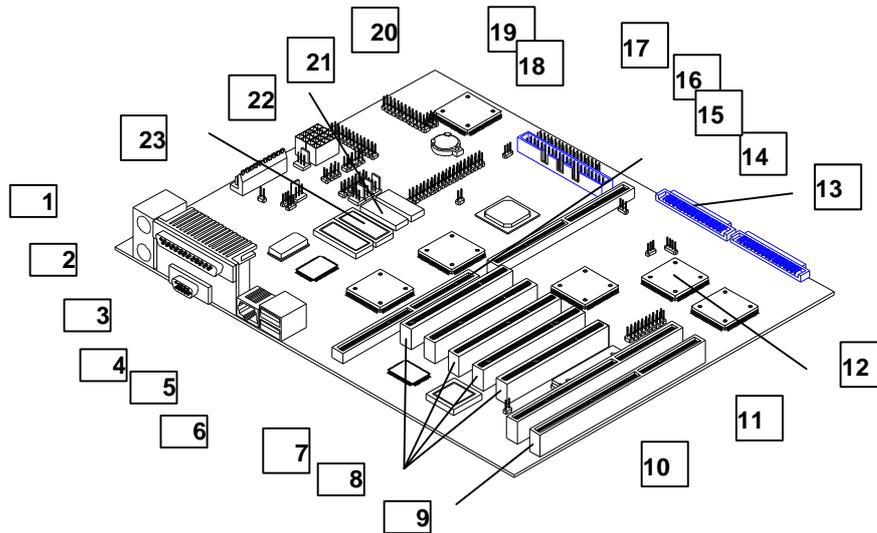

- |    |                     |    |                            |
|----|---------------------|----|----------------------------|
| 1  | Mouse port          | 13 | Wide SCSI connectors       |
| 2  | Keyboard port       | 14 | CPU board connectors       |
| 3  | Parallel port       | 15 | Narrow SCSI connector      |
| 4  | Video port          | 16 | Diskette drive connector   |
| 5  | RJ-45 connector     | 17 | PCI chipset                |
| 6  | USB connector       | 18 | Video controller           |
| 7  | LAN controller      | 19 | Battery                    |
| 8  | PCI slots           | 20 | System Chipset FDC37C935   |
| 9  | ISA slots           | 21 | IDE connector              |
| 10 | Flash ROM BIOS      | 22 | Video DRAM                 |
| 11 | Intel PIIx4 chipset | 23 | Video DRAM upgrade sockets |
| 12 | SCSI chipsets       |    |                            |

Figure 1-1 System Board Layout

## 1.4 Jumpers and Connectors

### 1.4.1 Jumper and Connector Locations

Figure 1-2 shows the jumper and connector locations on the system board.

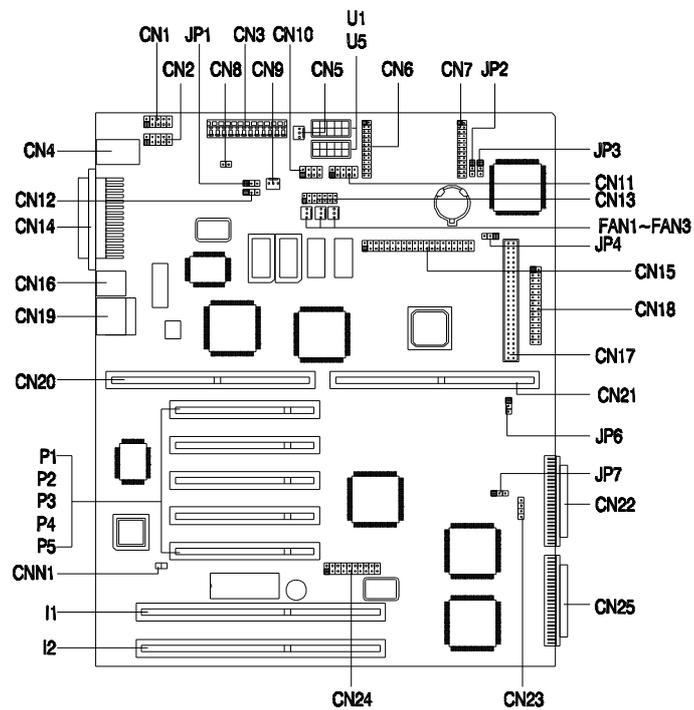


Figure 1-2 System Board Jumper and Connector Locations



*Jumpers are prefixed "JP". Connectors are prefixed "CN". The blackened pin of a jumper or connector represents pin 1.*

## 1.4.2 Jumper Settings

Table 1-1 lists the system board jumpers with their corresponding settings and functions.

Table 1-1 System Board Jumper Settings

Jumper	Setting	Function
Power Supply JP1	1-2* 2-3	420 W 200 W
BIOS Type JP2	1-2 2-3*	Branded Generic
Password Security JP3	1-2 2-3*	Check password Bypass password
5V Standby Source JP4	1-2* 2-3	For SPS with 5V standby For SPS without 5V standby
SCSI Channel 1 High-Byte Termination JP6	1-2* 2-3	Terminator always set to ON SCSI terminator set to ON or OFF by software
VGA Feature JP7	1-2* 2-3	Enabled/disabled through BIOS Onboard VGA always disabled

---

\* Default setting

---

### 1.4.3 Connector Functions

Table 1-2 lists the different connectors on the system board and their respective functions.

Table 1-2 Connector Functions

Connector	Function
CN1	COM 1
CN2	COM 2
CN3, U1, U5	Power connectors
CN4	PS/2 mouse (above) / keyboard (below) connectors
CN5	Standby power connector for 420W standard SPS
CN6, CN7	RDM connectors
CN8	Power connector (connects to the system power button on the front panel)
CN9	Standby power connector for 200W standard SPS (also used for 420W redundant SPS)
CN10	Pin 1 and pin 2 for power LED
CN11	Signal connector for redundant power supply
CN12	NMI signal connector
CN13	Backplane board LED connector
CN14	Printer port (above) / video port (below)
CN15	IDE connector
CN16	LAN connector
CN17	Channel 1 narrow SCSI connector
CN18	Diskette drive connector
CN19	Universal serial bus (USB) ports
CN20	CPU board connector
CN21	CPU board connector
CN22	Channel 1 wide SCSI connector
CN23	Hard disk LED connector
CN24	SMM connector
CN25	Channel 2 wide SCSI connector
CNN1	Connector for chassis intrusion prevention

---

*Table 1-2 Connector Functions*

<b>Connector</b>	<b>Function</b>
FAN1~ FAN3	Fan connectors
I1, I2	ISA Slots
P1-P5	PCI Slots

---

## 1.5 ESD Precautions

Always observe the following electrostatic discharge (ESD) precautions before installing a system component:

1. Do not remove a component from its antistatic packaging until you are ready to install it.
2. Wear a wrist grounding strap before handling electronic components. Wrist grounding straps are available at most electronic component stores.



*Do not attempt the procedures described in the following sections unless you are a qualified technician.*

---

## 1.6 Video Memory Upgrade

Larger video memory allows you to display higher resolutions and more colors. The system board comes with a 1-MB video memory onboard upgradable to 2 MB.

Follow these steps to upgrade the video memory:

1. Locate the video DRAM upgrade sockets labeled U36 and U37 on the system board. See Figure 1-1.
2. Gently insert a video chip into each of the upgrade sockets.



*Make sure that the pin 1 indicator on the chip matches the notched corner of the socket.*

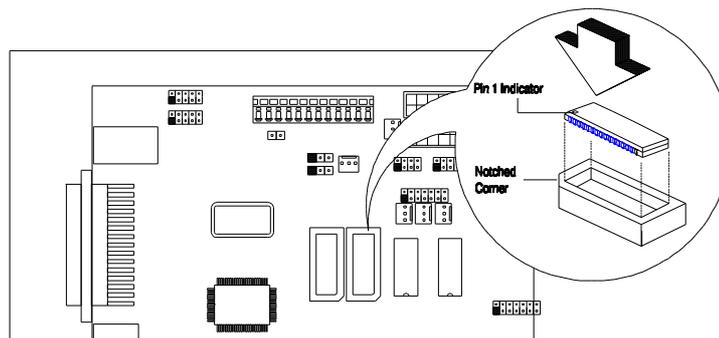


Figure 1-3 Installing a Video Memory Chip

### 1.6.1 Supported Video Resolutions

The onboard video controller and MPEG decoder enable the system to support video functions, as well as enhance the video display.

The following table lists the video resolutions that the system supports:

*Table 1-3 Video Resolutions*

<b>Display Resolution</b>	<b>Refresh Rate</b>	<b>Horizontal Frequency (KHz)</b>	<b>Pixel Clock (MHz)</b>
640 x 480	60	31.4	25.1
640 x 480	72	37.7	31
640 x 480	75	37.5	31.5
640 x 480	90	47.9	39.9
640 x 480	100	52.9	44.9
800 x 600	48 <i>int.</i>	33.8	36.0
800 x 600	56	35.2	36.0
800 x 600	60	37.8	39.9
800 x 600	70	44.5	44.9
800 x 600	72	48.0	50.0
800 x 600	75	46.9	49.5
800 x 600	90	57.1	56.6
800 x 600	100	62.5	67.5
1024 x 768	43 <i>int.</i>	35.5	44.9
1024 x 768	60	48.3	65.0
1024 x 768	70	56.4	75.0
1024 x 768	72	58.2	75.0
1024 x 768	75	60.0	78.8
1024 x 768	90	76.2	100
1024 x 768	100	79.0	110
1152 x 864	43 <i>int.</i>	45.8	65.0
1152 x 864	47 <i>int.</i>	44.9	65.0
1152 x 864	60	54.9	80.0
1152 x 864	70	66.1	100
1152 x 864	75	75.1	110

---

*Table 1-3 Video Resolutions*

<b>Display Resolution</b>	<b>Refresh Rate</b>	<b>Horizontal Frequency (KHz)</b>	<b>Pixel Clock (MHz)</b>
1280 x 1024	43 <i>int.</i>	50.0	80.0
1280 x 1024	47 <i>int.</i>	50.0	80.0
1280 x 1024	60	64	110
1280 x 1024	70	74.6	126
1280 x 1024	74	77.9	135
1280 x 1024	75	80	135

*int.* interlaced

---


## 1.7 Installing Expansion Cards

### 1.7.1 Installing a PCI Card

To install PCI cards:

1. Locate the PCI slot(s) on the mainboard.
2. Remove the bracket on the housing opposite to the empty PCI slot.
3. Insert a PCI card into the slot. Make sure that the card is properly seated.
4. Secure the card to the housing with a screw.

When you turn on the system, BIOS automatically detects and assigns resources to the PCI devices.

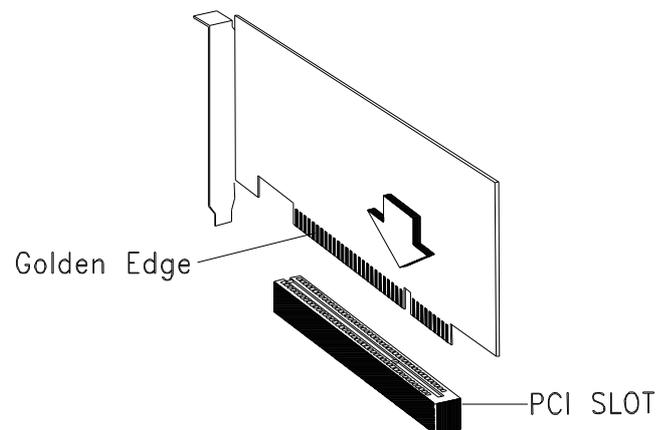

*Figure 1-4 Installing a PCI Card*

---

## 1.7.2 Installing an ISA Card

Both PnP and non-PnP ISA cards require specific IRQs. When installing ISA cards, make sure that the IRQs required by these cards are not previously assigned to PCI devices to avoid resource conflicts.


Follow these steps when installing ISA cards:

1. Remove all PnP cards installed in the system, if any.
2. Install non-PnP ISA cards.
3. Turn on the system.
4. Use Windows 95 or ICU to manually assign the appropriate IRQs to the cards. This ensures that BIOS will not use the resources assigned to the non-PnP ISA cards.



*BIOS detects and configures only PnP cards.*

5. Turn off the system.
6. Locate the expansion slots and install the PnP ISA and PCI cards.
7. Turn on the system. This time PnP BIOS automatically configures the PnP ISA and PCI cards with the available resources.

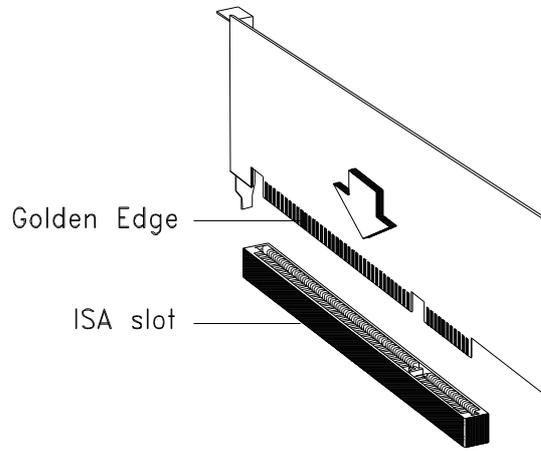

*Figure 1-5 Installing an ISA Card*

---

## **1.8 ASM Pro**

ASM Pro is a server management tool based on the Simple Network Management Protocol (SNMP). It detects server problems related to the CPU thermal condition, 5V/3.3V/1.5V detection, or PCI bus utilization calculation.

This feature is designed primarily for server supervisors and management information system (MIS) personnel to help them detect errors or potential trouble spots in their network servers through a single management station.

ASM Pro consists of two major parts:

- ASM-Station - a Windows-based monitoring station that communicates with the ASM-Agents.
- ASM-Agent(s) - the individual servers managed by the ASM-Station.

Refer to the ASM Pro user's manual for more information.

---

## 1.9 Remote Diagnostic Management


Remote Diagnostic Management (RDM) is a network management tool that utilizes modems and telephone lines to control a host of servers from a remote station. It monitors and analyzes the server condition, updates the BIOS settings if necessary, or reboots the server in the event of failure and quickly returns it to normal operation. This capability to execute the RDM program from a remote site bridges the distance barrier in fixing server problems and reduces wasted time due to system failure.

### 1.9.1 Installing an RDM Module

The system board comes with connectors CN6 and CN7 to accommodate the RDM module.

Follow these steps to install the RDM module and connect the cable:

1. See Figure 1-2 for the location of the RDM connectors.
2. Gently insert the RDM module into CN6 and CN7. The module fits only in one direction. Do not force it into the connectors.

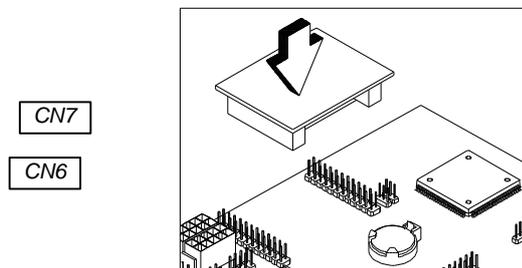

*Figure 1-6 Installing the RDM Module*

Refer to the RDM User's Guide for detailed instructions on RDM installation.

---

## **1.10 Error Messages**

Do not continue using the computer if you receive an error message of any type. Note the message and take corrective action. This section explains the different types of error messages and corresponding corrective measures.

There are two general types of error messages:

- Software
- System

### **1.10.1 Software Error Messages**

Software error messages are returned by your operating system or application. These messages typically occur after you boot the operating system or when you run your applications. If you receive this type of message, consult your application or operating system manual for help.

### **1.10.2 System Error Messages**

A system error message indicates a problem with the computer itself. A message of this type normally appears during the power-on self-test, before the operating system prompt appears.

Table 1-4 lists the system error messages.

*Table 1-4 System Error Messages*

<b>Message</b>	<b>Action</b>
CMOS Battery Error	Replace the RTC chip or contact your dealer.
CMOS Checksum Error	Check the RTC chip and the necessary jumper. If the battery is still good, run Setup.
Display Card Mismatch	Run Setup.
Diskette Drive Controller Error or Not Installed	Check and connect the control cable to the diskette controller.
Diskette Drive Error	Diskette may be defective. If not, replace the diskette drive.
Diskette Drive A Type Mismatch	Run Setup and select the proper drive type.
Diskette Drive B Type Mismatch	Run Setup and select the proper drive type.
Equipment Configuration Error	Modify the memory configuration to agree with one of the options in Table 2-3 or 2-4.
Hard disk Controller Error	Run Setup.
Hard disk 0 Error	Check all cable connections. Replace hard disk.
Hard disk 1 Error	Check all cable connections. Replace hard disk.
Keyboard Error or No Keyboard Connected	Check and connect the keyboard to the system unit.
Keyboard Interface Error	Replace the keyboard or contact your dealer.

**Table 1-4**      *System Error Messages (continued)*

<b>Message</b>	<b>Action</b>
Memory Error at: MMMM:SSSS:OOO (W:XXXX, R:YYYY) where: M: MB, S: Segment, O: Offset, X/Y: write/read pattern	Check installed DIMMs. Contact your dealer.
Memory Size Mismatch CPU Clock Mismatch	Run Setup. Check if the values shown in the memory parameters are correct. If correct, exit Setup and reboot the system. If the error message reappears, seek technical assistance.
Onboard Serial Port 1 Conflict	Run Setup and disable the port.
Onboard Serial Port 2 Conflict	Run Setup and disable the port.
Onboard Parallel Port Conflict	Run Setup and disable the port.
Pointing Device Error	Check and connect pointing device.
Pointing Device Interface Error	Replace the pointing device or contact your dealer.
Press F1 key to continue or Ctrl-Alt-Esc for Setup	Press <b>F1</b> or simulataneously press <b>CTRL</b> + <b>ALT</b> + <b>ESC</b> to enter Setup.
Real Time Clock Error	Check the RTC chip. If it is still good, run Setup. If not, replace the RTC chip.
CPU BIOS Code Mismatch	Contact your dealer.

---

### 1.10.3 Correcting Error Conditions

As a general rule, if an error message says "Press F1 to continue," it is caused by a configuration problem, which can be easily corrected. An equipment malfunction is more likely to cause a fatal error, i.e., an error that causes complete system failure.

Here are some corrective measures for error conditions:

1. Run Setup. You must know the correct configuration values for your system before you enter Setup, which is why you should write them down when the system is correctly configured. An incorrect configuration is a major cause of power-on error messages, especially for a new system.
2. Remove the system unit cover. Check that the jumpers on the system board and any expansion boards are set correctly.
3. If you cannot access a new disk, it may be because your disk is not properly formatted. Format the disk first using the FDISK and FORMAT commands.
4. Check that all connectors and boards are securely plugged in.

If you go through the corrective steps above and still receive an error message, the cause may be an equipment malfunction.

If you are sure that your configuration values are correct and your battery is in good condition, the problem may lie in a damaged or defective chip.

In either case, contact an authorized service center for assistance.

Chapte  
r  
**2**

## ***CPU Board***

---

The CPU board carries two sockets to support a powerful dual-CPU configuration. The sockets accommodate the new Intel Pentium II CPU running at 333/66 MHz, 350/100 MHz, 400/100 MHz, 450/100 MHz, and 500/100 with external multiprocessor GTL.

The board comes with four DRAM banks composed of four 168-pin dual-inline memory module (DIMM) sockets that accommodate Synchronous DRAM (SDRAM) DIMMs. The M9LD2 CPU board supports multiple-bit error detection and single-bit error correction through the ECC/parity feature.

---

## 2.1 Layout

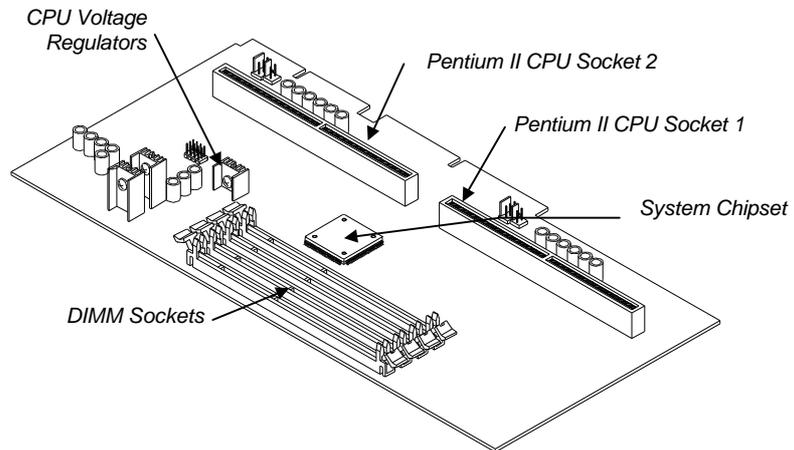


Figure 2-1 CPU Board Layout

---

## 2.2 Jumpers and Connectors

Figure 2-2 shows the jumper and connector locations on the CPU board.

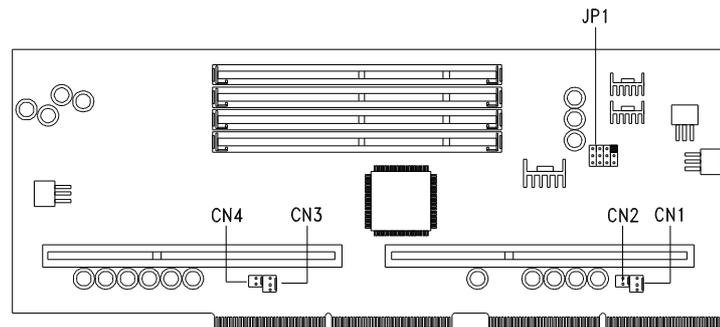


Figure 2-2 Pentium II CPU Board Jumper Locations



Jumpers are prefixed "JP". Connectors are prefixed "CN". The blackened pin of a jumper represents pin 1.

## 2.2.1 Jumper Settings

Table 2-1 lists the CPU board jumpers with their corresponding settings and functions.

Table 2-1 Settings for CPU Core/Bus Frequency Ratio (JP1)

JP1 Settings				CPU Core/Bus Freq.
1-2-3	4-5-6	7-8-9	10-11-12	
1-2 Closed	4-5 Closed	7-8 Closed	10-11 Closed	1/2
1-2 Closed	4-5 Closed	8-9 Closed	10-11 Closed	1/3
1-2 Closed	4-5 Closed	7-8 Closed	11-12 Closed	1/4
1-2 Closed	4-5 Closed	8-9 Closed	11-12 Closed	1/5
1-2 Closed	5-6 Closed	7-8 Closed	10-11 Closed	2/5
1-2 Closed	5-6 Closed	8-9 Closed	10-11 Closed	2/7
1-2 Closed	5-6 Closed	7-8 Closed	11-12 Closed	2/9
1-2 Closed	5-6 Closed	8-9 Closed	11-12 Closed	2/11

## 2.2.2 Connector Functions

Table 2-2 lists the different connectors on the CPU board and their respective functions.

Table 2-2 Connector Functions

Connector	Function
CN1	CPU 2 Fan connector
CN2	CPU 2 Thermal Detection connector
CN3	CPU 1 Fan connector
CN4	CPU 1 Thermal Detection connector

---

## 2.3 Memory Upgrade

The system board comes with four 168-pin sockets, labeled DIMM1 to DIMM4, that accommodate single-density and double-density PC-100 SDRAM DIMMs.

The SDRAM DIMMs should work under 3.3 volts, 5 volts memory devices are not supported..



*The system do not support 66 MHz (PC-66) SDRAM.*

The sockets support SDRAM DIMMs for a total of 2048-MB system memory using 512-MB DIMMs. Tables 2-3 lists some possible memory configurations.

### 2.3.1 Memory Configurations

*Table 2-3 Memory Configurations*

Bank 1	Bank 2	Bank 3	Bank 4	Total
				<b>Memory</b>
64 MB				64 MB
64 MB	64 MB			128 MB
64 MB	64 MB	64 MB		192 MB
64 MB	64 MB	64 MB	64 MB	256 MB
128 MB				128 MB
128 MB	128 MB			256 MB
128 MB	128 MB	128 MB		384 MB
128 MB	128 MB	128 MB	128 MB	512 MB
256 MB				256 MB
256 MB	256 MB			512 MB

Table 2-3 Memory Configurations

Bank 1	Bank 2	Bank 3	Bank 4	Total
				Memory
256 MB	256 MB	256 MB		768 MB
256 MB	256 MB	256 MB	256 MB	1024 MB
512 MB				512 MB
512 MB	512 MB			1024 MB
512 MB	512 MB	512 MB		1536 MB
512 MB	512 MB	512 MB	512 MB	2048 MB

### 2.3.2 Installing a DIMM

To install a DIMM, align it with the socket and press it down until the holding clips secure the DIMM in place.



*The DIMM socket is slotted to ensure proper installation. If you slip in a DIMM but it does not completely fit, you may have inserted it the wrong way. Reverse the orientation of the DIMM.*

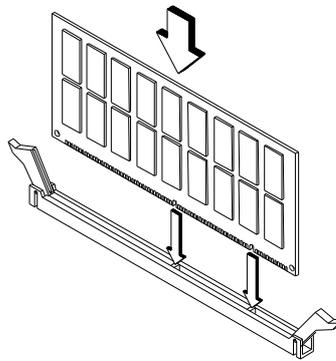


Figure 2-3 Installing a DIMM

---

### 2.3.3 Removing a DIMM

To remove a DIMM, press the holding clips on both sides of the socket outward to release the DIMM.



*Place your forefingers on the top of the DIMM before you press the holding clips to gently disengage the DIMM from the socket.*

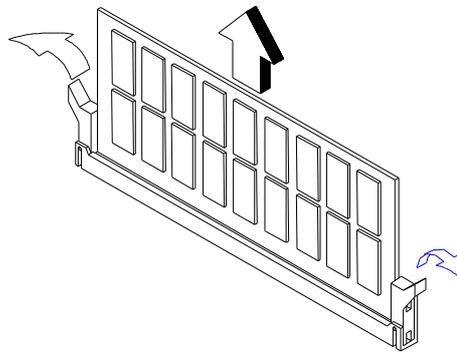


Figure 2-4 Removing a DIMM

---

### 2.3.4 Reconfiguring the System

You must enter Setup after installing or removing DIMMs to reconfigure the system.

Follow these steps to reconfigure the system:

1. Turn the system on. A memory error message appears, indicating that the total memory does not match the value stored in CMOS.
2. Simultaneously Press **CTRL** + **ALT** + **ESC** to enter Setup. A warning message appears indicating an incorrect memory configuration.
3. Press **ESC** twice to exit and reboot the system.

The system boots with the new memory configuration.


---

## 2.4 Installing a Pentium II Processor



*You must install the heatsink and fan before you install the processor module into the socket on the CPU board.*

The Pentium II processor module comes with holes on one side to hold the clips of the heatsink and fan. The upper set of holes (near the latches) on the processor are wider and should match the wider ends of the clips on the heatsink. The lower set of holes are smaller and should match the narrow ends of the heatsink clips.

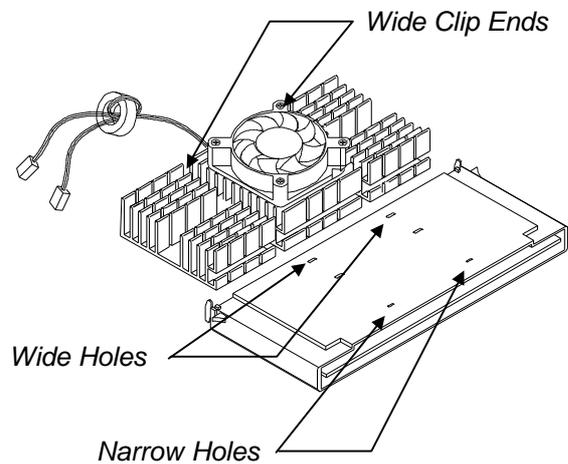


*Figure 2-5 Matching the Fan-Heatsink Clips with the Holes on the Processor*

---

## 2.4.1 Installing the Processor Heatsink and Fan


Follow these steps when installing the heatsink and fan into the Pentium II processor module:

1. Remove the thermal tape protector at the back of the heatsink.

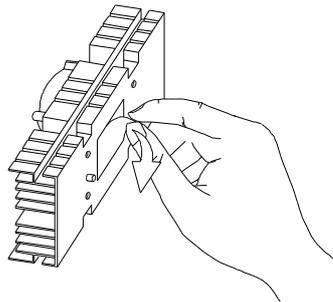


*Figure 2-6 Removing the Thermal Tape Protector*

2. Insert the wide clip ends into the wide holes on the processor and the narrow clip ends into the narrow holes.

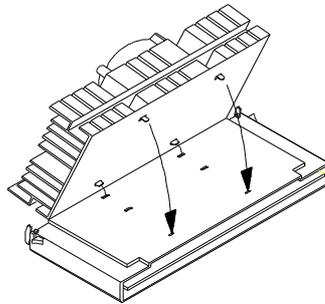


*Figure 2-7 Inserting the Clip Ends into the Processor Holes*

- 
3. Use a screwdriver to press and lock in the wide end of a clip first. Then without lifting the screwdriver, point it downward to press and lock the narrow end of the clip. See Figures 2-8 and 2-9 for the illustration of this step.

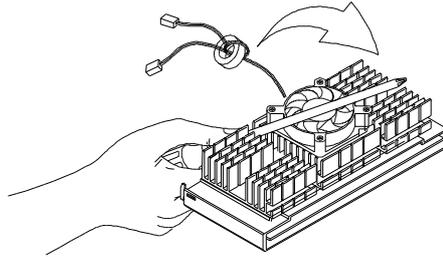

*Figure 2-8*      *Locking a Wide Clip End*

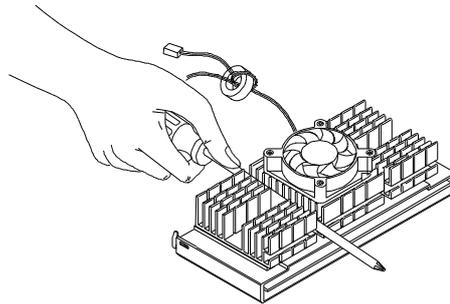

*Figure 2-9*      *Locking a Narrow Clip End*

4. Repeat step 3 to lock the other clip.

---

## 2.4.2 Installing the Processor Module

Follow these steps to install the Pentium II processor module into the socket on the CPU board.

1. Place the retention mechanism over the processor socket on the CPU board. Secure it with the screws that came with the package.

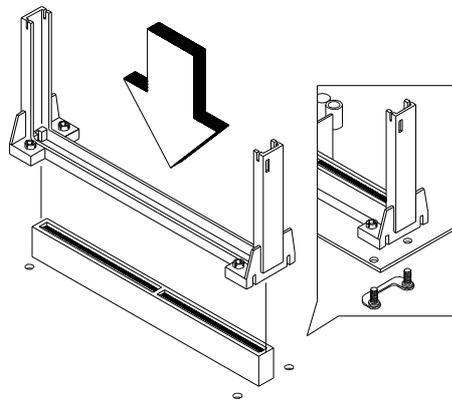



Figure 2-10 Installing the Pentium II Retention Mechanism

2. With the processor module golden fingers pointing downward, align the processor to the posts of the retention mechanism then lower it down. See Figure 2-11.




*The golden fingers of the Pentium II module are slotted such that it only fits in one direction. Make sure that module groove matches the one on the processor socket.*

- 
3. Press down the processor module until the golden fingers completely fit into the socket.

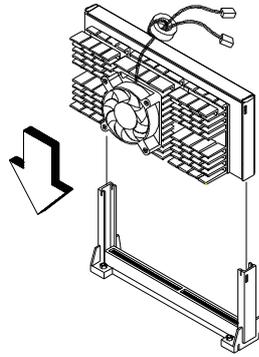

*Figure 2-11 Installing a Pentium II Processor Module*

4. Press the latches on the sides to lock the processor module into place.

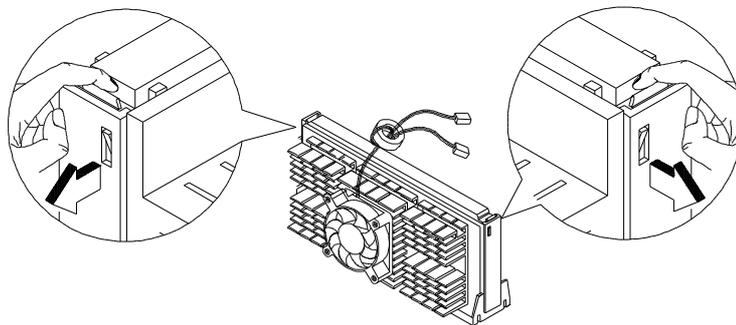

*Figure 2-12 Securing the Pentium II Processor Module*

5. Locate the fan connectors on the system board and connect the fan cables.


---

## 2.5 Uninstalling the Processor

### 2.5.1 Removing the Processor from the Slot


Follow these steps to remove the Pentium II processor module from the slot.

1. Detach the fan cables from the connectors on the system board.
2. Unlock the latches that secure the processor module.

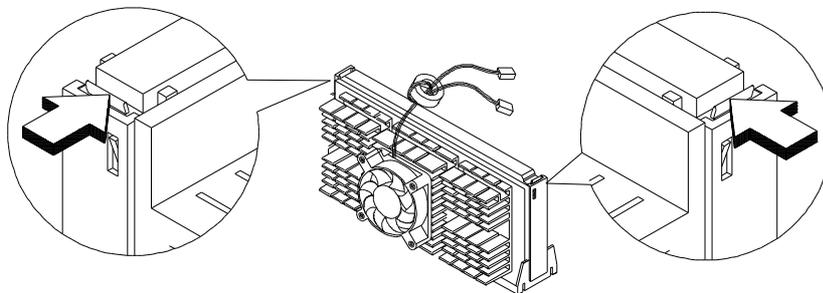

*Figure 2-13 Unlocking the Module Latches*

- 
3. Firmly hold the processor module and pull it out of the socket.

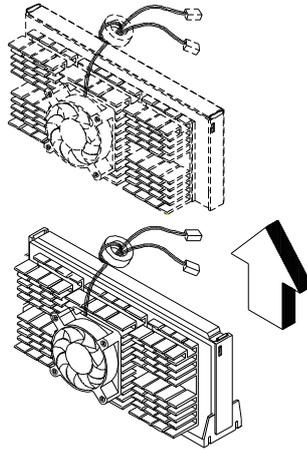


*Figure 2-14 Removing the Pentium II Processor Module*

---

## 2.5.2 Removing the Processor Heatsink and Fan

Follow these steps to remove the processor heatsink and fan:


1. Insert a flat-type screwdriver to one of the wide clip ends of the processor heatsink and fan.
2. Push the clip end to release clip from the processor.

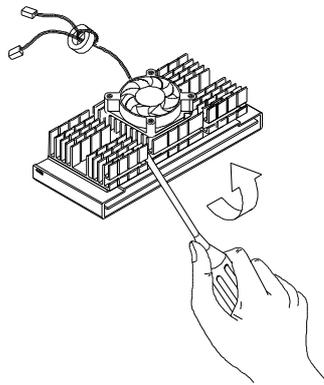

*Figure 2-15 Releasing the Clip*

3. Repeat steps 1 and 2 to release the other clip.

- 
4. When you have released both clips, take off the processor heatsink and fan.

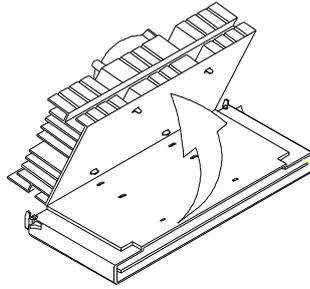

*Figure 2-16 Detaching the Processor Heatsink and Fan*


---

## 2.6 Installing the Termination Board

When you use only one slot on the CPU board, you must install a termination board into the empty slot.

Follow these steps to install the termination board:

1. Position the termination board over the empty slot.
2. Carefully insert the golden fingers of the termination board into the slot until the board fits completely.

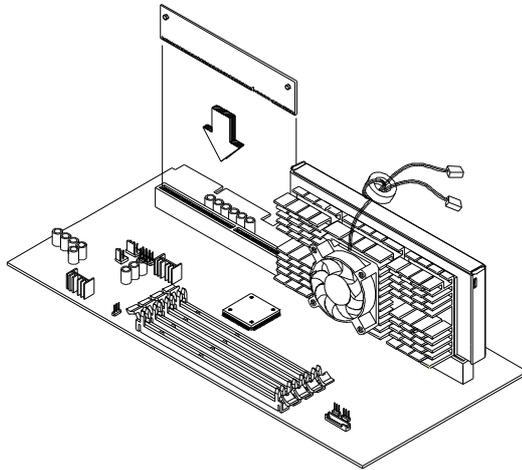

*Figure 2-17 Installing the Termination Board*



*Do not forget to install the termination board if you only have one processor.*

---

## 2.7 CPU Board Installation

After setting the jumpers and installing memory modules and CPUs, install the CPU board into the CPU board slot on the system board.

Follow these steps to install the CPU board:

1. Position the CPU board over the slot on the system board such that the component side (CPU side) faces upward.
2. Gently insert the golden fingers of the board into the slot.

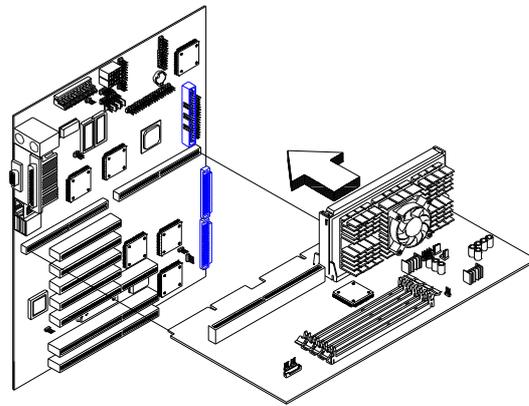


Figure 2-18 Installing the CPU Board



*Make sure that the CPU board is properly seated in the slot.*

Chapte  
r  
**3**

## ***BIOS Utility***

---

The BIOS Utility allows you to view your system's configuration settings.

Most systems are already configured by the manufacturer or the dealer. There is no need to run Setup when starting the computer unless you get a Run Setup message.

The Setup program loads configuration values into the battery-backed nonvolatile memory called CMOS RAM. This memory area is not part of the system RAM.



*If you repeatedly receive Run Setup messages, the battery may be bad. In this case, the system cannot retain configuration values in CMOS. Ask a qualified technician for assistance.*

### **3.1**

---


## Entering Setup

To enter Setup, simultaneously press the key combination **CTRL** + **ALT** + **ESC**.



*You must press **CTRL** + **ALT** + **ESC** while the system is booting. This key combination does not work during any other time.*

The BIOS Utility main menu then appears:

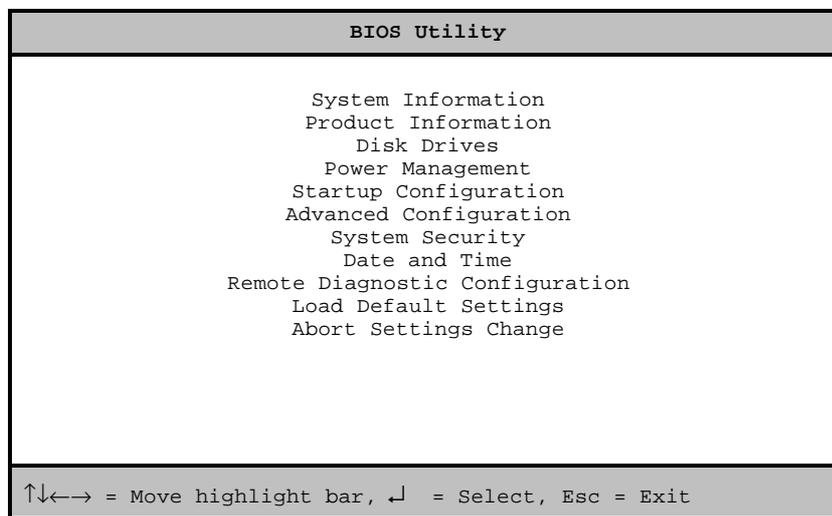

*The parameters on the screens show default values. These values may not be the same as those in your system.*

---

## 3.2

---

## System Information

The following screen appears if you select System Information from the main menu:

```
System Information                               Page 1/2

Processor .....Pentium II
Processor Speed .....xxx MHz
Bus Frequency .....xxx MHz
Internal Cache .....xx KB, Enabled
External Cache .....xxx KB, Enabled
Floppy Drive A .....x.xx MB, x.x-inch
Floppy Drive B .....None
IDE Primary Channel Master.....Hard Disk
IDE Primary Channel Slave.....None
Total Memory .....xx MB
  1st Bank .....SDRAM
  2nd Bank .....SDRAM
  3rd Bank .....SDRAM
  4th Bank .....SDRAM

PgDn/PgUp = Move Screen, Esc = Back to Main Menu
```

The System Information menu shows the current basic configuration of your system.

The command line at the bottom of the menu tells you how to move from one screen to another and return to the main menu.

Press **[PGDN]** to move to the next page or **[PGUP]** to return to the previous page.

Press **[ESC]** to return to the main menu.

The following screen shows page 2 of the System Information menu.

```
System Information Page 2/2

Serial Port 1 ..... Disabled 2F8h, IRQ 4
Serial Port 2 ..... 2F8h, IRQ 3
Parallel Port ..... 378h, IRQ 7
Pointing Device ..... Installed
Memory Parity Mode ..... Disabled
Onboard USB ..... Disabled

PgDn/PgUp = Move Screen, Esc = Back to Main Menu
```

The sections that follow explain each parameter.



The parameters ~~in~~ the [System Information](#) screens show default [settings values](#). These [settings values may not be the same as those in your system.](#)

~~The items on the screens have fixed settings and are not user-configurable from these screens. Select other configuration options from the BIOS Utility main menu to change the settings.~~

### 3.2.1 Processor

The Processor parameter specifies the type of processor currently installed in your system. The system is designed to support the Intel Pentium II CPU.

---

### **3.2.2 Processor Speed**

The Processor Speed parameter specifies the speed of the CPU currently installed in your system. The system supports Intel Pentium II CPUs running at 266/66 MHz, 300/66 MHz, 333/66 MHz, 350/100 MHz, 400/100 MHz, and future Intel Pentium II processors.

### **3.2.3 Bus Frequency**

The Bus Frequency parameter specifies the system external clock. The bus frequency can be either 66 or 100 MHz.

### **3.2.4 Internal Cache**

This parameter specifies the first-level or the internal memory size (i.e., the memory integrated into the CPU), and whether it is enabled or disabled. For information on how to configure the system memory, see section 3.7.3.

### **3.2.5 External Cache**

This parameter specifies the second-level cache memory size currently supported by the system, and whether it is enabled or disabled. For information on how to configure the system memory, see section 3.7.3.

### **3.2.6 Floppy Drive A**

This parameter specifies the type of drive designated as Floppy Drive A. For information on how to configure the floppy drives, see section 3.4.1.

---

### **3.2.7 Floppy Drive B**

This parameter specifies the system's current floppy drive B settings. For information on how to configure the floppy drives, see section 3.4.1.

### **3.2.8 IDE Primary Channel Master**

This parameter specifies the current configuration of the IDE device connected to the master port of the primary IDE channel. For information on how to configure IDE devices, see section 3.4.2.

### **3.2.9 IDE Primary Channel Slave**

This parameter specifies the current configuration of the IDE device connected to the slave port of the primary IDE channel. For information on how to configure IDE devices, see section 3.4.2.

### **3.2.10 Total Memory**

This parameter specifies the total system memory. The memory size is automatically detected by BIOS during the POST (Power-On Self Test). If you install additional memory, the system automatically adjusts this parameter to display the new memory size.

#### **1st Bank/2nd Bank/3rd Bank/4th Bank**

This parameter indicates the type of DRAM installed in the DIMM sockets. The *None* setting indicates that there is no DRAM installed. For the location of the DIMM sockets, refer to Figure 2-1.

### **3.2.11 Serial Port 1**

This parameter indicates the serial port 1 address and IRQ setting.

---

### **3.2.12 Serial Port 2**

This parameter indicates the serial port 2 address and IRQ setting.

### **3.2.13 Parallel Port**

This parameter indicates the parallel port address and IRQ setting.

### **3.2.14 Pointing Device**

The BIOS utility automatically detects if there is a mouse connected to the system. If there is, this parameter displays the `Installed` setting. Otherwise, it is set to `None`.

### **3.2.15 Memory Parity Mode**

This parameter indicates the setting of the memory parity mode. It may be set to `Disabled`, `ECC`, `EC`, or `ECC-HS`.

### **3.2.16 Onboard USB**

This parameter specifies whether the onboard USB controller is enabled or not. For information on how to enable or disable the USB, see section 3.7.1.

## **3.3**

---

## Product Information

The Product Information contains general data about the system. It includes the product name, serial number, BIOS version, etc. This information is necessary for troubleshooting and may be required when asking for technical support.

The following screen shows the Product Information items:

```
Product Information                               Page 1/1
-----
Product Name ..... xxxxxxxxxx
System S/N ..... xxxxxxxxxx
Main Board ID ..... xxxxxxxxxx
Main Board S/N ..... xxxxxxxxxx
System BIOS Version ..... vx.xx
System BIOS ID ..... xxx.xx xxx-xx
BIOS Release Date ..... xx/xx/xx

Esc = Back to Main Menu
```

### 3.3.1 Product Name

This parameter specifies the official name of the system.

### 3.3.2 System S/N

This parameter specifies the system's serial number.

### 3.3.3 Main Board ID

This parameter specifies the system board's identification number.

---

### **3.3.4 Main Board S/N**

This parameter specifies the system board's serial number.

### **3.3.5 System BIOS Version**

This parameter specifies the version of the BIOS utility.

### **3.3.6 System BIOS ID**

This parameter specifies the identification number of the BIOS utility.

### **3.3.7 BIOS Release Date**

This parameter specifies the official date the BIOS version was released.

## **3.4**

---

## Disk Drives

The Disk Drives menu lets you configure the system hard disk and disk drive settings. If your hard disk supports the enhanced IDE features, you may set the functions using this menu.

The following screen shows the Disk Drives parameters and their default settings:

```

Disk Drives                                     Page 1/1
-----
Floppy Drive A ..... [xx-MB, xx-inch]
Floppy Drive B ..... [xx-MB, xx-inch]
  ▶ IDE Primary Channel Master
  ▶ IDE Primary Channel Slave

↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help
```



*The triangle mark that precedes an item within a menu indicates that there is a detailed menu for that particular item. Select the item to display the menu.*

From the Disk Drives screen, select the IDE Primary Channel Master or IDE Primary Channel Slave items to display their respective menus.

Selecting the IDE Primary Channel Master item displays ~~The screen on the next page shows the menu.~~ the following menu:

```
IDE Primary Channel Master                               Page 1/1
Type..... [Auto]
  Cylinder ..... [  ]
  Head ..... [  ]
  Sector ..... [  ]
  Size ..... [  ] MB
Hard Disk Block Mode ..... [Disabled]
Advanced PIO Mode ..... [Auto]
Hard Disk Size > 504MB ..... [Disabled]
Hard Disk 32 Bit Access ..... [Disabled]
CD-ROM Drive DMA Mode ..... [Disabled]
↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help
```

The parameters for the IDE Primary Channel Slave menu are the same as in the above screen.

### 3.4.1

---

## Floppy Drives

To configure the first floppy drive (drive A), highlight the Floppy Drive A parameter. Press **→** or **←** key to view the options, then select the appropriate value.

Possible settings for the Floppy Drive parameters are:

- [ None ]
- [360 KB, 5.25-inch]
- [1.2 MB, 5.25-inch]
- [720 KB, 3.5-inch]
- [1.44 MB, 3.5-inch]
- [2.88 MB, 3.5-inch]

Follow the same procedure to configure floppy drive B. Choose None if you do not have a second floppy drive.

### 3.4.2 IDE Drives

There are two IDE drive option items under the Disk Drives menu. Select the IDE Primary Channel Master if you want to configure an IDE device set as master. Select the IDE Primary Channel Slave item if you want to configure an IDE device set as slave.

To configure an IDE device designated as master:

1. Select the IDE Primary Channel option to display its menu.
2. Highlight the parameter Type, then press **→** or **←** to display the IDE drive types with their respective values for cylinder, head, sector, and size.

---

You may do any of the following:

- Select the type that corresponds to your IDE hard disk drive.
- If you do not know the exact type of your IDE device, select the `Auto` option to let the BIOS utility automatically detect the installed IDE drive type.
- You may save the values under the option `User`. The next time you boot the system, the BIOS utility does not have to auto-configure your IDE drive as it detects the saved disk information during POST (Power-On Self Test).



*We recommend that you copy the IDE disk drive values and keep them in a safe place in case you have to reconfigure the disk in the future.*

- If you have installed an IDE hard disk that was previously formatted but does not use the disk native parameters or structure, i.e., the disk may be formatted according to the user-specified number of cylinders, heads, and sectors, select the `User` option. Then enter the appropriate drive information.
- If there is no device connected, choose `None`.

To configure an IDE device designated as slave:

1. **Select the IDE Primary Channel option to display its ~~menu~~ menu.**
2. **Highlight the parameter Type, then press `→` or `←` to display the IDE drive types with their respective values for cylinder, head, sector, and size. Refer to the above procedure for configuring a master device. ~~Follow step 2 of the procedure when configuring a master device.~~**

---

### **Hard Disk Block Mode**

This function enhances disk performance depending on the hard disk in use. If you set this parameter to *Auto*, the BIOS utility automatically detects if the installed hard disk drive supports the Block Mode function. If supported, it allows data transfer in block (multiple sectors) at a rate of 256 bytes per cycle. To disregard the feature, change the setting to *Disabled*.

### **Advanced PIO Mode**

When set to *Auto*, the BIOS utility automatically detects if the installed hard disk supports the function. If supported, it allows for faster data recovery and read/write timing that reduces hard disk activity time. This results in better hard disk performance. To disregard the feature, change the setting to *Disabled*.

### **Hard Disk Size > 504 MB**

When set to *Auto*, the BIOS utility automatically detects if the installed hard disk supports the function. If supported, it allows you to use a hard disk with a capacity of more than 504 MB. This is made possible through the Logical Block Address (LBA) mode translation. However, this enhanced IDE feature works only under DOS and Windows 3.x, [Windows](#) 95 environments. Other operating systems require this parameter to be set to *Disabled*.

---

### **Hard Disk 32-bit Access**

Enabling this parameter improves system performance by allowing the use of the 32-bit hard disk access. This enhanced IDE feature works only under DOS, Windows 3.x, ~~Windows~~ [Windows 95](#), and Novell NetWare. If your software or hard disk does not support this function, set this parameter to `Disabled`.

### **CD-ROM Drive DMA Mode**

This parameter allows you to enable or disable the CD-ROM drive DMA mode. [Set this parameter to `Enabled` to enable the DMA mode for the CD-ROM drive. This improves the system performance since it allows direct memory access to the CD-ROM. To deactivate the function, set the parameter to `Disabled`.](#)

## **3.5**

---

## Power Management

The Power Management menu lets you configure the system power management features.

The following screen shows the Power Management parameters with their default settings:

```
Power Management                               Page 1/1
-----
Power Management Mode .....[Enabled-Disabled]
IDE Hard Disk Standby Timer .....[15-Minute(s)]
System Sleep Timer .....[2-Minute(s)]
Stop CPU Clock in Sleep State ....[No]

↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help
```

### 3.5.1 Power Management Mode

This parameter allows you to reduce power consumption. When this parameter is set to `Enabled`, you can configure the IDE hard disk and system timers. Setting to `Disabled` deactivates the power management feature and all the timers.

#### IDE Hard Disk Standby Timer

This parameter allows the hard disk to enter standby mode after inactivity of 1 to 15 minutes, depending on your setting. When you access the hard disk again, allow 3 to 5 seconds (depending on the hard disk) for the disk to return to normal speed. Set this parameter to `OFF` if your hard disk does not support this function.

---

### **System Sleep Timer**

This parameter sets the system to the lowest power-saving mode. It automatically enters into the sleep or the suspend mode after a specified period of inactivity. Any keyboard or mouse action, or any modem activity (if the Modem Ring option is enabled - see section 2.5.2) detected resumes system operation.

#### **STOP CPU CLOCK IN SLEEP STATE**

If you want to stop the CPU clock when the system enters the sleep or suspend mode, set this parameter to *Yes*. If not, then select *No*.

## **3.6**

---

## Startup Configuration

The Startup Configuration allows you to specify your preferred setting for bootup.

The following screen appears if you select the Startup Configuration option from the main menu:

```
Startup Configuration                               Page 1/1
Fast POST Mode .....[Auto ]
Silent Boot .....[Enabled Disabled]
Num Lock After Boot .....[Enabled ]
Memory Test .....[Disabled]

Initialize SCSI Before IDE .....[Disabled]
System Boot Drive .....[Drive A Then C]
Boot from IDE CD-ROM .....[Disabled]

↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help
```

### 3.6.1 Fast POST Mode

This parameter allows the system to boot faster by skipping some POST (Power-On Self Test) routines. The default setting is Auto.

### 3.6.2

---

## Silent Boot

This parameter enables or disables the Silent Boot function. When set to `Enabled`, BIOS is in graphical mode and displays only an identification logo during POST and while booting, after which the screen displays the operating system prompt (such as DOS) or logo (such as Windows 95). If any error occurred while booting, the system automatically switches to the text mode.

Even if your setting is `Enabled`, you may also switch to the text mode while booting by pressing `[F3]` after you hear a beep that indicates the activation of the keyboard.

When set to `Disabled`, BIOS is in the conventional text mode where you see the system initialization details on the screen.

### 3.6.3 Num Lock After Boot

This parameter allows you to activate the Num Lock function upon booting. The default setting is `Enabled`.

### 3.6.4 Memory Test

When set to `Enabled`, this parameter allows the system to perform a RAM test during the POST routine. When set to `Disabled`, the system detects only the memory size and bypasses the test routine. The default setting is `Disabled`.

### 3.6.5 Initialize SCSI Before IDE

Enabling this parameter allows SCSI devices installed in the system to be initialized before IDE devices. You may enable this parameter if you have a SCSI boot drive. When this parameter is disabled, the IDE drives are normally initialized first during POST.

---

### 3.6.6 System Boot Drive

This parameter allows you to specify the system search sequence. The selections are:

- Drive A then C: The system checks drive A first. If there is a diskette in the drive, the system boots from drive A. Otherwise, it boots from drive C.
- Drive C then A: The system checks drive C first. If there is a hard disk (drive C) installed, the system boots from drive C. Otherwise, it boots from drive A.
- C: The system always boots from drive C.
- A: The system always boots from drive A.

### 3.6.7 Boot from IDE CD-ROM

When set to `Enabled`, the system checks for a bootable CD in the [IDE](#) CD-ROM drive. If a CD is present, the system boots from the CD-ROM; otherwise, it boots from the drive specified in the System Boot Drive parameter.

When set to `Disabled`, the system boots from the drive specified in the System Boot Drive parameter.



*[Note that the CD-ROM drive mentioned above refers to an IDE CD-ROM drive. When setting the boot options for a SCSI CD-ROM drive, see section 3.7.1 for details on SCSI device boot parameters.](#)*

## 3.7

---


## Advanced Configuration

The Advanced Configuration option allows you to configure the advanced system memory functions.



*Do not change any settings in the Advanced Configuration if you are not a qualified technician to avoid damaging the system.*

The following screen shows the Advanced Configuration parameters:

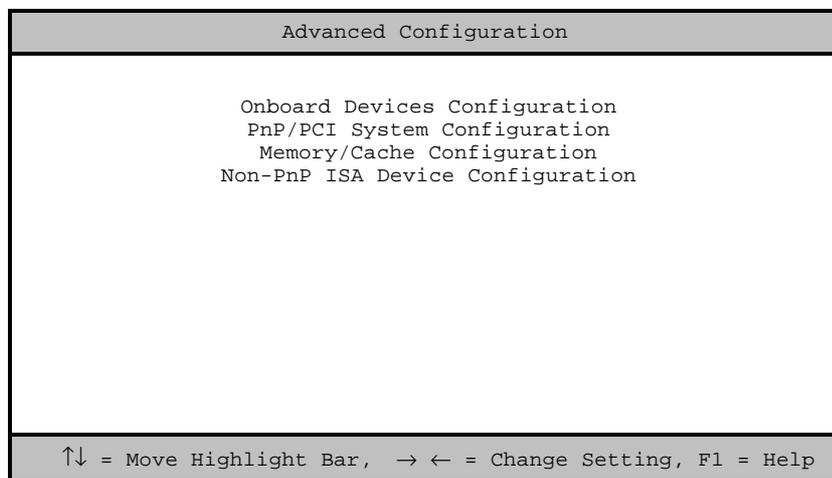

### 3.7.1

---

## Onboard Devices Configuration

The Onboard Devices Configuration allows you to configure the onboard communication ports and the onboard devices. Selecting this option from the Advanced Configuration menu displays the following screen:

```
Onboard Devices Configuration Page 1/2

Serial Port 1 .....[Enabled-Disabled]
  Base Address .....[---2F8h]
  IRQ .....[4---]
Serial Port 2 .....[Enabled ]
  Base Address .....[2F8h]
  IRQ .....[3-3]
Parallel Port .....[Enabled ]
  Base Address .....[378h]
  IRQ .....[7-5]
  Operation Mode .....[-----EPP-----]
  Standard
  ECP DMA Channel .....[---]

↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help
PgDn/PgUp = Move Screen
```

The following screen shows page 2 of the Onboard Devices Configuration menu:

```

Onboard Devices Configuration                               Page 2/2

Onboard Floppy Disk Controller .....[Enabled-Disabled]
Onboard IDE Primary Channel .....[Enabled ]

Onboard PS/2 Mouse (IRQ 12) .....[Enabled ]
Onboard USB .....[Disabled]
  USB Legacy Mode .....[-----]

Onboard SCSI1+ .....[Enabled-Disabled]
  Boot from SCSI1 Device .....[Enabled ]
Onboard SCSI2 .....[Enabled ]
  Boot from SCSI2 Device .....[Enabled ]

Onboard Ethernet Chip .....[Disabled]
  Boot from SCSI1 Device .....[Enabled ]
Onboard SCSI2 .....[Enabled ]
  Boot from SCSI2 Device .....[Enabled ]
Onboard Ethernet Chip .....[Enabled ]

↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help
PgDn/PgUp = Move Screen

```

### Serial Port 1

This parameter allows you to enable or disable the serial port 1. [The Base Address and IRQ items are configurable only if this parameter is enabled.](#)

#### \_\_\_\_\_ BASE ADDRESS

This function lets you set a logical base address for serial port 1. The options are:

- 3F8h
- 2F8h
- 3E8h
- 2E8h

#### \_\_\_\_\_ IRQ

This function lets you assign an interrupt for serial port 1. The options are IRQ 3 and 4.

---

## Serial Port 2

This parameter allows you to enable or disable the serial port 2. [The Base Address and IRQ items are configurable only if this parameter is enabled.](#)

### BASE ADDRESS

This function lets you set a logical base address for serial port 2. The options are:

- 3F8h
- 2F8h
- 3E8h
- 2E8h

### IRQ

This function lets you assign an interrupt for serial port 2. The options are IRQ 3 and 4.



*You can only assign a base address to either serial port 1 or 2. They can not use the same base address at the same time.*

## Parallel Port

This parameter allows you to enable or disable the parallel port.

### BASE ADDRESS

This function lets you set a logical base address for the parallel port. The options are:

- 3BCh
- 378h
- 278h

### IRQ

This function lets you assign an interrupt for the parallel port. The options are IRQ 5 and 7.



*The Base Address and IRQ parameters are configurable only if Parallel Port is enabled.*

*If you install an add-on card that has a parallel port whose address conflicts with the onboard parallel port, the system automatically disables the onboard functions.*

*Check the parallel port address on the add-on card and change the address to one that does not conflict.*

---

---

### OPERATION MODE

This item allows you to set the operation mode of the parallel port. Table 3-1 lists the different operation modes.

*Table 3-1 Parallel Port Operation Mode Settings*

<b>Setting</b>	<b>Function</b>
Standard Parallel Port (SPP)	Allows normal speed one-way operation
Standard and Bidirectional	Allows normal speed operation in a two-way mode
Enhanced Parallel Port (EPP)	Allows bidirectional parallel port operation at maximum speed
Extended Capabilities Port (ECP)	Allows parallel port to operate in bidirectional mode and at a speed higher than the maximum data transfer rate

### ECP DMA CHANNEL

This item becomes active only if you select Extended Capabilities Port (ECP) as the operation mode. It allows you to assign DMA channel 1 or DMA channel 3 for the ECP parallel port function (as required in Windows 95).

### Onboard Floppy Disk Controller

This parameter lets you enable or disable the onboard floppy disk controller.

### Onboard IDE Primary Channel

This parameter lets you enable or disable the primary IDE channel. When enabled, it allows you access the devices connected to the primary channel. When disabled, it deactivates the connected devices.

---

### **Onboard PS/2 Mouse (IRQ 12)**

This parameter enables or disables the onboard PS/2 mouse. When enabled, it allows you to use the onboard PS/2 mouse assigned with IRQ12. When disabled, it deactivates the mouse and makes IRQ12 available for use by other devices.

### **Onboard USB**

This parameter lets you enable or disable the USB controller on board. When enabled, it activates the USB function of the system. When disabled, it deactivates the function.

---

#### **USB LEGACY MODE**

This function, when enabled, lets you use a USB keyboard in DOS. Set this parameter to `Disabled` to deactivate USB keyboard function.

### **Onboard SCSI1**

This parameter lets you enable or disable the SCSI controller on board. When enabled, it activates the SCSI function of the system. When disabled, it deactivates the function.

---

#### **BOOT FROM SCSI1 DEVICE**

When set to `Enabled`, the system checks for a bootable SCSI device drive. If it is present, the system boots from the SCSI device; otherwise, it boots from the drive specified in the System Boot Drive parameter.

When set to `Disabled`, the system boots from the drive specified in the System Boot Drive parameter.

---

## **Onboard SCSI2**

This parameter lets you enable or disable the SCSI controller on board. When enabled, it activates the SCSI function of the system. When disabled, it also deactivates the function.

### **BOOT FROM SCSI2 DEVICE**

When set to *Enabled*, the system checks for a bootable SCSI device drive. If it is present, the system boots from the SCSI device; otherwise, it boots from the drive specified in the System Boot Drive parameter.

When set to *Disabled*, the system boots from the drive specified in the System Boot Drive parameter.

## **Onboard Ethernet Chip**

This parameter lets you enable or disable the LAN function on board. When enabled, it activates the LAN of the system. When disabled, it deactivates the function.

### **3.7.2**

---

## PnP/PCI System Configuration

The PnP/PCI System Configuration allows you to specify the settings for your PCI devices. Selecting this option displays the following screen:≡


```
PnP/PCI System Configuration                               Page 1/2

PCI IRQ Setting .....[ Auto ]

                INTA   INTB   INTC   INTD
PCI Slot 1 ..... [ -- ] [ -- ] [ -- ] [ -- ]
PCI Slot 2 ..... [ -- ] [ -- ] [ -- ] [ -- ]
PCI Slot 3 ..... [ -- ] [ -- ] [ -- ] [ -- ]
PCI Slot 4 ..... [ -- ] [ -- ] [ -- ] [ -- ]
PCI Slot 5 ..... [ -- ] [ -- ] [ -- ] [ -- ]
Onboard LAN ..... [ -- ]
PCI Slot 5 ..... [  ] [  ] [  ] [  ]
Onboard LAN ..... [10]
Onboard SCSI1± ..... [ --1± ]
Onboard SCSI2± ..... [ --1± ]

PCI Device Latency Timer ... [ 0#0# ]

↑↓ = Move Highlight Bar,  → ← = Change Setting, F1 = Help
```

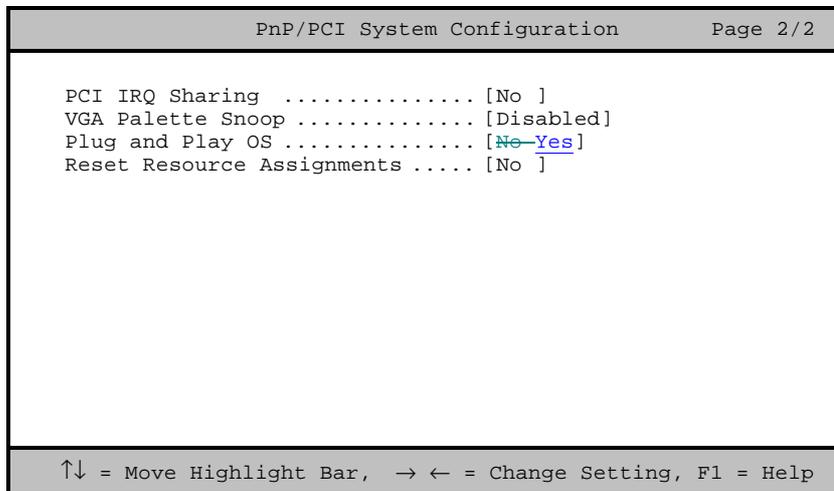

### PCI IRQ Setting

This parameter allows for Auto or Manual configuration of PCI devices. If you use plug-and-play (PnP) devices, set this parameter to Auto. The system then automatically assigns IRQ to the PnP devices. If your PCI device is not a PnP, you can manually assign the interrupt for each device. Refer to your PCI card manual for more information.~~This function is fixed at Auto setting and is nonconfigurable. It automatically configures the plug-and-play (PnP) devices installed in your system.~~



*When the PCI IRQ Setting is set to Auto, all the IRQ setting fields become gray and non-configurable. Refer to your manual for technical information about the PCI card.*

---

## **PCI SLOTS**

These parameters allow you to specify the appropriate interrupt for each of the PCI devices. You can assign IRQ3, IRQ4, IRQ5, IRQ7, IRQ9, IRQ10, IRQ11, IRQ12, IRQ14, or IRQ15 to the slots. These parameters specify the auto-assigned interrupt for each of the PCI devices. Like the PCI IRQ Setting parameter, these are also nonconfigurable.



*Make sure that the interrupt you assign in any of the PCI slots are not used by other devices to avoid conflicts.*

Press  or  to move between fields. Press  or  to select options.

---

## **ONBOARD LAN**

This item allows you to manually assign the interrupt for the onboard LAN when the PCI IRQ Setting parameter is set to Manual . This parameter is grayed and not user-configurable when the PCI IRQ Setting is set to Auto.

---

## **ONBOARD SCSI1**

This item allows you to manually assign the interrupt for the first onboard SCSI device when the PCI IRQ Setting parameter is set to Manual . This parameter is grayed and not user-configurable when the PCI IRQ Setting is set to Auto and when the first Onboard SCSI parameter under the Onboard Devices Configuration screen is set to Disabled.

---

### ONBOARD SCSI2

This item allows you to manually assign the interrupt for the second onboard SCSI device when the PCI IRQ Setting parameter is set to Manual. This parameter is grayed and not user-configurable when the PCI IRQ Setting is set to Auto and when the second Onboard SCSI parameter under the Onboard Devices Configuration screen is set to Disabled.

### PCI DEVICE LATENCY TIMER

This parameter allows you to set the length of time for a PCI device to use the PCI bus.

A PCI master can burst indefinitely as long as the target can source/sink the data, and no other agent requests for the bus. If another PCI device requests for the use of the PCI bus, a PCI bus arbitration takes place, and the tenure of the device currently using the PCI bus cannot go over the PCI latency time set in BIOS. This setting depends on your application. For example, if you install a high bandwidth block I/O card, e.g., FDDI, the longer the latency time the better. This setting only affects the primary PCI components (PCI slots 1, 2, 3, and onboard LAN). The secondary PCI components (PCI slots 4, 5, and onboard SCSI1 and onboard SCSI2) are always set to 20 PCI clocks.

---

## PCI IRQ Sharing

### PCI IRQ Sharing

Setting this parameter to **Yes** allows you to assign the same IRQ to two different devices. To disable the feature, select **No**.



*If there are no IRQs available to assign for the remaining device function, we recommend that you enable this parameter.*

### **VGA Palette Snoop**

This parameter permits you to use the palette snooping feature if you installed more than one VGA card in the system.

The VGA palette snoop function allows the control palette register (CPR) to manage and update the VGA RAM DAC (Digital Analog Converter, a color data storage) of each VGA card installed in the system. The snooping process lets the CPR send a signal to all the VGA cards so that they can update their individual RAM DACs. The signal goes through the cards continuously until all RAM DAC data has been updated and allows the display of multiple images on the screen.



*Some VGA cards have required settings for this feature. Check your VGA card manual before setting this parameter.*

### **Plug and Play OS**

When this parameter is set to **Yes**, BIOS initializes only PnP boot devices such as SCSI cards. When set to **No**, BIOS initializes all PnP boot and non-boot devices such as sound cards.



*Set this parameter to Yes only if your operating system is Windows 95.*

### **Reset Resource Assignments**

Set this parameter to Yes to avoid IRQ conflicts when installing non-PnP or PnP ISA cards. This clears all resource assignments and allows BIOS to reassign resources to all installed PnP devices the next time the system boots. After clearing the resource data, the parameter resets to No.

#### **3.7.3**

---

## Memory/Cache Configuration

The Memory/Cache Configuration allows you to specify the appropriate settings for your system memory. Selecting the option displays the following screen:

Memory/Cache Configuration	Page 1/1
Internal Cache (CPU Cache) .....[Enabled ]	
<del>External</del> -System BIOS Cacheable .....[Enabled ]	
Video BIOS Cacheable .....[Enabled ]	
Memory at 15MB-16MB Reserved for ....[ System ]	
Memory Parity Mode <del>Parity</del> .....[ ECC ]	
<u>Single Processor MP Table</u> <del>MP Fault Tolerance</del> [Enabled Disabled]	

↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help

### Internal Cache (CPU Cache)

This parameter enables or disables the first-level or internal memory. The default setting is *Enabled*.

### System BIOS Cacheable

Set this parameter to *Enabled* if you want the system BIOS to run directly from the cache memory, thus allowing your system to function faster. Set this to *Disabled* to run the system BIOS from RAM. The default is *Enabled*.

---

### Video BIOS Cacheable

Set this parameter to `Enabled` if you want the video BIOS to run directly from the cache memory, thus allowing your system to function faster. Set this to `Disabled` to run the video BIOS from RAM. The default is `Enabled`.

### Memory at 15MB-16MB Reserved for

To prevent memory address conflicts between the system and expansion boards, reserve this memory range for the use of either the system or an expansion board.

### Memory Parity Mode

This parameter allows you to assign a mode. These modes are ECC, EC, and ECC-HS. These feature enables BIOS to detect and correct data errors. Disable this parameter if you want to disregard the function.

### Single Processor MP Table ~~MP Fault Tolerance~~

[Enabling this parameter allows BIOS to create a multiprocessor \(MP\) table.](#)

The Windows NT system will install the multiprocessor kernel if it finds the MP table, otherwise, it will install the single processor kernel if the system can not find the MP table during installation. Enabling this option allows the system to build the multiprocessor kernel whether the system has one or two processor.

The benefit of this option is that users do not need to reinstall Windows NT to activate the MP kernel when installing a second CPU. The drawback is that it will affect the performance of the system with a single CPU running the MP kernel.

---

### 3.7.4 Non-PnP ISA Device Configuration

This parameter reserves the use of resource addresses for non-PnP ISA devices.

Whenever a parameter is set to "Yes", that address is reserved for an ISA card only. The system will not allocate this address to any PCI or PnP cards.

When set to "No", the system will allocate these resource addresses to PCI or PnP cards.



*When installing a non-PnP ISA device, you have to determine which resource address to use. ~~Refer to your manual for technical information about the PCI card.~~*

This section consists of four pages:

Non-PnP ISA Device Configuration		Page 1/4																
<p style="margin: 0;">System Resources Used by Non-PnP ISA Card</p> <p style="margin: 5px 0 0 0;">IRQ</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">IRQ 0 ----- [---]</td> <td style="width: 50%;">IRQ 8 ----- [---]</td> </tr> <tr> <td>IRQ 1 ----- [---]</td> <td>IRQ 9 ----- [No ]</td> </tr> <tr> <td>IRQ 2 ----- [---]</td> <td>IRQ 10 ----- [No ]</td> </tr> <tr> <td>IRQ 3 ----- [No ]</td> <td>IRQ 11 ----- [No ]</td> </tr> <tr> <td>IRQ 4 ----- [No ]</td> <td>IRQ 12 ----- [---]</td> </tr> <tr> <td>IRQ 5 ----- [No ]</td> <td>IRQ 13 ----- [---]</td> </tr> <tr> <td>IRQ 6 ----- [---]</td> <td>IRQ 14 ----- [---]</td> </tr> <tr> <td>IRQ 7 ----- [No ]</td> <td>IRQ 15 ----- [---]</td> </tr> </table>			IRQ 0 ----- [---]	IRQ 8 ----- [---]	IRQ 1 ----- [---]	IRQ 9 ----- [No ]	IRQ 2 ----- [---]	IRQ 10 ----- [No ]	IRQ 3 ----- [No ]	IRQ 11 ----- [No ]	IRQ 4 ----- [No ]	IRQ 12 ----- [---]	IRQ 5 ----- [No ]	IRQ 13 ----- [---]	IRQ 6 ----- [---]	IRQ 14 ----- [---]	IRQ 7 ----- [No ]	IRQ 15 ----- [---]
IRQ 0 ----- [---]	IRQ 8 ----- [---]																	
IRQ 1 ----- [---]	IRQ 9 ----- [No ]																	
IRQ 2 ----- [---]	IRQ 10 ----- [No ]																	
IRQ 3 ----- [No ]	IRQ 11 ----- [No ]																	
IRQ 4 ----- [No ]	IRQ 12 ----- [---]																	
IRQ 5 ----- [No ]	IRQ 13 ----- [---]																	
IRQ 6 ----- [---]	IRQ 14 ----- [---]																	
IRQ 7 ----- [No ]	IRQ 15 ----- [---]																	
↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help																		

Non-PnP ISA Device Configuration		Page 2/4																				
<p style="margin: 0;">DMA</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">DMA 0 ----- [No ]</td> <td style="width: 50%;">DMA 4 ----- [---]</td> </tr> <tr> <td>DMA 1 ----- [No ]</td> <td>DMA 5 ----- [No ]</td> </tr> <tr> <td>DMA 2 ----- [---]</td> <td>DMA 6 ----- [---]</td> </tr> <tr> <td>DMA 3 ----- [No ]</td> <td>DMA 7 ----- [No ]</td> </tr> </table> <p style="margin: 10px 0 0 0;">Expansion ROM Region</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 80%;">C8000h - CBFFFh -----</td> <td>[No ]</td> </tr> <tr> <td>CC000h - CFFFFh -----</td> <td>[No ]</td> </tr> <tr> <td>D0000h - D3FFFh -----</td> <td>[No ]</td> </tr> <tr> <td>D4000h - D7FFFh -----</td> <td>[No ]</td> </tr> <tr> <td>D8000h - DBFFFh -----</td> <td>[No ]</td> </tr> <tr> <td>DC000h - DFFFFh -----</td> <td>[No ]</td> </tr> </table>			DMA 0 ----- [No ]	DMA 4 ----- [---]	DMA 1 ----- [No ]	DMA 5 ----- [No ]	DMA 2 ----- [---]	DMA 6 ----- [---]	DMA 3 ----- [No ]	DMA 7 ----- [No ]	C8000h - CBFFFh -----	[No ]	CC000h - CFFFFh -----	[No ]	D0000h - D3FFFh -----	[No ]	D4000h - D7FFFh -----	[No ]	D8000h - DBFFFh -----	[No ]	DC000h - DFFFFh -----	[No ]
DMA 0 ----- [No ]	DMA 4 ----- [---]																					
DMA 1 ----- [No ]	DMA 5 ----- [No ]																					
DMA 2 ----- [---]	DMA 6 ----- [---]																					
DMA 3 ----- [No ]	DMA 7 ----- [No ]																					
C8000h - CBFFFh -----	[No ]																					
CC000h - CFFFFh -----	[No ]																					
D0000h - D3FFFh -----	[No ]																					
D4000h - D7FFFh -----	[No ]																					
D8000h - DBFFFh -----	[No ]																					
DC000h - DFFFFh -----	[No ]																					
↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help																						

Non-PnP ISA Device Configuration	Page 3/4
----------------------------------	----------

I/O Region

100h - 10Fh ---- [No ]	1E0h - 1EFh --- [No ]
110h - 11Fh ---- [No ]	1F0h - 1FFh --- [---]
120h - 12Fh ---- [No ]	200h - 20Fh --- [No ]
130h - 13Fh ---- [No ]	210h - 21Fh --- [No ]
140h - 14Fh ---- [No ]	220h - 22Fh --- [No ]
150h - 15Fh ---- [No ]	230h - 23Fh --- [No ]
160h - 16Fh ---- [No ]	240h - 24Fh --- [No ]
170h - 17Fh ---- [---]	250h - 25Fh --- [No ]
180h - 18Fh ---- [No ]	260h - 26Fh --- [No ]
190h - 19Fh ---- [No ]	270h - 27Fh --- [No ]
1A0h - 1AFh ---- [No ]	280h - 28Fh --- [No ]
1B0h - 1BFh ---- [No ]	290h - 29Fh --- [No ]
1C0h - 1CFh ---- [No ]	2A0h - 2AFh --- [No ]
1D0h - 1DFh ---- [No ]	2B0h - 2BFh --- [No ]

↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help

Non-PnP ISA Device Configuration		Page 4/4
I/O Region		
2C0h - 2CFh ---- [No ]	3A0h - 3AFh --- [No ]	
2D0h - 2DFh ---- [No ]	3B0h - 3BFh --- [No ]	
2E0h - 2EFh ---- [No ]	3C0h - 3CFh --- [No ]	
2F0h - 2FFh ---- [No ]	3D0h - 3DFh --- [No ]	
300h - 30Fh ---- [No ]	3E0h - 3EFh --- [No ]	
310h - 31Fh ---- [No ]	3F0h - 3FFh --- [No ]	
320h - 32Fh ---- [No ]		
330h - 33Fh ---- [No ]		
340h - 34Fh ---- [No ]		
350h - 35Fh ---- [No ]		
360h - 36Fh ---- [No ]		
370h - 37Fh ---- [No ]		
380h - 38Fh ---- [No ]		
390h - 39Fh ---- [No ]		
↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help		

### 3.8

---

## System Security Setup

The Setup program has a number of security features to prevent unauthorized access to the system and its data.

The following screen appears if you select System Security from the main menu:

System Security		Page 1/1
Disk Drive Control		
Floppy Drive .....	[ Normal	]
Hard Disk Drive .....	[ Normal	]
Setup Password.....	[ None	]
Power On Password.....	[Present]	
Operation Mode.....	[ Normal	]

↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help

### 3.8.1 Disk Drive Control

The disk drive control features allow you to control the floppy drive or the hard disk drive boot function to prevent loading operating systems or other programs from a certain drive while the other drives are operational.

Table 3-2 lists the drive control settings and their corresponding functions.

Table 3-2 Drive Control Settings

Setting	Description
<b>Floppy Drive</b>	
Normal	Floppy drive functions normally
Write Protect All Sectors	Disables the write function on all sectors
Write Protect Boot Sector	Disables the write function only on the boot sector
Disabled	Disables all floppy drive functions
<b>Hard Disk Drive</b>	
Normal	Hard disk drive functions normally
Write Protect All Sectors	Disables the write function on all sectors
Write Protect Boot Sector	Disables the write function only on the boot sector
Disabled	Disables all hard disk functions

### 3.8.2 Setup Password

The Setup Password prevents unauthorized access to the BIOS utility.

#### Setting a Password

1. Make sure that JP3 is set to 2-3 (bypass password).




*You cannot enter the BIOS utility if a Setup password does not exist and JP3 is set to 1-2 (password check enabled).*

*By default, JP3 is set to 2-3 (bypass password).*

2. Enter BIOS utility and select System Security.

- 
3. Highlight the Setup Password parameter and press the  or   or  key. The password prompt appears:





4. Type a password. The password may consist of up to seven characters.



*Be very careful when typing your password because the characters do not appear on the screen.*

5. Press . A prompt asks you to retype the password to verify your first entry.



6. Retype the password then press .

After setting the password, the system automatically sets the Setup Password parameter to `Present`.

7. Press  to exit the System Security screen and return to the main menu.
8. Press  to exit the BIOS utility. A dialog box appears asking if you want to save the CMOS data.
9. Select `Yes` to save the changes and reboot the system.
10. While rebooting, turn off the system then open the housing.
11. Set JP3 to 1-2 to enable the password function.

The next time you want to enter the BIOS utility, you must key-in your Setup password.

---

### Changing or Removing the Setup Password

Should you want to change your Setup password, do the following:

1. Enter the BIOS utility and select System Security.
2. Highlight the Setup Password parameter.
3. Press  or  to display the password prompt and key-in a new password.
- or
- Press  or  and select None to remove the existing password.
4. Press  to exit the System Security screen and return to the main menu.
5. Press  to exit the BIOS utility. A dialog box appears asking if you want to save the CMOS data.
6. Select Yes to save the changes.

---

## Bypassing the Setup Password

If you forget your setup password, you can bypass the password security feature by hardware. Follow these steps to bypass the password:

1. Turn off and unplug the system.
2. Open the system housing and set JP3 to 2-3 to bypass the password function.
3. Turn on the system and enter the BIOS utility. This time, the system does not require you to type in a password.



*You can either change the existing Setup password or remove it by selecting None. Refer to the previous section for the procedure.*

### 3.8.3

---

## Power-on Password

The Power-on Password secures your system against unauthorized use. Once you set this password, you have to type it whenever you boot the system. To set this password, enter the BIOS utility, select System Security, then highlight the Power-on Password parameter. Follow the same procedure as in setting the Setup password.



*Make sure you set JP3 to pins 1-2 to enable the Power-on password.*

### Operation Mode

This function lets you enable or disable the password prompt display. When set to `Normal`, the password prompt appears before system boot. When set to `Network`, the password prompt does not appear; however, your system will not respond to any keyboard or mouse input until you enter the correct password.

## 3.9

---

## Date and Time

The real-time clock keeps the system date and time. After setting the date and time, you do not need to enter them every time you turn on the system. As long as the internal battery remains good (approximately seven years) and connected, the clock continues to keep the date and time accurately even when the power is off.

The following screen appears if you select Date and Time from the main menu.

Date and Time		Page 1/1
Date .....	[xxx xx xx, 199x]	
Time .....	[xx:xx:xx]	
↑↓ = Move Highlight Bar, → ← = Change Setting, F1 = Help		

### 3.9.1

---

## Date

Highlight the items on the Date parameter and press  or  to set the date following the weekday-month-day-year format.

Valid values for weekday, month, day, and year are:

- Weekday Sun, Mon, Tue, Wed, Thu, Fri, Sat
- Month 1 to 12
- Day 1 to 31
- Year 00 to 99

### 3.9.2 Time

Highlight the items on the Time parameter and press  or  to set the time following the hour-minute-second format.

Valid values for hour, minute, and second are:

- Hour 00 to 23
- Minute 00 to 59
- Second 00 to 59

## 3.10

---

## Remote Diagnostic Configuration

The Remote Diagnostic Configuration parameters allow you to configure your RDM settings. Refer to the RDM User's Guide for information on RDM.



*Most of the Remote Diagnostic Configuration parameters turn gray and non-configurable when there is no RDM module installed in the system.*

### 3.11

---

## Load Setup Default Settings

Use this option to load the default settings for the optimized system configuration. When you load the default settings, some of the parameters are grayed-out with their fixed settings. These grayed parameters are not user-configurable.

The following dialog box appears when you select Load Setup Default Settings from the main menu.

Do you want to load default settings?
[Yes]      [No]

Select **Yes** to load the default settings.

Select **No** to ignore the message and return to the BIOS utility.


### 3.12

---

## Abort Settings Change

Use this option to disregard your changes to the BIOS and reload your previous settings.

The following dialog box appears when you select Abort Settings Change from the main menu:

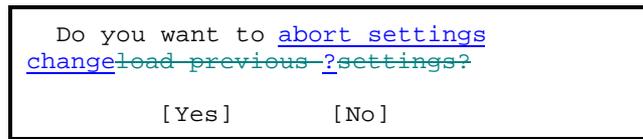

Select **Yes** to disregard your changes and reload your previous settings. After reload, the main menu appears on screen.

Select **No** to ignore the message and return to the BIOS utility.


### 3.13

---

## Leaving Setup

Examine the system configuration values. When you are satisfied that all the values are correct, write them down. Store the recorded values in a safe place. In the future, if the battery loses power or the CMOS chip is damaged, you will know what values to enter when you rerun Setup.

Press **[ESC]** to leave the system configuration setup. The following screen appears:

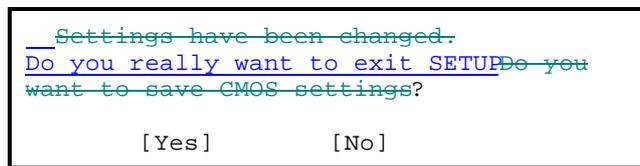


The screenshot shows a text-based interface with the following content:

```
Settings have been changed.  
Do you really want to exit SETUPDo you  
want to save CMOS settings?  
  
[Yes]           [No]
```

Use the arrow keys to select your response. Select **Yes** to store the new data in CMOS. Select **No** to retain the old configuration values. Press **[ENTER]**.

# H90 Housing

## User's Guide

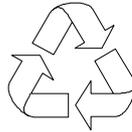

100% Recycled Paper

---

## **Copyright**

Copyright © 1998 by this company. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

## **Disclaimer**

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed “as is”. Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

---

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully. Save these instructions for future reference.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
7. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
8. This product is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
9. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.

- 
10. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed 15 amperes.
  11. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
  12. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
  13. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
    - a. When the power cord or plug is damaged or frayed
    - b. If liquid has been spilled into the product
    - c. If the product has been exposed to rain or water
    - d. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
    - e. If the product has been dropped or the cabinet has been damaged
    - f. If the product exhibits a distinct change in performance, indicating a need for service

- 
14. Replace battery with the same type as the product's battery we recommend. Use of another battery may present a risk of fire or explosion. Refer battery replacement to a qualified serviceman.
  15. **Warning!** Battery may explode if not handled properly. Do not recharge, disassemble or dispose of in fire. Keep away from children and dispose of used battery promptly.
  16. Use only the proper type of power supply cord set (provided in your keyboard/manual accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, type SVT/SJT, rated 6A 125V minimum, VDE approved or its equivalent. Maximum length is 15 feet (4.6 meters).

---

## **FCC Class B Radio Frequency Interference Statement**

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/television technician for help.

**Notice 1:**

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Notice 2:**

Shielded interface cables, if any, must be used in order to comply with the emission limits.

---

## Conventions

The following conventions are used in this manual:



### **NOTE**

Gives bits and pieces of additional information related to the current topic.



### **IMPORTANT**

Reminds you to do specific actions relevant to the accomplishment of procedures.



### **WARNING**

Alerts you to any damage that might result from doing or not doing specific actions.

---

## Table of Contents

<b>1 Introduction.....</b>	<b>1</b>
<b>2 Pre-installation Requirements .....</b>	<b>2</b>
2.1 Selecting a Site .....	2
2.2 Preparing the Housing Unit.....	3
<b>3 External and Internal Structure .....</b>	<b>4</b>
3.1 Front Panel .....	4
3.2 Rear Panel .....	6
3.3 LCD Display Screen .....	9
3.3.1 Replacing the LCD Display Screen .....	9
3.4 Internal Components.....	10
3.4.1 Left Panel .....	10
3.4.2 Right Panel .....	11
<b>4 Opening the Housing Panels.....</b>	<b>12</b>
4.1 Removing the Left and Right Panel.....	12
4.2 Opening the Front Panel Door .....	14
4.2.1 Removing the Front Panel Door .....	14
<b>5 Installing and Removing Storage Devices .....</b>	<b>16</b>
5.1 Installing and Removing a 3.5-inch Storage Device .....	16
5.1.1 To install a 3.5-inch storage device: .....	16
5.1.2 To remove a 3.5-inch storage device: .....	19


---

5.2 Installing and Removing a 5.25-inch Storage Device.....	19
5.2.1 To install a 5.25-inch storage device: .....	20
5.2.2 To remove a 5.25-inch storage device:.....	22
<b>6 Installing a Hot-swappable SCSI Drive.....</b>	<b>23</b>
<b>7 Installing and Removing a Hot-swappable Redundant Power Supply Module.....</b>	<b>25</b>
7.1 To Install a power supply module: .....	26
7.2 To remove a power supply module: .....	28
<b>8 Installing and Removing a Hot-swappable Redundant Housing Fan .....</b>	<b>29</b>
8.1 To change a rear hot-swap housing fan: .....	29
8.2 To change a front hot-swap housing fan: .....	31
<b>9 Installing an Expansion Board .....</b>	<b>32</b>

# 1 Introduction

The X90 storage housing series is designed to expand more disk capacity for PC servers and enhanced fault-tolerant RAID (Redundant Array of Inexpensive Disk) and ultra-2 SCSI (Small Computer System Interface) performance. This installation guide will show you how to install the basic system components such as disk drives and power supplies. Descriptive illustrations accompany the installation procedures.

The system housing is a heavy-duty steel chassis in a twin-tower design. The spacious housing boasts high expansion capability and flexible configuration.

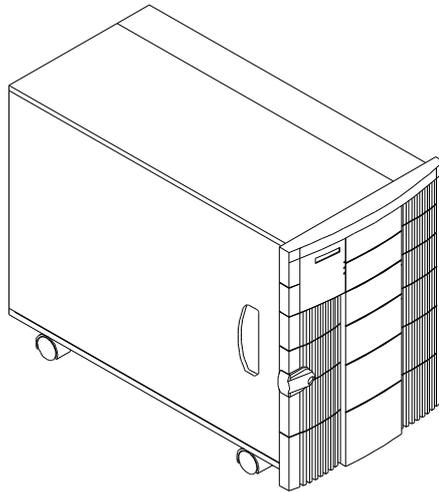

This chapter tells how to install and set up the system. It gives instructions on how to select a site for the system, prepare the system for use, connect basic peripherals, and start up the system.

---

## **2 Pre-installation Requirements**

### **2.1 Selecting a Site**

Before unpacking and installing the system, select a suitable site for the system for maximum efficiency. The system is suitable to set up in an office environment.

Consider the following factors when choosing a site for the system:

- Near a grounded power outlet
- Clean and dust-free
- Sturdy surface free from vibration
- Well-ventilated and away from sources of heat
- Secluded from electromagnetic fields produced by electrical devices such as air conditioners, radio and TV transmitters, etc.


---

## 2.2 Preparing the Housing Unit

Do the following to begin setting up the system:

1. Unlock the front wheels and move the system to your desired site.

The system housing design allows for easy transport in spite of its size. It comes with four wheels that facilitate short-distance transits. The two front wheels each include a lever to lock the wheels after you have positioned the system into place.

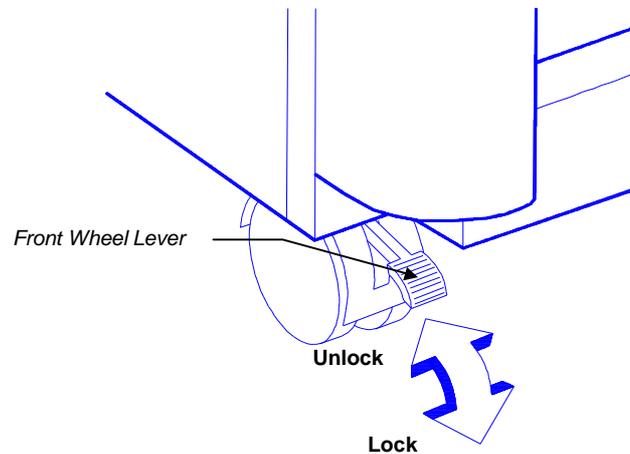

2. After moving, lock the wheels by pressing down the levers.



*Make sure to unlock the wheels when you want to move the system again.*

---

## 3 External and Internal Structure


### 3.1 Front Panel

The system front panel is divided into two sections. The left front panel consists of the diskette/CD-ROM/tape drive bays, power switch, LED indicators, LCD display screen, and an embedded reset switch.

The right part contains the hot-swappable SCSI hard disk drive bays with 8 drive trays for narrow or wide SCSI drives.




*One pair of system keys are hung inside the front panel door. Additional duplicate keys can be found at the back of the system.*

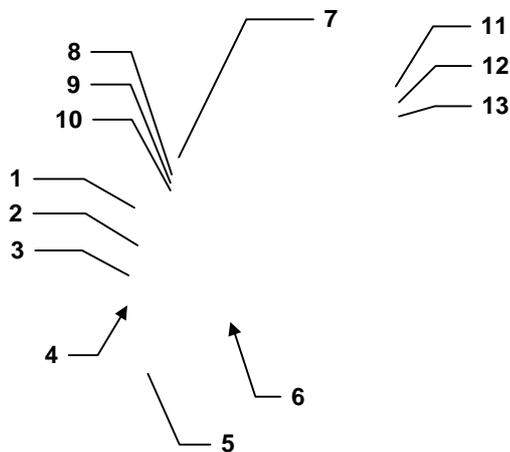

#	Item	Description
1	LCD Display Screen	Indicates boot status as well as any BIOS check point errors encountered upon system initialization. Refer to the section "LCD Display Screen" for more information.
2	3.5-inch Diskette Drive	A 3.5-inch diskette drive comes with the basic system
3	CD-ROM Drive	Also a SCSI CD-ROM drive comes with the basic system
4	5.25-inch Drive Bays	Two empty 5.25-inch drive bays allow installation of additional devices
5	Ventilation	Exhaust heat built up inside the housing
6	SCSI HDD Bays	Eight empty SCSI HDD bays allow installation of additional drives
7	Power Switch	The power switch allows you to turn the system power on and off
8	System Power LED	Lights up (green) when the power is on. This also denotes that the system is running on a good supply of AC power.
9	System HDD Access LED	Lights up (green) when at least one of the hard disks is currently accessing.
10	System Event LED	Lights up (yellow) when an error condition occurs in the system.
11	SCSI HDD Power Status	Lights up (green) when the HDD is connected and ready to go.
12	SCSI HDD Busy	Lights up when the HDD is currently accessing.
13	SCSI HDD Failure	Lights up (orange) when HDD installed on the backplane board is bad.

### 3.2 Rear Panel

The rear panel includes the system fan, the connectors for the keyboard, mouse, VGA monitor, printer, and serial devices, the slot openings for expansion boards, and the power supply.

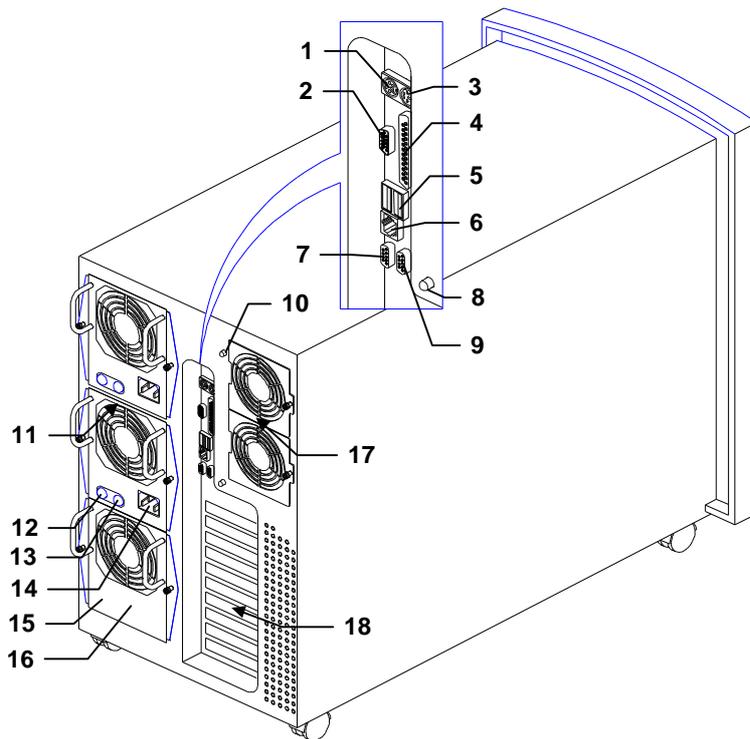

#	Item	Description
1	PS/2 keyboard port	Connects to PS/2 keyboards
2	Video port	Connects to CRT monitors
3	PS/2 mouse port	Connects to the PS/2 mouse

#	Item	Description
4	Parallel port	Connects to parallel devices (e.g., printer)
5	USB port	Connects to USB devices
6	LAN port	Connects to the network cable
7	COM 1 port	Connects to serial devices (e.g., serial mouse)
8	Hot-swap redundant fan fail LED 1	Lights up (green) when the hot-swap redundant fan is working properly
9	COM 2 port	Connects to serial devices (e.g., serial mouse)
10	Hot-swap redundant fan fail LED 2	Lights up (green) when the hot-swap redundant fan is working properly
11	Hot-swappable redundant Power Supply Modules	Removable and installable even when the system is operating.
12	Power supply power LED	Lights up (green) when the power supply is on.
13	Power supply fan fail LED	Lights up (Yellow) when one of the power supply fan is faulty* .
14	Power cable connector	Connects to the power cable
15	Fan module LED	Lights up (Yellow) when one or two fans are faulty
16	Fan module (includes two fans)	The fan module is use in place of the third power supply module if one is not available
17	Hot-swap redundant Fan cage	Allows the system fan to be removed and installed even when the system is

\* The power supply have two cooling fans. If both fans failed to operate, the power supply module will shutdown. The LED indicators of the power supply module will be turned off.  
If the fans are functioning properly and the power supply failed, the fans will keep operating.

---

#	Item	Description
		operating.
18	Expansion slots	Expansion cards installation. See section 2.7

---

### **3.3 LCD Display Screen**

The LCD display is a 8-line by 16 character screen that indicates the boot status as well as any BIOS check point errors encountered upon system initialization. Normally, the system BIOS and the micro-controller firmware send the LCD display messages that appear on the screen. However, if you hooked up a special purpose driver to control the LCD module, this driver define the messages. See the driver manual for more information.

#### **3.3.1 Replacing the LCD Display Screen**

The system housing can be configured as a stand-alone tower housing or a rack mount housing. With each configuration the LCD display screen is place differently. For more information about the rack mount installation and configuration, please refer to its user's guide.

To replace the LCD display screen:

1. Turn off the power to the system unit and unplug all cables.
2. Carefully pull out the LCD display screen. There is a connector at the back of the LCD display.
3. Disconnect the LCD connector.
4. Connect the LCD connector at the back of the new LCD display screen.
5. Attach the LCD display screen to the housing.

---

## 3.4 Internal Components


The housing is symmetrically divided into the left and right panel. The system's internal components are accessible through these panels.

### 3.4.1 Left Panel

The main part of the left panel houses the system board, memory board, and expansion boards. On the rear end of the left panel are the keyboard, mouse, video, parallel, and serial ports, and the slot openings for installation of ISA and PCI expansion boards.

The front panel display occupies the upper front section of the left panel. The section below the front panel display accommodates one 3.5-inch and three 5.25-inch drive. These devices on the front section are externally accessible.

Here is a diagram of the system components on the left panel of the system housing.

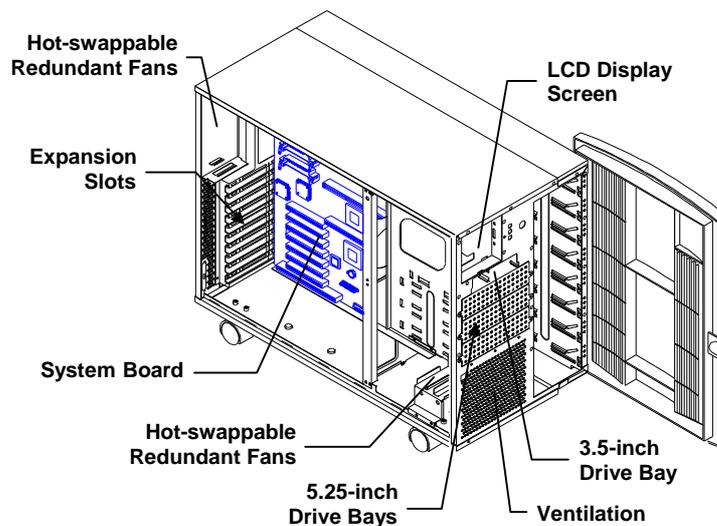


---

### 3.4.2 Right Panel

The power subsystem fills up most part of the rear right panel. It consists of a power backplane board and a metal rack that holds up to three 430-watt redundant power supply modules. A fan module should be installed whenever a power supply is removed to provide the system with regular cooling.

The lower section allows installation of a SCSI backplane board and a set of eight hot-swappable SCSI drive trays.

Here is a diagram of the components that reside on the right panel.

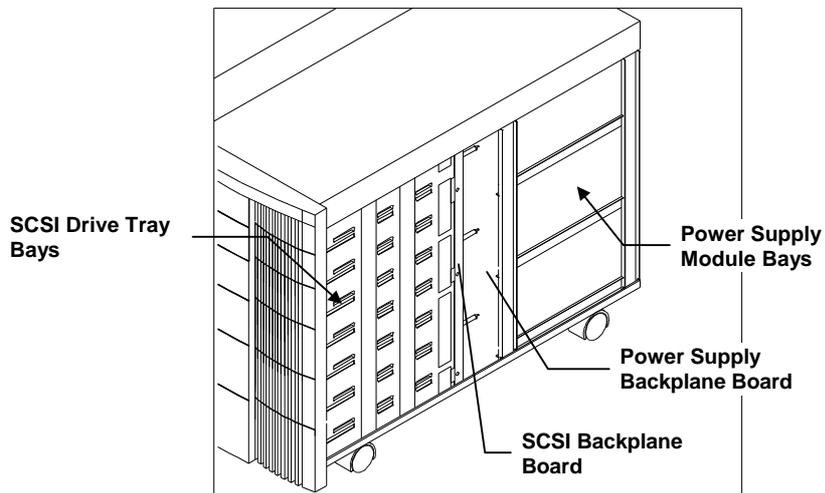

---

## 4 Opening the Housing Panels

The system housing has one front door and two side panels. Always observe the following ESD (electrostatic discharge) precautions before installing any system component:

1. Do not remove any system component from its packaging unless you are ready to install it.
2. Wear a wrist grounding strap before handling electronic components. Wrist grounding straps are available at most electronic component stores.




*DO NOT attempt the procedures in the following sections unless you are confident of your capability to perform them. Otherwise, ask a service technician for assistance.*

### 4.1 Removing the Left and Right Panel


Microswitches are allocated on both side of the housing panel. They help indicate whether the panel is removed or intact.

To remove the left or right panel:

1. Turn off the power to the system unit and unplug all cables.
2. Place the system unit on a flat, steady surface and lock the wheels by pressing down the levers.
3. Remove the screws of the left or right panel. Set the screws aside. You will need them when replacing the panels.
4. Pull out the panel and detach.

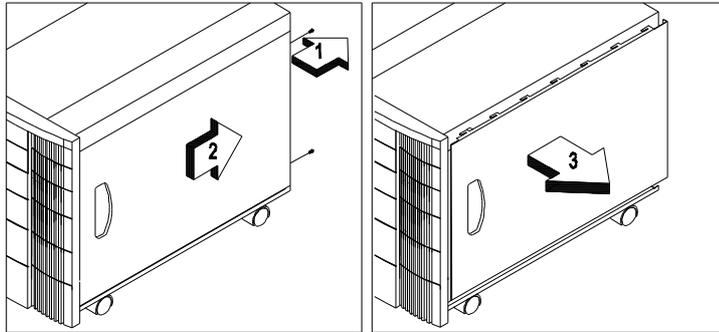

**Right Panel**

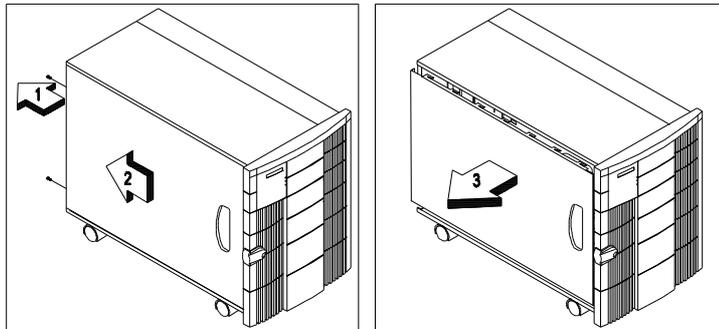

**Left Panel**


---

## 4.2 Opening the Front Panel Door

A security lock secures the front door to protect against unauthorized access.

**To open the front door:**

1. Insert the key to the lock and turn it clockwise until it points to the unlocked icon.
2. Pull open the front door.

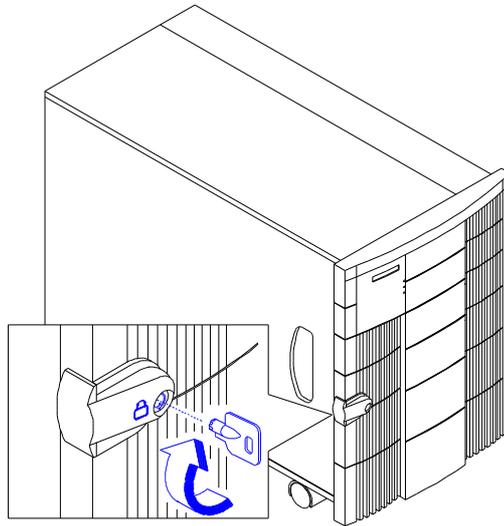

### 4.2.1 Removing the Front Panel Door

The doors are attached to the main housing by screwless hinges. Follow these steps to remove the door:

- 
1. Unlock the door with the key (when necessary).
  2. Open it to more than 45° angle.
  3. Lift it up for about an inch, then move it away from the housing.

---

## 5 Installing and Removing Storage Devices

The housing supports one 3.5-inch and four 5.25-inch internal storage devices. The empty drive bays on the upper front panel allows you to install additional drives such as a CD-ROM drive, digital audio tape (DAT) drive or another hard disk drive.




*Your basic system comes with a CD-ROM drive and a 3.5-inch diskette drive already installed.*

### 5.1 Installing and Removing a 3.5-inch Storage Device


The housing comes with a drive guide for installing 3.5-inch storage devices.

#### 5.1.1 To install a 3.5-inch storage device:


1. Open the front panel door and remove the left panel. See section 4 for more information on opening the housing panels.
2. Attach the drive guide to the external device as shown below.

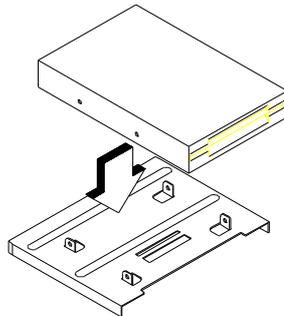


- 
3. Secure the drive with four screws.

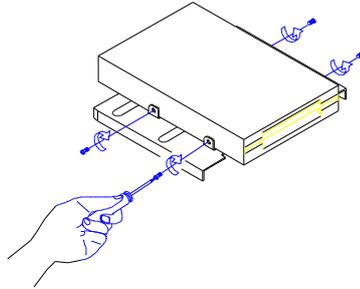

4. Insert the drive into the bay.

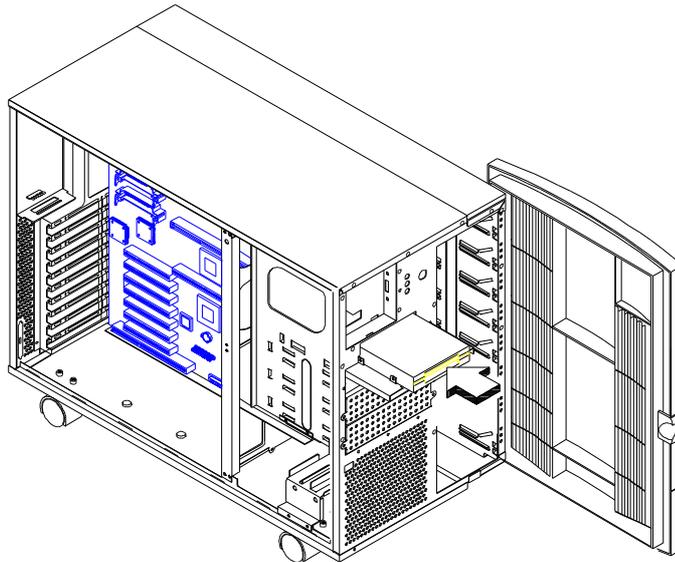

- 
- Secure the drive with a screw. The screw hole is located on the side of the housing.

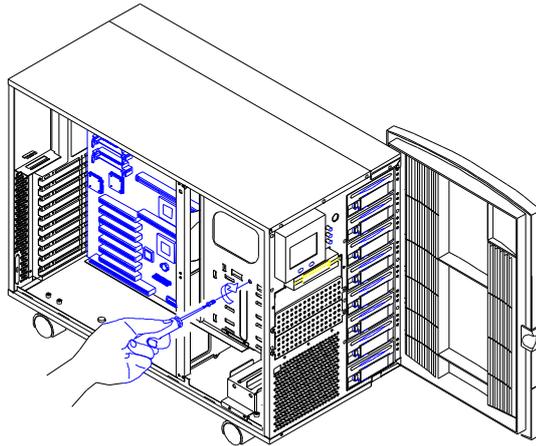

- Connect the power cable and signal cables to the external device.

#### **5.1.2 To remove a 3.5-inch storage device:**

- Open the front panel door and remove the left panel. See section 4 for more information on opening the housing panels.
- Disconnect the power and signal cable.
- Detach the external device by removing the screw located on the side and then gently pull out the device.
- Remove the four screws and detach the 3.5-inch from the drive guide.


---

## 5.2 Installing and Removing a 5.25-inch Storage Device


The housing comes with a drive guide for installing 5.25-inch internal storage devices.

### 5.2.1 To install a 5.25-inch storage device:


1. Open the front panel door and remove the left panel. See section 4 for more information on opening the housing panels.
2. Remove two screws to detach the metal cover.

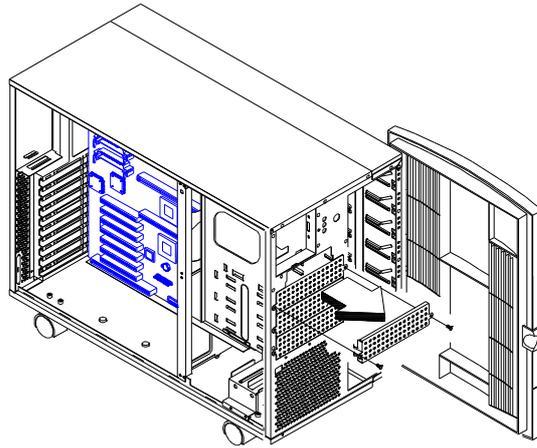


- 
3. Attach the drive guides on the sides of the external device as shown below.

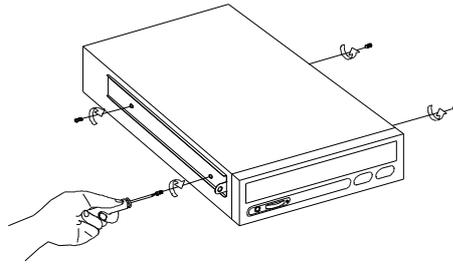

4. Insert the drive into the bay.

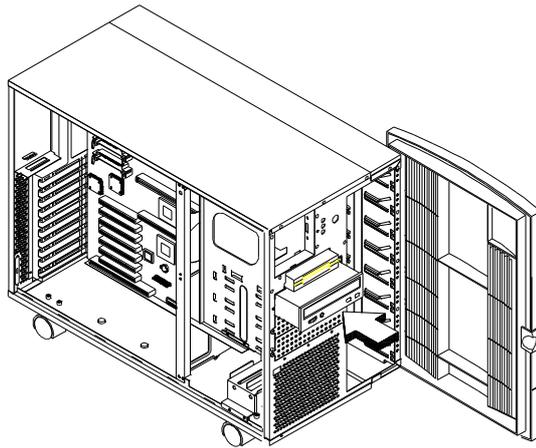

- 
5. Secure the drive with two screw as shown below.

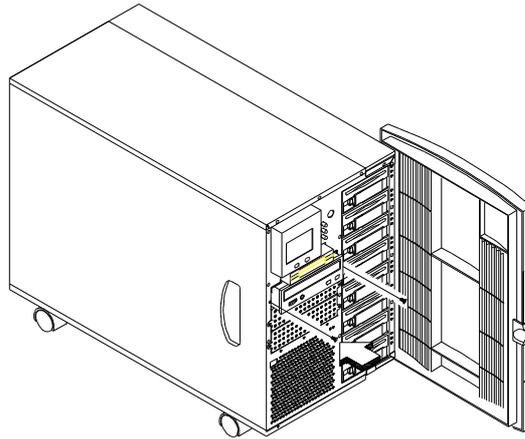

6. Connect the power cable and signal cables to the external device.

#### **5.2.2 To remove a 5.25-inch storage device:**


1. Open the front panel door and remove the left panel. See section 4 for more information on opening the housing panels.
2. Disconnect the power and signal cable.
3. Detached the external device by removing the screws and gently pull out the device.
4. Remove four screws to detach the drive from the drive guide.

---


## 6 Installing a Hot-swappable SCSI Drive

The system supports up to eight hot-swappable drive trays. Follow these steps to install a hot-swap SCSI drive:


1. Open the front panel door.
2. Use your finger to release the drive tray as shown below and then pull it out.

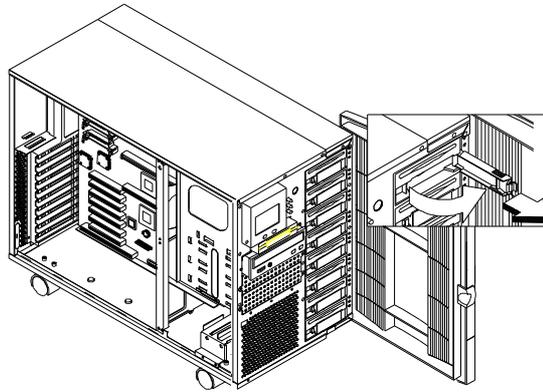

3. Secure the hard disk drive with four screws.

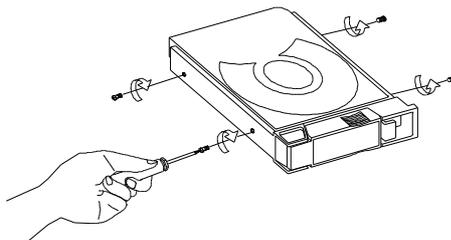

- 
4. Install the tray into the drive bay, pushing it gently until it reaches the connector on the backplane board.
  5. Push the lever back until it clicks into place.

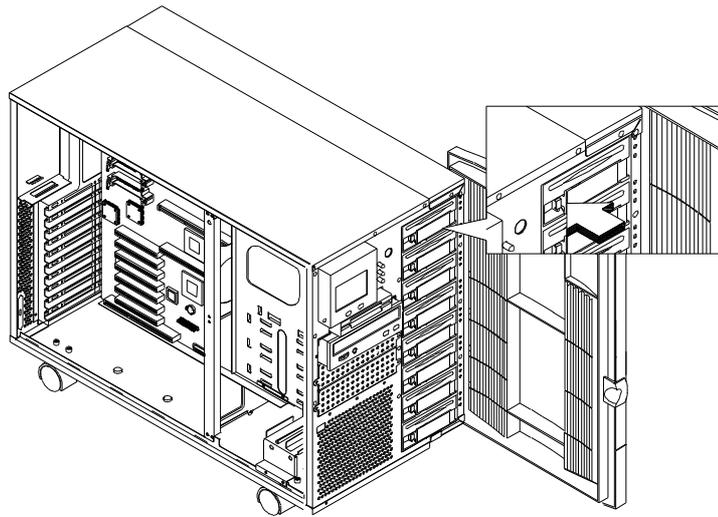

---

## 7 Installing and Removing a Hot-swappable Redundant Power Supply Module

The power subsystem consists of a power backplane and hot-swappable power supply modules. These components are held in place by a metal rack enclosure.

The backplane and the rack allow installation of up to three 430-watt power supply modules in a hot-swappable redundant configuration. A redundant power configuration enables a fully-configured system to continue running even if one power supply fails. The remaining two power supply modules still satisfy the 860-watt system power requirement.



*If both fans failed to operate, the power supply module will shutdown. The LED indicators of the power supply module will be turned off.*


*If the fans are functioning properly and the power supply failed, the fans will keep operating.*

The power subsystem provide a standby current and a remote on/off feature to support cold reboot from a remote site.

The power supply subsystem should supply a minimum 860W (2 power supply modules) DC power to the whole system. An additional power supply module can also be added for fail-safe redundancy.


### 7.1 To Install a power supply module:

1. Insert the power supply into the housing.

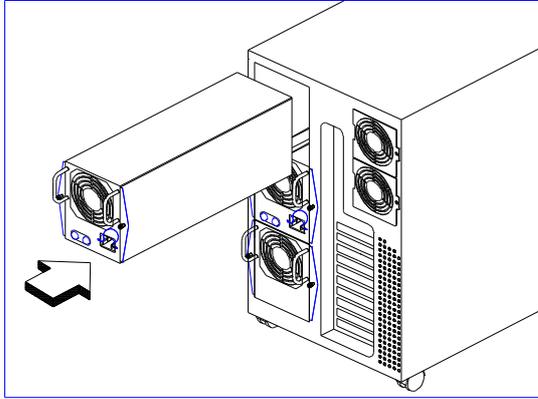


*Make sure that the power supply is properly inserted.*

2. Secure the power supply with the screw knobs on both sides.

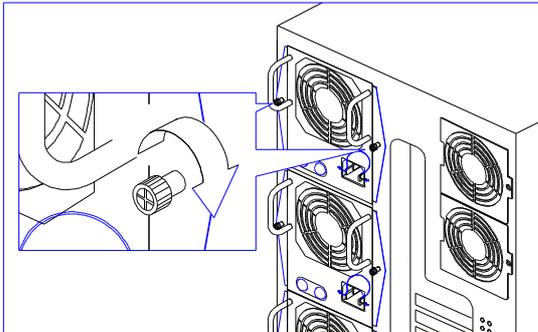

- 
3. Connect a power cable to the power supply and secure the power cable by flipping down the wire clip. Plug it into an electrical socket. You will see a green light when the power supply is functioning properly.

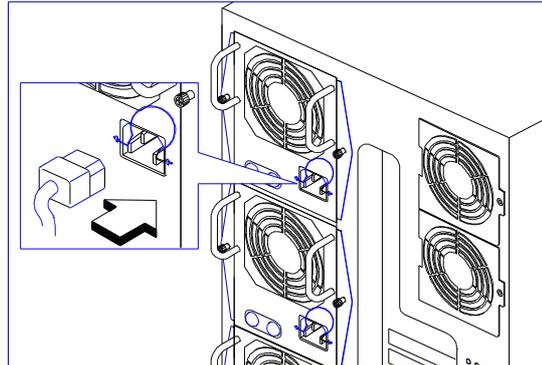

*The power supply supplied with the system accepts input voltage of 100V~240V, 50~60Hz.*

## **7.2 To remove a power supply module:**

1. Detach the power cable from the electrical outlet and also from the power supply. The power indicator light turns off.
2. Unscrew the screw knobs and carefully pull out the power supply until it detaches from the housing.



---

*Make sure the power supply subsystem is supplying a minimum of 860W (2 power supply module) to the system.*


---

## 8 Installing and Removing a Hot-swappable Redundant Housing Fan


Four housing fan is distributed inside the housing to cool down the system. They are hot-swappable and redundant. You can simple take one out and put a new one in if a fan failed to operate. You don't even have to shutdown the system.

### 8.1 To change a rear hot-swap housing fan:


1. Turn the screw knob clockwise to open the housing fan cage.

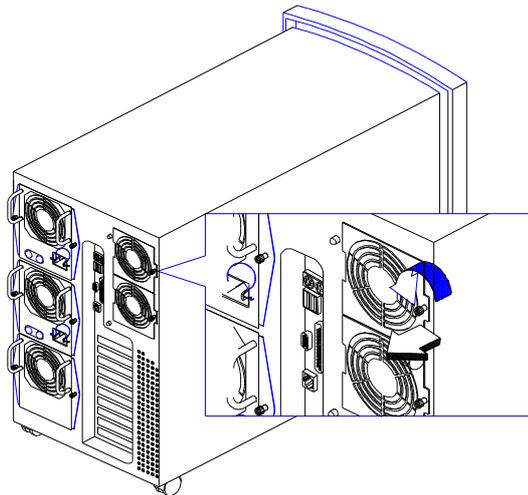

- 
- Carefully pull out the housing fan.

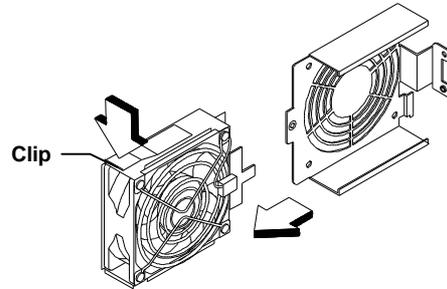

- Slide in a new housing fan. The power indicator lights up.

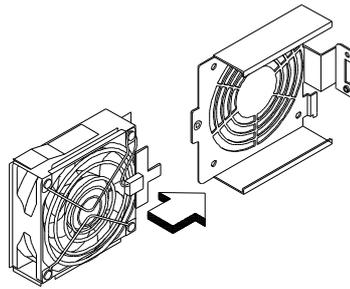


- Close the housing fan cage and turn the screw knob counter clockwise to lock it.


---

## 8.2 To change a front hot-swap housing fan:

1. Remove the left panel. See section 4 for more information on opening the housing panels.
2. Carefully pull out the housing fan.

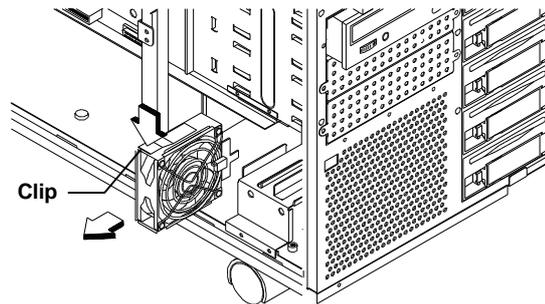

3. Insert a new one.

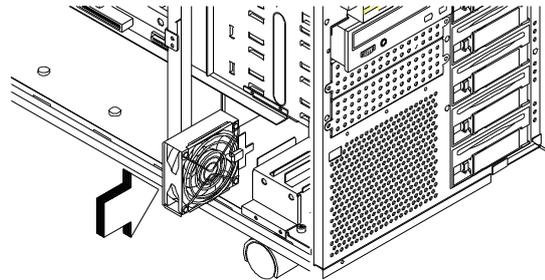


4. Close the left panel.

---


## 9 Installing an Expansion Board

Follow these steps to install a PCI expansion board:

1. Remove the left panel of the housing. See section 4 for more information on opening the housing panels.
2. Remove the bracket cover opposite an empty PCI slot. Save the screw for later use.

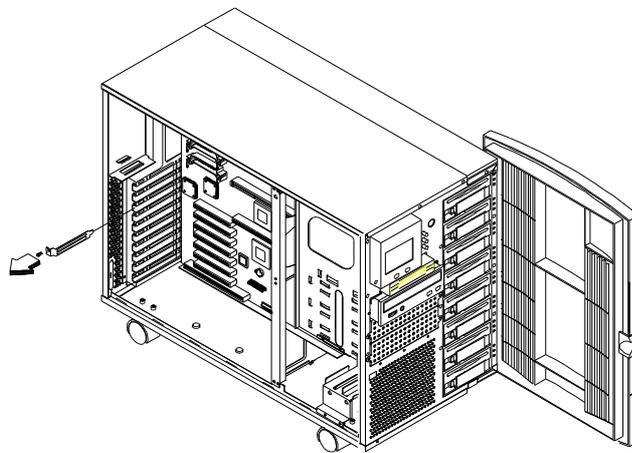

2. Align the board with the slot.
3. Insert the board into the slot until it completely fit in.
4. Secure the board with a screw.

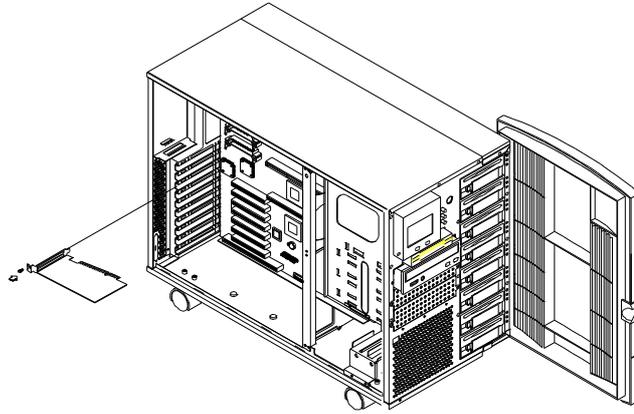

5. Follow the same steps when installing an ISA board. Just make sure that you remove the bracket cover opposite an ISA slot.