

TABLE OF CONTENTS

| FOR YOUR SAFETY 1 SAFETY PRECAUTIONS 2 SPECIAL NOTES ON LCD MONITORS 3 |
|--|
| BEFORE YOU OPERATE THE MONITOR 3 FEATURES 3 PACKING LIST 3 CONTROLS AND CONNECTORS 5 ADJUSTING THE VIEWING ANGLE 6 |
| OPERATING INSTRUCTIONS 7 GENERAL INSTRUCTIONS 7 HOW TO ADJUST A SETTING 9 ADJUSTING THE PICTURE 10-11 PLUG AND PLAY 1: |
| TECHNICAL SUPPORT(FAQ) 13-1-ERROR MESSAGE & POSSIBLE SOLUTION 1 |
| APPENDIX 19 SPECIFICATIONS 16-1 FACTORY PRESET TIMING TABLE 18 CONNECTOR PIN ASSIGNMENT 19 |

For more information and help in recycling, please visit the following websites:

 $Worldwide: \underline{http://global.acer.com/about/sustainability.htm}$



Before operating the monitor, please read this manual thoroughly. This manual should be retained for future reference.

FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio/TV technician for help.

NOTICE:

- The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
- 3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

As an ENERGY STAR® Partner our company International has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

WARNING:

To prevent fire or shock hazard, do not expose the monitor to rain or moisture. Dangerously high voltages are present inside the monitor. Do not open the cabinet. Refer servicing to qualified personnel only.

Lamp Disposal



LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS. FOR MORE INFORMATION, CONTACT THE ELECTRONIC INDUSTRIES ALLIANCE AT <u>WWW.Eiae.org</u>. FOR LAMP SPECIFIC DISPOSAL INFORMATION CHECK <u>WWW.Lamprecycle.org</u>.



PRECAUTIONS

- Do not use the monitor near water, e.g. near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Do not place the monitor on an unstable cart, stand, or table. If the monitor falls, it can injure a person and cause serious damage to the appliance.
 Use only a cart or stand recommended by the manufacturer or sold with the monitor. If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of the monitor and to protect it from overheating, be sure these openings are not blocked or covered. Do not place the monitor on a bed, sofa, rug, or similar surface. Do not place the monitor near or over a radiator or heat register. Do not place the monitor in a bookcase or cabinet unless proper ventilation is provided.
- The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or ground the appliance safely.
 Do not defeat the safety purpose of the grounded plug.
- Unplug the unit during a lightening storm or when it will not be used for long period of time. This will protect the monitor from damage due to power surges.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- Never push any object into the slot on the monitor cabinet. It could short circuit parts causing a fire or electric shock. Never spill liquids on the monitor.
- Do not attempt to service the monitor by yourself; opening or removing covers can expose you to dangerous voltages and other hazards. Please refer all servicing to qualified service personnel.
- To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V AC, Min. 5A.
- The wall socket shall be installed near the equipment and shall be easily accessible.



SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitor and do not indicate a problem.

NOTES

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the Power Switch and then turn it on again to make sure the flicker disappears.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has effective pixels of 99.99% or more. It may include blemishes of 0.01% or less such as a missing pixel or a pixel lit all of the time
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- 64.87cm(26") TFT Color LCD Monitor
- Crisp, Clear Display for Windows
- Recommended Resolutions: 1920 X 1200 @60Hz
- EPA ENERGY STAR[®]
- Ergonomic Design
- Space Saving, Compact Case Design

CHECKING THE CONTENTS OF THE PACKAGE

The product package should include the following items:

- 1. LCD Monitor
- 2. Owner's Manual
- Power Cord
- 4. 15-pin D-Sub Cable
- 5. DVi Cable (Only dual-input model)
- 6. Quick Start Guide



POWERCORD

Power Source:

- 1. Make sure that the power cord is the correct type required in your area.
- 2. This LCD monitor has an External universal power supply that allows operation in either 100/120V AC or 220/240V AC voltage area (No user adjustment is required.)
- Connect the AC-power cord into your LCD monitor's AC-power-input. The AC-power cord may be connected to either a wall power outlet or the power outlet socket on your PC, depending on the type of power cord supplied with your LCD monitor.

NOTES

A certified power supply cord has to be used with this equipment. The relevant national installation and/or equipment regulations shall be considered. A certified power supply cord not lighter than ordinary polyvinyl chloride flexible cord according to IEC 60227 (designation H05VV-F 3G 0.75mm² or H05VVH2-F2 3G 0.75mm²) shall be used. Alternative a flexible cord be of synthetic rubber according to IEC 60245 (designation H05RR-F 3G 0.75mm²) shall be used.



CONTROLS AND CONNECTORS

CABLE CONNECTIONS

Turn off your computer before performing the procedure below.

- 1 Plug the power cable of your monitor into a nearby outlet. Plug the other end of the power cord into the PC port.
- 2. Connect one end of the 15-pin VGA cable to the back of the monitor and connect the other end to the computer's D-Sub port.
- (Only dual-input model)Connect one end of the 24-pin DVI cable to the back of the monitor and connect the other end to the computer's DVI port.
- 4. Turn on your monitor and computer.

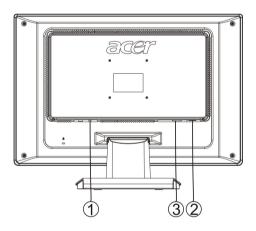


Figure 1 Connecting Cables

| 1. | Power Cable |
|----|----------------------------------|
| 2. | Signal Cable |
| 3. | DVI Cable(Only dual-input model) |



ADJUSTING THE VIEWING ANGLE

- For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.
- Hold the stand so you do not topple the monitor when you change the monitor's angle.
- You are able to adjust the monitor's angle from -5° to 15°.

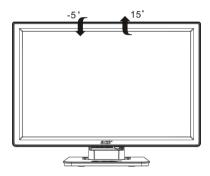


Figure 2

NOTES

- Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
- Careful attention is required not to catch your fingers or hands when you change the angle.



OPERATING INSTRUCTIONS

GENERAL INSTRUCTIONS

Press the power button to turn the monitor on or off. The other control buttons are located at front panel of the monitor (See Figure 3). By changing these settings, the picture can be adjusted to your personal preferences.

- The power cord should be connected.
- Connect the video cable from the monitor to the video card.
- Press the power button to turn on the monitor position. The power indicator will light up.

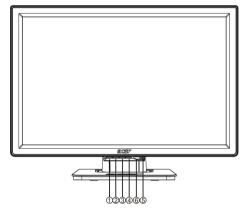


Figure 3 External Control Button

EXTERNAL CONTROLS

| 1. | Auto Config / Exit |
|----|--------------------|
| 2. | < |
| 3. | > |
| 4. | MENU / ENTER |
| 5. | Power Indicator |
| 6. | Power Button |



FRONT PANEL CONTROL

• [⊕]/Power Button:

Press this button to turn the monitor ON or OFF, And display the monitor's state.

Power Indicator:

Green — Power On mode.

Orange — Off mode.

• MENU / ENTER:

Activate OSD menu when OSD is OFF or activate/de-activate adjustment function when OSD is ON.

• <:

navigate through adjustment icons when OSD is ON or adjust a function when function is activated.

>:

navigate through adjustment icons when OSD is ON or adjust a function when function is activated.

Auto Adjust button / Exit:

- When OSD menu is in active status, this button will act as EXIT-KEY (EXIT OSD menu).
- 2. When OSD menu is in off status, press this button for 2 seconds to activate the Auto Adjustment function.

 The Auto Adjustment function is used to set the URBS VRBS Clock.

The Auto Adjustment function is used to set the HPos, VPos, Clock and Focus.


NOTES

- Do not install the monitor in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, or excessive dust or mechanical vibration or shock.
- Save the original shipping carton and packing materials, as they will come in handy if you ever have to ship your monitor.
- For maximum protection, repackage your monitor as it was originally packed at the factory.
- To keep the monitor looking new, periodically clean it with a soft cloth. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solution. Never use strong solvents such as thinner, benzene, or abrasive cleaners, since these will damage the cabinet. As a safety precaution, always unplug the monitor before cleaning it.



HOW TO ADJUST A SETTING

- 1. Press the MENU-button to activate the OSD window.
- 2. Press < or > to select the desired function.
- 3. Press the MENU-button to select the function that you want to adjust.
- 4. Press < or > to change the settings of the current function.
- 5. To exit and save, select the exit function. If you want to adjust any other function, repeat steps 2-4.

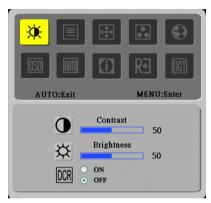


I. Analog-Only Model



II. Dual-Input Model, Analog Signal Input



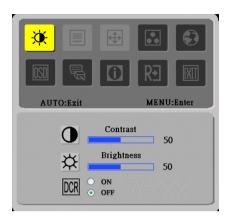

III. Dual-Input Model, Digital Signal Input

ADJUSTING THE PICTURE

The descriptions for function control LEDS

| Main Menu Icon | Sub Menu Icon | Sub Menu Item | Description | |
|-------------------|---------------------|------------------|---|--|
| | 0 | Contrast | Adjusts the contrast between the foreground and background of the screen image. | |
| | ☆ | Brightness | Adjusts the background brightness of the screen image. | |
| | DCR | DCR | Select turn on or turn off DCR fuction. | |
| | | Focus | Adjusts picture Focus. | |
| | | Clock | Adjusts picture Clock. | |
| 4 | | H. Position | Adjust picture Focus. | |
| <u>+1</u> | | V. Position | Adjust picture Clock. | |
| | N/A | Warm | Set the color temperature to warm white | |
| | N/A | Cool | Set the color temperature to cool white. | |
| •• | R | User /Red | | |
| | G | User/Green | Adjusts Red/Green/Blue intensity. | |
| | B | User/Blue | | |



| | N/A | Language | Multi-language selection. |
|-------------------------------|------------|----------------|---|
| OSD OSD | ↓ □ | H. Position | Adjust the horizontal position of the OSD. |
| | +□+ | V. Position | Adjust the vertical position of the OSD. |
| | <u>(0)</u> | OSD Timeout | Adjust the OSD timeout. |
| (Only Analog- input Model) | N/A | Auto Config | Auto Adjust the H/V Position, Focus and Clock of picture. |
| | N/A | Analog | Select input signal from analog (D-Sub). |
| (Only dual- input model) | N/A | Digital | Select input signal from digital (DVI). |
| | N/A | Information | Show the resolution, H/V frequency and input port of current iput timing. |
| RĐ | N/A | Reset | Clear each old status of Auto-configuration. |
| EXIT | N/A | Exit | Save user adjustment and OSD disappear. |



PLUG AND PLAY

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bidirectional data channel based on the I²C protocol. The host can request EDID information over the DDC2B channel.

THIS MONITOR WILL APPEAR TO BE NON-FUNCTIONAL IF THERE IS NO VIDEO INPUT SIGNAL. IN ORDER FOR THIS MONITOR TO OPERATE PROPERLY, THERE MUST BE A VIDEO INPUT SIGNAL.

This monitor meets the Green monitor standards as set by the Video Electronics Standards Association (VESA) and/or the United States Environmental Protection Agency (EPA) and The Swedish Confederation Employees (NUTEK). This feature is designed to conserve electrical energy by reducing power consumption when there is no video-input signal present. When there is no video input signal this monitor, following a time-out period, will automatically switch to an OFF mode. This reduces the monitor's internal power supply consumption. After the video input signal is restored, full power is restored and the display is automatically redrawn. The appearance is similar to a "Screen Saver" feature except the display is completely off. The display is restored by pressing a key on the keyboard, or clicking the mouse.

USING THE RIGHT POWER CORD:

The accessory power cord for the Northern American region is the wallet plug with NEMA 5-15 style and is UL listed and CSA labeled. The voltage rating for the power cord shall be 125 volts AC.

Supplied with units intended for connection to power outlet of personal computer: Please use a cord set consisting of a minimum No. 18 AWG, type SJT or SVT three conductors flexible cord. One end terminates with a grounding type attachment plug, rated 10A, 250V, CEE-22 male configuration. The other end terminates with a molded-on type connector body, rated 10A, 250V, having standard CEE-22 female configuration.

Please note that power supply cord needs to use VDE 0602, 0625, 0821 approval power cord in European counties.



TECHNICAL SUPPORT (FAQ)

| | T = |
|-----------------------------------|---|
| Problem & Question | Possible Solution |
| Power LED is not on | *Check if the Power Switch is in the ON |
| | position |
| | *Power Cord should be connected |
| No Plug & Play | *Check if the PC system is Plug & Play |
| | compatible |
| | *Check if the Video Card is Plug & Play |
| | compatible |
| | *Check if the D-15 plug pin of Video |
| | Cable is bent |
| Picture is fuzzy | *Adjust the Contrast and Brightness |
| , | Controls. |
| Picture bounces or a wave | *Move electrical devices that may cause |
| pattern is present in the picture | |
| The power LED is ON (orange) | *Computer Power Switch should be in |
| but there's no video or no | |
| picture. | *Computer Video Card should be snugly |
| ' | seated in its slot |
| | *Make sure monitor's video cable is |
| | properly connected to the computer. |
| | *Inspect monitor's video cable and make |
| | sure none of the pins are bent. |
| | *Make sure computer is operational by |
| | hitting the CAPS LOCK key on the |
| | keyboard while observing the CAPS |
| | LOCK LED. The LED should either |
| | turn ON or OFF after hitting the CAPS |
| | LOCK key. |
| Missing one of the primary | *Inspect the monitor's video cable and |
| colors (RED, GREEN, or | make sure that none of the pins are |
| BLUE) | bent. |
| , | l . |



| Screen image is not centered or sized | *Adjust pixel frequency (CLOCK) and | | |
|--|-------------------------------------|--|--|
| properly. | FOCUS or press hot-key (AUTO) | | |
| Picture has color defects | *Adjust RGB color or select color | | |
| (white does not look white) | temperature | | |
| Horizontal or vertical disturbances on | *Use win 95/98 shut-down mode | | |
| the screen | Adjust CLOCK and FOCUS or | | |
| | perform hot- key (AUTO-key). | | |

CLOCK (pixel frequency) controls the number of pixels scanned by one horizontal sweep. If the frequency is not correct, the screen shows vertical stripes and the picture has not correct width.

FOCUS adjusts the phase of the pixel clock signal. With a wrong phase adjustment the picture has horizontal disturbances in light picture.

For FOCUS and CLOCK adjustment use "dot-pattern" or win 95/98 shut-down mode pattern.



ERROR MESSAGE & POSSIBLE SOLUTION

CABLE NOT CONNECTED:

- 1. Check that the signal-cable is properly connected, If the connector is loose, tighten the connector's screws.
- 2. Check the signal -cable connection pins for damage.

INPUT NOT SUPPORT:

Your computer has been set to unsuitable display mode, set the computer to display mode given in the following table (See page 18).



APPENDIX

SPECIFICATIONS

| | Driving system | | |
|---------------------|-----------------------------|---|--|
| LCD Panel | Size | 64.87cm(26") | |
| | Pixel pitch | 0.286mm(H) × 0.286mm(V) | |
| | Brightness | 500cd/m ² (Typical) | |
| | Contrast Ratio (Typical) | 800:1 (DCR 1600:1) | |
| | Viewable angle | 178° (H) 178° (V) | |
| | Response time | 5 ms (Gray to Gray) | |
| Input | Video | R,G,B Analog Interface | |
| | | Digital (Dual-Input Model) | |
| | H-Frequency | 30kHz – 80kHz | |
| | V-Frequency | 55-75Hz | |
| Display Colors | | 16.7M Colors | |
| Dot Clock | | 135MHz | |
| Max. Resolution | | 1920 × 1200 @60Hz | |
| Plug & Play | | VESA DDC2B [™] | |
| EPA ENERGY STAR® | ON Mode | ≤ 65W | |
| | OFF Mode | ≤ 1W | |
| | | D-Sub 15pin | |
| | | DVI-D 24pin (DVI w/HDCP, Dual-Input Model) | |
| | | • | |
| Input Video Signal | | Analog:0.7Vp-p(standard), 75 OHM, Positive | |
| | | Digital signal (Dual-Input Model) | |
| Maximum Screen Size | | Horizontal : 582mm | |
| | | Vertical : 376mm | |
| Power Source | | 100~264VAC,47~63Hz | |
| Environmental | | Operating Temp: 5° to 50°C | |
| Considerations | | Storage Temp.: -20° to 65°C | |
| | | Operating Humidity: 10% to 85% | |
| Dimensions | | 618(W)×472(H)×219(D)mm | |
| Weight (N. W.) | | 9.3kg | |



| External Controls: | Functions | Auto Adjust Key Power Button MENU Contrast Brightness DCR Focus Clock H.Position V.Position Language Input signal Selection (Dual model only) Auto configuration (Analog model only) (Warm) Color (Cool) Color | |
|-----------------------|-------------|--|--|
| | | (Varin) Color (Cool) Color RGB Color temperature Reset OSD position . timeout Display information Exit | |
| Power Consumption | (Maximum) | 125 Watts | |
| Regulatory Compliance | | CUL, FCC, VCCI, CCC, MPR II, CE, TÜV/GS, TCO'99(Option), TCO'03(Option), ISO13406-2 | |




Preset Display Modes

| STANDARD | | RESOLUTION | HORIZONTAL | VERTICAL |
|----------|---------|-------------|----------------|---------------|
| | | | FREQUENCY(kHz) | FREQUENCY(Hz) |
| | | 640 × 480 | 31.469 | 59.940 |
| | VGA | 640 × 480 | 37.861 | 72.809 |
| | | 640 × 480 | 37.500 | 75.000 |
| | | 800 × 600 | 35.156 | 56.250 |
| | SVGA | 800 × 600 | 37.879 | 60.317 |
| | 3,44, | 800 × 600 | 48.077 | 72.188 |
| | | 800 × 600 | 46.875 | 75.000 |
| | | 1024 × 768 | 48.363 | 60.004 |
| VESA | XGA | 1024 × 768 | 56.476 | 70.069 |
| | | 1024 × 768 | 60.023 | 75.029 |
| | SXGA | 1280 × 1024 | 64.000 | 60.000 |
| | 3/(d/ (| 1280 × 1024 | 80.000 | 75.000 |
| | | 1152 × 864 | 67.5 | 75.000 |
| | WXGA | 1440 × 900 | 55.93 | 60.000 |
| | WSXGA | 1680 × 1050 | 65.29 | 59.95 |
| | UXGA | 1600 × 1200 | 75.00 | 60.00 |
| | WUXGA | 1920 × 1200 | 74.038 | 59.95 |
| | DOS | 640 × 350 | 31.469 | 70.087 |
| IBM | DOS | 720 × 400 | 31.469 | 70.087 |
| | XGA | 1024 × 768 | 57.515 | 72.1 |
| | VGA | 640 × 480 | 35.000 | 66.667 |
| | SVGA | 832 × 624 | 49.725 | 74.551 |
| MAC | | 1024 × 768 | 48.780 | 60.001 |
| | XGA | 1024 × 768 | 60.241 | 74.927 |
| | | 1152 × 870 | 68.68 | 75.032 |



CONNECTOR PIN ASSIGNMENT

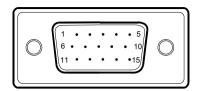

15 - Pin Color Display Signal Cable

| PIN NO. | DESCRIPTION | PIN NO. | DESCRIPTION |
|---------|----------------|---------|------------------|
| 1. | Red | 9. | +5V |
| 2. | Green | 10. | Logic Ground |
| 3. | Blue | 11. | Monitor Ground |
| 4. | Monitor Ground | 12. | DDC-Serial Data |
| 5. | DDC-return | 13. | H-Sync |
| 6. | R-Ground | 14. | V-Sync |
| 7. | G-Ground | 15. | DDC-Serial Clock |
| 8. | B-Ground | | |

(Dual-Input Model)



24 - Pin Color Display Signal Cable

| Pin | Meaning | Pin | Meaning |
|-----|------------------------|-----|------------------------------------|
| 1. | TMDS Data2- | 13. | TMDS Data3+ |
| 2. | TMDS Data2+ | 14. | +5V Power |
| 3. | TMDS Data 2/4 Shield | 15. | GND(return for +5V hsync.vsync) |
| 4. | TMDS Data4- | 16. | Hot Plug Detect |
| 5. | TMDS Data4+ | 17. | TMDS Data0- |
| 6. | DDC Clock | 18. | TMDS Data0+ |
| 7. | DDC Data | 19. | TMDS Data 0/5 Shield |
| 8. | Analogue Vertical Sync | 20. | TMDS Data5- |
| 9. | TMDS Data1- | 21. | TMDS Data5+ |
| 10. | TMDS Data1+ | 22. | TMDS Clock Shield |
| 11. | TMDS Data 1/3 Shield | 23. | TMDS Clock+ |
| 12. | TMDS Data3- | 24. | DDC TMDS Clock- |