

CONTENTS

2 INTRODUCTION

- 2 Package Contents

3 GETTING TO KNOW THE CAMERA

- 3 Front View
- 4 Rear View
- 6 Mode Dial
- 7 LCD Monitor Icons

10 GETTING STARTED

- 10 Inserting and Removing the Battery
- 11 Charging the Battery
- 12 Using an AC Power Adapter
- 12 Inserting and Removing an SD Card
- 13 Setting the Date and Time
- 14 Choosing the Display Language
- 15 Formatting an SD Memory Card
- 16 Setting Image Resolution and Quality

17 PHOTOGRAPHY MODE

- 17 [**A**] Auto Mode
- 19 Using the Digital Zoom
- 20 Setting the Flash
- 21 Setting the Focus
- 22 Setting the Self-timer
- 23 Exposure Compensation/Backlight Correction
- 24 [**Tv**] Shutter Speed Priority Photography Mode
- 25 [**Av**] Aperture Priority Mode
- 26 [**M**] Manual Mode
- 27 [**MV**] Movie Mode

28 [**▶**] PLAYBACK MODE

- 28 Playing Back Still Images
- 29 Playing Back Video Clips
- 30 Attaching Voice Memos
- 31 Zoom Playback
- 32 Slideshow Display
- 33 Protecting Images
- 35 [**🗑**] Deleting Images
- 37 DPOF Settings

39 MENU OPTIONS

- 39 Photography Menu (Picture tab)
- 41 Photography Menu (Function tab)
- 43 Photography Menu (AE/AWB tab)
- 45 Playback Menu
- 46 Setup Menu (Basic tab)
- 48 Setup Menu (Custom tab)

49 TRANSFERRING RECORDED IMAGES AND VIDEOS TO YOUR COMPUTER

- 49 Step 1: Installing the USB Driver
- 50 Step 2: Connecting the Camera to Your Computer
- 51 Step 3: Downloading Images and Video Files

52 CONNECTING THE CAMERA DIRECTLY TO THE PRINTER FOR PRINTING IMAGES (PICTBRIDGE FUNCTION)

54 INSTALLING NTI PHOTO SUITE

55 CAMERA SPECIFICATIONS

INTRODUCTION

Congratulations on your purchase of the new digital camera. Capturing high-quality digital images is fast and easy with this state-of-the-art smart camera. Equipped with a 8.1 Mega pixels CCD, this camera is capable of capturing images with a resolution of up to 3264 x 2448 pixels.


Package Contents

Carefully unpack your kit box and ensure that you have the following items:

- Digital Camera
- A/V cable
- USB cable
- User's manual
- Software CD-ROM
- Camera strap
- Camera pouch
- SD memory card
- AC power adapter
- Rechargeable lithium-ion battery
- Battery charger


GETTING TO KNOW THE CAMERA

Front View

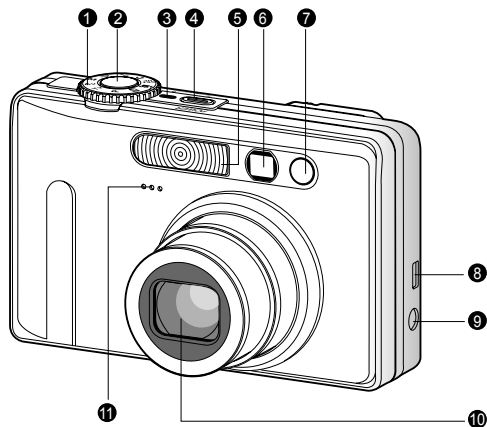


#	Name	Description
1	Mode dial	Sets the camera mode
2	Shutter button	Focuses and locks both focus & exposure when pressed halfway down. Captures the image when pressed all the way down.
3	Power indicator	Lights on when the camera power is turned on.
4	POWER (Power) button	Turns the camera power on and off.
5	Flash	Provides flash illumination.
6	Viewfinder window	Allows you to frame the subject of the image.
7	Self-timer LED (AF auxiliary light)	Blinks red during Self-timer mode until the image is captured.
8	USB or A/V OUT terminal	Allows you to connect a USB cable or an A/V cable to the camera.
9	DC IN 5V terminal	Allows you to connect an AC power adapter to operate the camera without battery, or to charge rechargeable lithium-ion battery.
10	Lens	3x optical zoom lens allows you to capture telephoto and wide-angle images.
11	Microphone	For recording audio with video clips and voice annotation.

Rear View

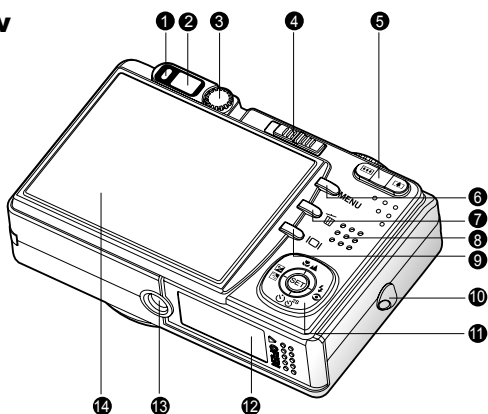


#	Name	Description
1	Status LED	Indicates the camera's operational status.
2	Viewfinder window	Allows you to compose your subject using the optical viewfinder.
3	Diopter adjustment dial	Provides a clearer image when using the optical viewfinder.
4	Mode switch 📷 Photography mode	Sets the camera mode. Selects this when capturing still images or recording video clips.
	📺 Playback mode	Performs image playback and deletion.
5	🔍 (Zoom in) button	Zooms the lens to telephoto position.
	📏 (Zoom out) button	Zooms the lens to wide-angle position.
6	MENU (Menu) button	Toggles On-Screen Display (OSD) menu on and off.
7	🗑️ (Delete) button	Allows you to delete an image.
8	Speaker	For playback or recorded audio.
9	DISP (Display) button	Turns the LCD monitor display and live view on and off.
10	Strap holder	Camera strap attachment.
11	Multi-selector button	Allows you to scroll through menus and images, and then select your choices.
12	Battery/SD card cover	Access to the battery and memory card.
13	Tripod socket	For tripod mounting.
14	LCD monitor	For image preview/review. Displays control menus, camera settings, and operational icons.



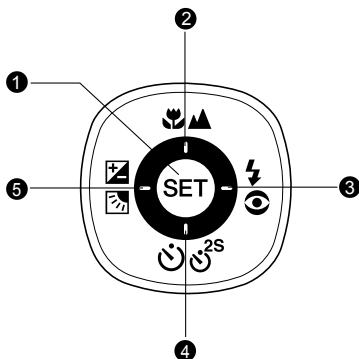


Multi-selector button

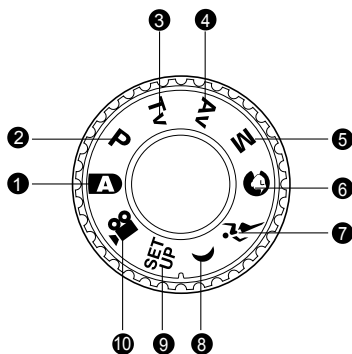

#	Name	Description
1	SET button	Enters the menu page and confirms the chosen setting.
2	▲ button 🌸▲ (Focus) button	Scrolls upwards. Allows you to choose the appropriate focus setting.
3	▶ button ⚡👁 (Flash) button	Scrolls right. Allows you to choose the appropriate flash setting.
4	▼ button 🕒🕒 ^{2S} (Self-timer) button	Scrolls downwards. Allows you to toggle the self-timer on and off, selects the desired self-timer mode.
5	◀ button ☑☑ (Exposure compensation/ Backlight correction) button	Scrolls left. Allows you to toggle the exposure compensation/ backlight correction on and off.

Mode dial




#	Mode	Description
1	A Auto photography	The camera automatically sets for exposure, etc.
2	P Program (auto exposure)	In program mode the shutter speed and aperture will be set automatically, but other parameters may be set manually.
3	Tv Shutter speed priority	You may specify the shutter speed while the camera sets the corresponding aperture value.
4	Av Aperture priority	You may specify the aperture value while the camera sets the corresponding shutter speed.
5	M Manual photography	For full manual control over exposure, aperture and other settings.
6	 Portrait	To photograph a person and defocus (blur) the background.
7	 Sports	For photographing fast-moving subjects.
8	 Night scene	For photographing evening or night scenes.
9	 Set-up	Specify your camera's settings.
10	 Movie	For recording video clips.

LCD Monitor Icons

For Photography modes: [A] [Q] [P] [C]


- Mode icon
- Zoom status
- Voice memo
- Battery condition
 - [Full] Full battery power
 - [Medium] Medium battery power
 - [Low] Low battery power
 - [Empty] Virtually no battery power
- Flash mode
 - [Blank] Automatic
 - [Red-eye] Red-eye Reduction
 - [Lightning] Forced Flash
 - [Off] Flash Off
- Main focus area
- Capture mode icon
 - [Blank] Single
 - [Continuous] Continuous
 - [AEB] Auto Exp.
- Image resolution
 - [3264x2448] 3264 x 2448
 - [2560x1920] 2560 x 1920
 - [1600x1200] 1600 x 1200
 - [640x480] 640 x 480
- Available number of shots
- Image quality
 - [Four stars] Fine
 - [Three stars] Standard
 - [Two stars] Economy
 - [TIFF] TIFF
- Self-timer icon
 - [10S] 10 sec.
 - [2S] 2 sec.
 - [10+2] 10+2 sec.
- Date and time
- Long-exposure time warning icon (potential for hand-shake blur)
- Backlight correction
- Metering
 - [Multi] Multi
 - [Spot] Spot
- White balance
 - [Blank] Auto
 - [Incandescent] Incandescent 1
 - [Fluorescent 1] Fluorescent 2
 - [Fluorescent 2] Fluorescent 2
 - [Day Light] Day Light
 - [Cloudy] Cloudy
 - [Manual] Manual
- Focus setting
 - [Blank] Auto focus
 - [Macro] Macro
 - [Infinity] Infinity

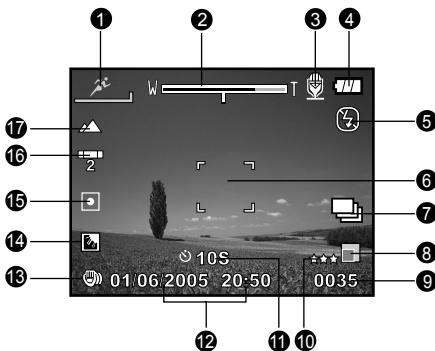

NOTE


- Pressing the [I/O] button changes the LCD display in the sequence of: display with icons, display without icons, LCD monitor OFF.

For Photography modes: [P] [Tv] [Av] [M]

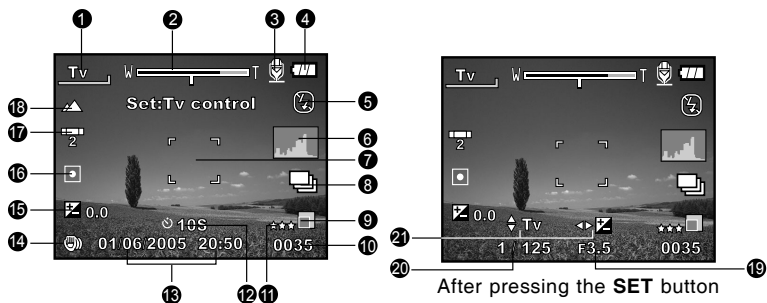


- | | |
|--|---|
| <ol style="list-style-type: none"> 1. Mode icon 2. Zoom status 3. Voice memo 4. Battery condition 5. Flash mode 6. Histogram 7. Main focus area 8. Capture mode icon 9. Image resolution 10. Available number of shots 11. Image quality 12. Self-timer icon | <ol style="list-style-type: none"> 13. Date and time 14. Long-exposure time warning icon (potential for hand-shake blur) 15. [] Exposure compensation
[] Backlight correction 16. Metering 17. White balance 18. Focus setting 19. Aperture 20. Shutter speed 21. Shutter speed/Aperture/EV control indicators |
|--|---|

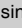

- Pressing the  button changes the LCD display in the sequence of: display with icons, display with icons and histogram, display without icons, LCD monitor OFF.

For Movie mode [M]


1. Mode icon
2. Zoom status
3. Battery condition
4. Video resolution
5. Available recording time/Elapsed time
6. Video quality
7. Self-timer icon
8. Date and time
9. Focus setting

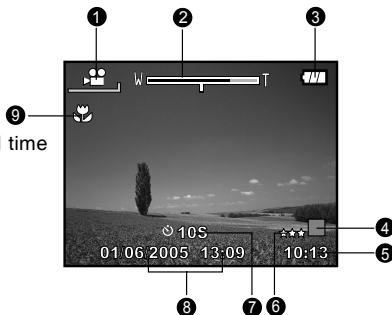**Playback mode [P] -Still image playback**

1. Mode icon
2. File number
3. Folder number
4. Protect icon
5. Voice memo
6. DPOF icon

**Playback mode [P]-Video playback**

1. Video status bar
2. Elapsed time
3. File number
4. Folder number
5. Protect icon
6. Mode icon
7. Play mode
8. Sound off icon (When the [M] button is pressed during video playback.)
9. Total time

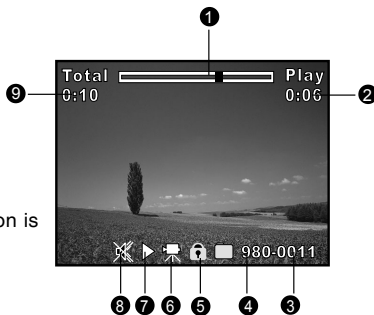


GETTING STARTED

Inserting and Removing the Battery


We highly recommend using specified rechargeable lithium-ion battery (1050mAh, 3.7V) to realize the full capability of your camera. Charge the battery fully before using the camera. Make sure that the power of the camera is off before inserting or removing the battery.

Inserting the Battery

1. Open the battery/SD card cover in the direction of the [OPEN] arrow.

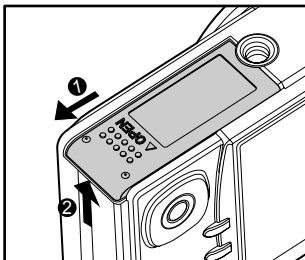

2. Insert the battery in the correct orientation shown.
 - Tilt the battery lock lever in the direction of the arrow, and then insert the battery.
3. Close the battery/SD card cover.

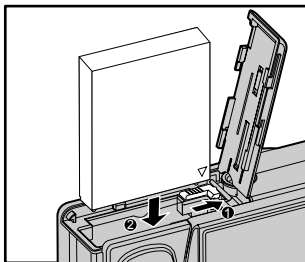


Removing the Battery

Open the battery/SD card cover and then release the battery lock lever. When the battery has come out a little, slowly pull it out the rest of the way.

Charging the Battery

Using the optional AC power adapter may charge the battery or operate the camera as power supply. Make sure that the power of the camera is off and then insert the battery before starting.

1. Insert one end of the AC power adapter into the **DC IN 5V** terminal of the camera.
2. Insert the other end of the AC power adapter into a wall outlet.
 - The status LED flashes green when charging is started and lights green when charging is completed. The LED lights red when a charging error has occurred.
 - It is recommended to fully discharge the battery before recharging.
 - Charging time varies according to the ambient temperature and the status of battery.

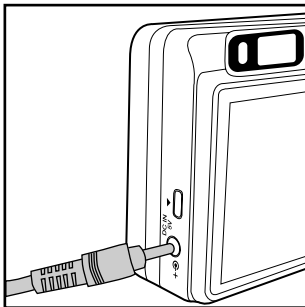

NOTE

- This camera must be used with specified AC power adapter. Damage caused by the use of an incorrect adapter is not covered under the warranty.
- Always make sure that the camera is off before removing the battery.
- The battery may feel warm after it has been charged or immediately after being used. This is normal and not a malfunction.
- When using the camera in cold conditions, keep the camera and battery warm by storing it in a warm place such as an interior pocket between shots.
- If you open the battery cover without removing the battery, the battery power will not be disconnected.
- If you remove the battery, you have to insert the battery within two hours in order to make sure that the date and time will not be reset.

Using an AC Power Adapter

Using an AC power adapter prevents the camera from automatically powered off while transferring files to your computer.

Perform the steps in the preceding section “Charging the Battery”.



NOTE


- Make sure to use only the AC power adapter specified for the digital video camera. Damage caused by the use of an incorrect adapter is not covered under the warranty.

Inserting and Removing an SD Card

Images captured with the camera will be stored on a Secure Digital (SD) memory card. You must have an SD card in place to use the camera. Before inserting or removing the SD card, make sure that the power of the camera is off.

Inserting an SD card

1. Open the battery/SD card cover.
2. Insert the SD card in the correct orientation shown.
 - Hold the SD card with its front side (printed arrow) facing the rear side of the camera, and then insert the card as far as it can go. There will be a distinct click as the card seats fully into the card slot.
3. Close the battery/SD card cover.

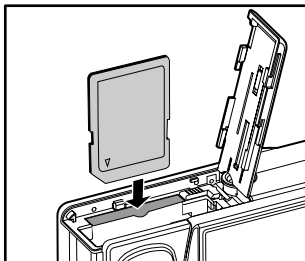

Removing an SD card

Open the battery/SD card cover, press lightly on the edge of the SD card and it will eject.



NOTE

- If the camera is powered on without an SD card inserted, a message “NO CARD” appears on the LCD monitor.
- To prevent valuable data from being accidentally erased from an SD card you can slide the write-protected tab (on the side of the SD card) to “LOCK”.
- However, to save, edit or erase data on an SD card, you must unlock the card.

Setting the Date and Time


The date/time needs to be set if/when:

- Camera is turned on for the first time.
- Camera is turned on after leaving the camera without the battery for an extended period of time.

When the date and time information is not displayed on the LCD monitor, follow these steps to set the correct date and time.


1. Slide the mode switch to [CAM] and set the mode dial to [SET].

- The setup menu is displayed.

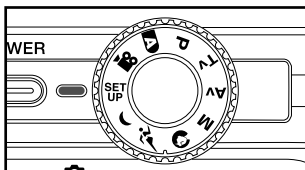

2. Select [Custom] with the ◀/▶ buttons.
3. Select [Date/Time] with the ▲/▼ buttons, and press the **SET** button.

- The Date/Time setting screen will be displayed.

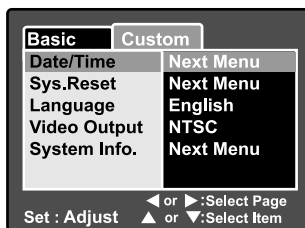


4. Select the item's field with the ◀/▶ buttons and adjust the value for the date and time with the ▲/▼ buttons.

- The date and time is set in the order year-month-day-hour-minute.
- The time is displayed in 24-hours format.

5. After confirming all settings are correct, press the **SET** button.


- The setting will be stored and the screen will return to the setup menu.

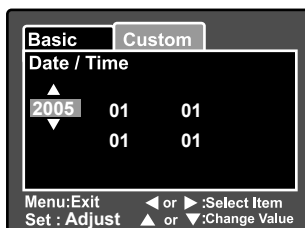

Choosing the Display Language

Choose an On-Screen Display (OSD) language for information to be displayed on the LCD monitor.




- Slide the mode switch to [CAM] and set the mode dial to [SET].
 - The setup menu is displayed.
- Select [Custom] with the ◀▶ buttons.
- Select [Language] with the ▲/▼ buttons, and press the **SET** button.
 - The available OSD languages will be displayed.
- Select the displayed language with the ▲/▼ buttons and press the **SET** button. The setting will be stored.

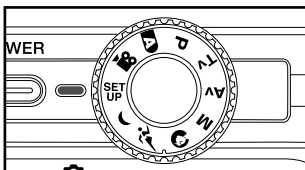

Formatting an SD Memory Card

Formatting an SD card will erase all of the images and folders that have been recorded on the SD card. Formatting is not possible when the SD card is in the locked condition.

- Slide the mode switch to [CAM] and set the mode dial to [SET].
 - [Basic] of the setup menu is displayed.
- Select [Format] with the ▲/▼ buttons, and press the **SET** button.
- Select [Execute] with the ▲/▼ buttons, and press the **SET** button.
 - To cancel formatting, select [Cancel].

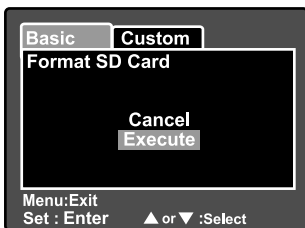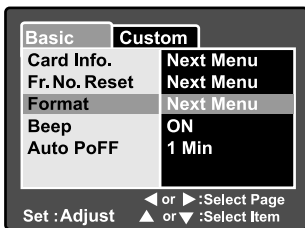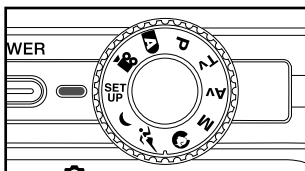

NOTE

- You need to format an SD card before using it in this camera.
- Formatting an SD card erases everything from the memory card including images, videos, and also non-image data. Before formatting, make sure that all data is unnecessary.
- Formatting is an irreversible action and data cannot be recovered at a later time.

Setting Image Resolution and Quality



Resolution and quality settings determine the pixel size (dimension), image file size, and compression ratio for your images. These settings affect the number of images that can be stored on a memory card. As you get to know the camera, it is recommended that you try each quality and resolution setting to get an appreciation for the effects that these settings will have on your images.

Higher resolution and higher quality images offer the best photographic results, but produce large file sizes. Therefore, few images will take up a lot of memory space.

High resolution and quality settings are recommended for printed output and situations requiring the finest detail. Lower resolution/quality images take up less memory space and may be quite suitable for sharing images via e-mail, in a report, or on a web page.

To change image resolution or image quality, perform these steps below:

- Slide the mode switch to **[P]** and set the mode dial to one of the photography modes.
- Press the **MENU** button.
 - [Picture] of the photography menu is displayed.
- Select [Size] with the **▲/▼** buttons, and press the **SET** button.
- Select the desired setting with the **▲/▼** buttons, and press the **SET** button.
- Select [Quality] with the **▲/▼** buttons, and press the **SET** button.
- Select the desired setting with the **▲/▼** buttons, and press the **SET** button.
- To exit from the photography menu, press the **MENU** button.

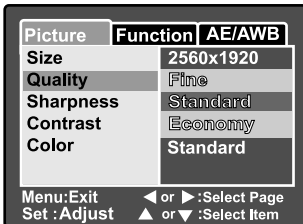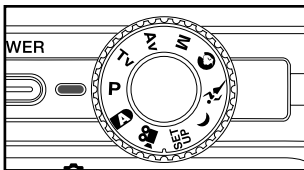

PHOTOGRAPHY MODE

[**A**] Auto Mode



Auto photography mode is perhaps the most commonly used photography mode. Images can be captured simply because the exposure (the combination of shutter speed and aperture setting) is determined automatically to suit the photographic conditions.

You can use either the optical viewfinder and/or the 2.5" LCD monitor to compose your images. Capturing images using the optical viewfinder will conserve the battery power. If the battery power is low, it is recommended that you only compose images using the viewfinder. Using the LCD monitor, you can compose images more accurately, but at the cost of the battery consumption. Always use the LCD display for close-up macro shots.


Using the Optical Viewfinder

Make sure that the battery and SD card are inserted before capturing images.

1. Press the **POWER** button to turn on the camera.
2. Slide the mode switch to [**A**] and set the mode dial to [**A**].

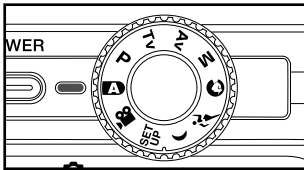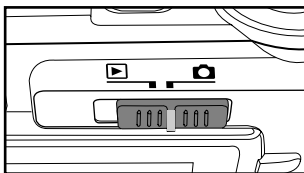


3. Compose your image in the viewfinder.
 - Turn the "diopter adjustment dial" until the image appears clearly within the viewfinder.

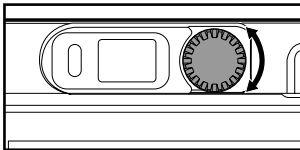

4. Press the shutter button down halfway.

- Pressing the shutter button down halfway automatically focuses and adjusts the exposure.
- The focus-area frame turns blue and the status LED lights green when the camera is focused and exposure is determined.
- When the focus or exposure is not suitable, the frame of the focus area turns yellow and the status LED flashes red.

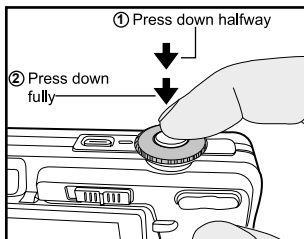


5. Press the shutter button down fully to capture the image.

- If the photographic preview is set to "ON", images (the captured image) will be displayed while the image is being recorded onto the memory.
- When the voice memo is set to "ON", [VOICE RECORDING] will be displayed on the screen immediately after the image is captured and voice memo recording will start.
- Press the shutter button one more time during recording, or wait for 30 seconds, [VOICE RECORD END] will be displayed and the recording will end. A [9] icon is displayed with images that have been recorded with a voice memo.

Using the LCD Monitor

Make sure that the battery and SD card are inserted before capturing images.


1. Press the **POWER** button to turn on the camera.
2. Slide the mode switch to [📷] and set the mode dial to [A].
 - By default, the LCD monitor setting is on.
3. Compose your image in the LCD monitor.
4. Press the shutter button down halfway, then press it down fully.

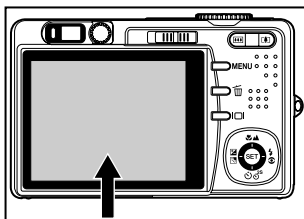


Using the Digital Zoom

Using a combination of 3 times optical zoom and 5.1 times digital zoom permits zoom photography up to 15.3 times to suit the subject and the distance. Digital zoom is a compelling feature, however, the more an image is enlarged (zoomed), the more pixelated (grainer) the image will appear.

- Slide the mode switch to and set the mode dial to one of the photography modes.
- Turn on the LCD monitor by pressing the button.
- To enable the digital zoom:
 - Press the **MENU** button.
 - Select [Function] with the buttons.
 - Select [Digital Zoom] with the , and press the **SET** button.
 - Select [ON] with the , and press the **SET** button.
 - Press the **MENU** button to exit from the menu screen.
 - To activate the digital zoom, press and hold the button completely until the image on the LCD monitor expands.
- Press the shutter button to capture a “zoomed” image.

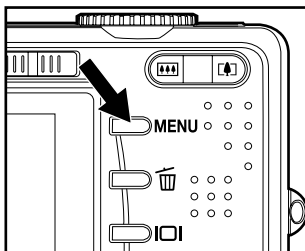

Picture	Function	AE/AWB
Capture Mode		Single
Voice Memo		OFF
LCD Bright.		0
Digital Zoom		ON
Preview		OFF
Date Print		ON
Menu:Exit ◀ or ▶:Select Page		
Set : Adjust ▲ or ▼:Select Item		



- Digital zoom cannot be activated in the mode.
- The digital zoom is cancelled when the LCD monitor is turned off.
- The zoom setting is automatically cancelled by either turning the camera off or the activation of the Auto Power Off function.

Setting the Flash


Set the flash for capturing images. The flash mode can be selected for the particular photographic conditions.

- Slide the mode switch to [📷] and set the mode dial to one of the photography modes.



- The available flash modes are dependant on the selected photography mode, scene mode, and capture mode.

- Toggle the [🔆] button to select the desired flash mode.

- Each press of the [🔆] button moves the icon one step through the sequence and displays it on the screen.
- For the automatic mode [A]:




- For the modes [P], [Tv], [Av] and [M].

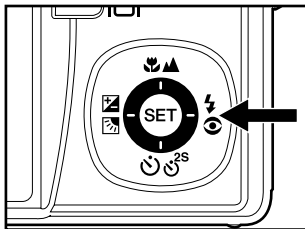

Setting the Focus

Images can be captured with the focus determined automatically using auto focus. You may over-ride the auto focus and specify [M] macro or [∞] infinity. The focus setting will be maintained even when the power is turned off or when Auto Power Off is activated. The available focus settings will depend on the selected photography mode.

- Slide the mode switch to [P] and set the mode dial to one of the photography modes.
- Toggle the [M/∞] button to select the desired focus mode.
 - Each press of the [M/∞] button moves the icon one step through the sequence and displays it on the screen.
 - For the modes of [L], [P], [Tv], [Av], [M], [A] and [S]:

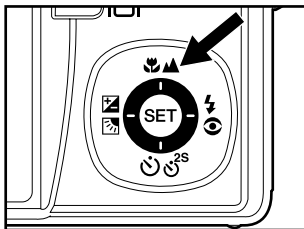

- For the modes of [S] and [C]:



The table below will help you choose the appropriate focus mode:

Focus mode	Description
[Blank] Auto Focus	Select auto focus for most occasions when you want the camera to automatically determine the focus setting. Using auto focus any object at a range of focus is 50 cm or greater can be in focus.
[M] Macro	Select macro to capture close-up images. When the lens is zoomed to its widest position you may focus objects as close as 5 cm. When the lens is zoomed to its telephoto position (3x zoom) you may focus objects as close as 30 cm.
[∞] Infinity	Select the infinity-focus setting when you want to capture images of subjects at a distance of infinity.


Setting the Self-timer

This setting allows images to be captured with the self-timer.


- Slide the mode switch to and set the mode dial to one of the photography modes.

- Toggle the button to select the setting.


- Each press of the button moves the icon one step through the sequence and displays it on the screen.



- For the movie mode and burst mode ([Continuous] and [Auto Exp.]):



- Compose the image, press the shutter button down halfway, then press it down fully.
 - The self-timer LED flashes and the image will be captured after the preset time has elapsed.
 - The countdown is displayed on the LCD monitor.
 - To cancel the self-timer during operation, press the **SET** button.

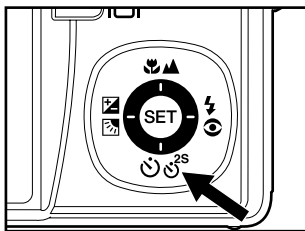

The table below will help you choose the appropriate self-timer mode:

Self-timer mode	Description
[10S] 10 sec.	The image is captured about 10 seconds after the shutter button is pressed.
[2S] 2 sec.	The image is captured about 2 seconds after the shutter button is pressed.
[10+2] 10+2 sec.	The first image is captured about 10 seconds after the shutter button is pressed, and then the second image is captured 2 seconds later. The 10+2 mode is convenient when capturing group images in succession.




- The self-timer setting is automatically cancelled after an image is captured.
- Use of the [2S] self-timer setting is effective in preventing motion-blur that can result when the shutter button is pressed at long exposure times. Use this mode and a tripod for best results.

Exposure Compensation/Backlight Correction

Images can be captured with the overall scene intentionally made brighter or darker. These settings are used when a suitable brightness (exposure) cannot otherwise be obtained in circumstances where the difference in brightness between the subject and the background (the contrast) is large, or when the subject that you wish to capture is very small within the scene. Exposure can be set in 0.3 EV units.

- Slide the mode switch to **[M]** and set the mode dial to **[P]**, **[Tv]**, **[Av]** and press the **[Fn]** button.
 - Each press of the **[Fn]** button displays the setting in the order of [Blank], **[Fn]** Backlight Correction, and **[Fn]** Exposure Compensation.
- Set the exposure value with the **[▲]**/**[▼]** buttons.
 - Press the **[▲]** button to increase the value.
 - Press the **[▼]** button to decrease the value.
 - The setting range of the exposure compensation is as follows: -2.0, -1.7, -1.3, -1.0, -0.7, -0.3, 0, +0.3, +0.7, +1.0, +1.3, +1.7, +2.0.
 - The larger the value, the brighter the image. The smaller the value, the darker the image. The set value is displayed on the screen.

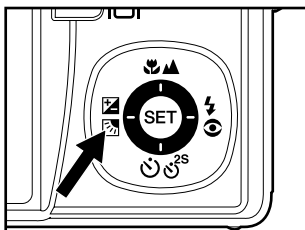

Effective Subjects and Set Values

- + (positive) compensation**
 - * Printed matter comprising black text on whitish paper
 - * Backlighting
 - * Bright scenes or strong reflected light such as ski slopes
 - * When the sky accounts for a large area on the screen
- (negative) compensation**
 - * People illuminated by a spotlight, in particular, against dark background
 - * Printed matter comprising white text on blackish paper
 - * Weak reflecting bodies such as evergreen trees or darkish leaves
- Backlight correction (+1.3 EV, fixed)**
 - * When the background is bright and the subject is dark.
 - * When subjects (people) have a light source such as the sun to their backs.



NOTE

- The backlight correction setting can be set in the **[M]**, **[P]**, **[Tv]**, **[Av]**, **[M]** and **[P]** modes.

[Tv] Shutter Speed Priority Photography Mode

In this mode, images are captured with the priority given to shutter speed. The aperture is automatically set according to the shutter speed. If you set a fast shutter speed, you can capture images of moving subjects that look as if they are still. If you set a slow shutter speed, you can capture images that give the impression that the subject is in motion.




- Slide the mode switch to [Q] and set the mode dial to [Tv].
- Press the **SET** button.

- After pressing the **SET** button in [Tv] mode, the / buttons turn into / buttons for adjusting shutter speed.
- Pressing the **SET** button again, the / buttons return to focus setting/self-timer function.

- Set the shutter speed with the / buttons.

- Press the button to select faster shutter speeds.
- Press the button to select slower shutter speeds.
- The setting range of the shutter speed is as follows:
1/1500, 1/1250, 1/1000, 1/820, 1/650, 1/500, 1/400, 1/320, 1/250, 1/200, 1/160, 1/125, 1/100, 1/80, 1/64, 1/50, 1/40, 1/32, 1/25, 1/20, 1/16, 1/13, 1/10, 0.13s, 0.16s, 0.2s, 0.25s, 0.3s, 0.4s, 0.5s.
- The shutter speed and corresponding aperture value are displayed on the screen. If an appropriate combination cannot be set, the aperture value is displayed in red, but images can be captured regardless.

- Compose the image, press the shutter button down halfway, and then press it down fully.

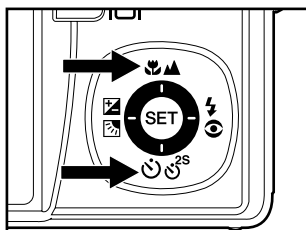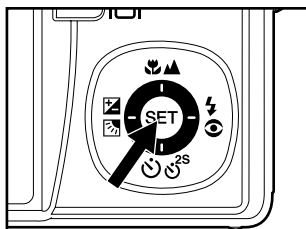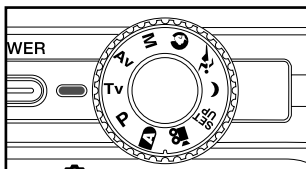

NOTE




- In the flash photography mode, when [⚡] and [⚡] are set, the fastest shutter speed is 1/250 second.

[Av] Aperture Priority Mode

In this mode, images are captured with the priority given to aperture. The shutter speed is automatically set according to the aperture. The aperture will affect the depth-of-field of the camera.

If you set a small aperture (higher F value), you can capture portrait images with an out-of-focus background. Alternatively, if you set a large aperture (lower F value), both close objects and distant objects will be in focus, for example when capturing landscape images.

- Slide the mode switch to and set the mode dial to [Av].
- Press the **SET** button.
 - After pressing the **SET** button in [Av] mode, the // buttons turn into / buttons for adjusting aperture value.
 - Pressing the **SET** button again, the / buttons return to focus setting/self-timer function.
- Set the aperture value with the / buttons.
 - Press the button to increase the value.
 - Press the button to decrease the value.
 - The setting range of the aperture value is as follows:
F6.7, F5.6, F4.8, F4.0, F3.5, F2.8.
 - The aperture value and corresponding shutter speed are displayed on the screen. If an appropriate combination cannot be set, the shutter speed is displayed in red, but images can be captured regardless.
- Compose the image, press the shutter button down halfway, and then press it down fully.

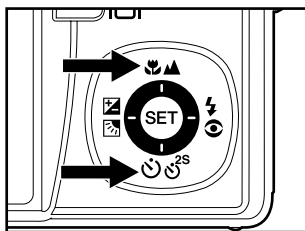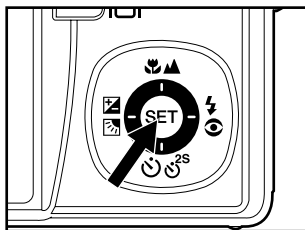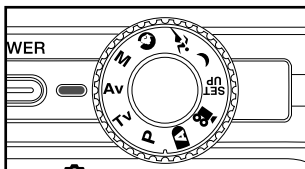




NOTE

- The aperture value varies depending on the position of the zoom lens.

[M] Manual Mode

In manual mode, the aperture value and the shutter speed can be varied individually.

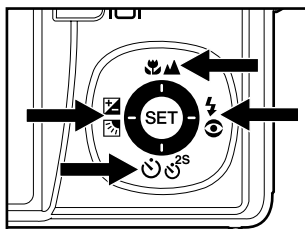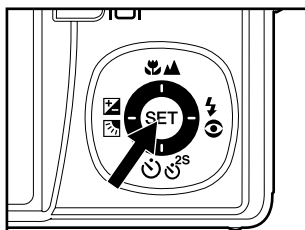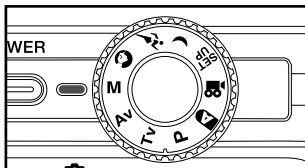

- Slide the mode switch to [M] and set the mode dial to [M].
- Press the **SET** button.
 - After pressing the **SET** button in [M] mode, the buttons turns into buttons for adjusting shutter speed.
 - After pressing the **SET** button in [M] mode, the buttons turns into buttons for adjusting aperture value.
 - Pressing the **SET** button again, the buttons returns to focus setting/self-timer/exposure compensation/flash setting function.
- Set the shutter speed with the buttons.
- Set the aperture value with the buttons.
- Compose the image, press the shutter button down halfway, and then press it down fully.




- In the flash photography mode, when [⚡] and [⚡] are set, the fastest shutter speed is 1/250 second.


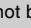

[] Movie Mode

This mode allows you to record video clips at a resolution of 640 x 480 pixels. Voice can also be recorded.

- Slide the mode switch to [] and set the mode dial to [].
- Compose the image with the zoom button.
 - Optical zoom should be set while composing the scene.
 - Zoom function cannot be used during movie capture.
- Fully press down the shutter button.
 - The recording of the video clip will start.
 - Pressing the shutter button again will end the recording and save the video on the SD card.
 - The recording time depends on the storage size and the subject of the image to be recorded.

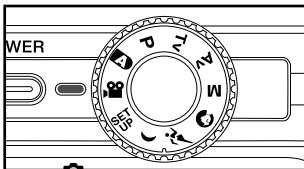

NOTE

- Digital zoom cannot be activated in the [] mode.
- In the [] mode, the LCD monitor cannot be turned off.
- When recording video clips, the flash cannot be used.
- While the image is being recorded into the SD card, do not open the battery/SD card cover, nor remove the battery or SD card. Doing so might damage the SD card or destroy the data.
- If the access speed of your SD card is not enough for recoding video clips in the currently selected quality, a warning icon [] will appear, and then the movie recording will stop. In this case, select a video quality lower than the current one.

[▶] PLAYBACK MODE

Playing Back Still Images

You can play back the still images on the LCD monitor. Insert the SD card into the camera and turn on the power before starting.

- Slide the mode switch to [▶].
 - The last image appears on the screen.
- The images can be fed in reverse or fed forward with the ▲/▼ buttons.



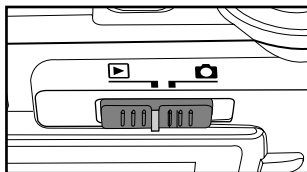


Image Display Information

You can switch the state of the information display by pressing the [I/O] button when playing back images. Each press of the [I/O] button switches the information display state in the following order:

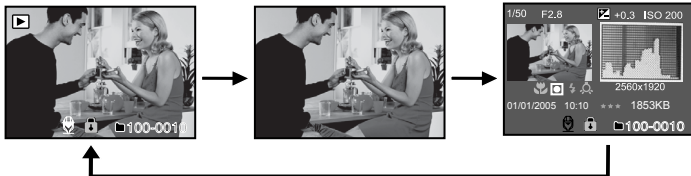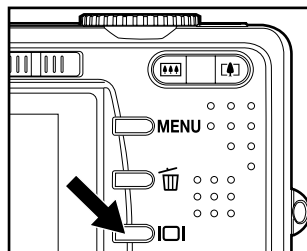

NOTE

- Pressing the ◀/▶ buttons during image playback will rotate the image 90 degrees. The ▶ button rotates the image clockwise, whereas the ◀ button rotates the image counterclockwise. A press of the button opposite to the direction in which the image was rotated will return the image to the normal display.
- A [▶] icon is displayed with the video data. Video clips cannot be rotated.
- A [🗣️] icon is displayed with images which have an audio memo recorded.
- Press the **SET** button to play back voice memos.
- In zoom playback, the display is switched between normal and non-display.

Playing Back Video Clips

You can play back video clips recorded on the camera. You can also play back voice.

- Slide the mode switch to [📺].
 - The last image appears on the screen.
- Select the desired video clip with the ▲/▼ buttons.
 - A [📺] icon is displayed with the video data.
- Press the **SET** button to play back a video clip.
 - Pressing the ▶/◀ buttons during playback initiates fast forward/fast reverse.

Button Operations for Video Playback:

	During Playback	During Pause	During a Stop
▶ button	(Forward play) Pressing the ▶ button will sequentially invoke 2x fast-forward, 4x fast-forward, regular play.	1-frame feed	
◀ button	(Reverse play) Pressing the ◀ button will sequentially invoke 2x fast-reverse, 4x fast-reverse, regular play.	Reverse 1-frame feed	
▲ button	Sound On/Off		The previous image is displayed.
▼ button	Stop (The display returns to the 1st frame playback)		The next image is displayed.
SET button	Pause	Cancels pause	Regular forward play



NOTE

- Video clips cannot be displayed rotated or enlarged.

Attaching Voice Memos

A maximum of 30 seconds of audio can be recorded like a memo annotation for each still image. The voice memo can be recorded only once.

1. Slide the mode switch to [📷].
 - The last image appears on the screen.
2. Select the image that you want to attach the voice memo with the ▲/▼ buttons.
3. Press the shutter button.
 - [VOICE RECORDING] is displayed on the screen and recording starts.
4. To stop recording voice memo during recording, press the shutter button again.
 - [VOICE RECORD END] will be displayed and the recording will end.
A [🗣️] icon is displayed with images that have been recorded with a voice memo.

Playing back voice memo

Pressing the **SET** button displays [VOICE PLAYBACK] and plays back the voice memo.




NOTE

- Voice memo is available at the time of still single image capture mode as well as during playback.

Zoom Playback

Images that are played back can be enlarged by a factor of two, or four times. This allows you to enlarge a selected portion of an image to examine fine details.

- Slide the mode switch to [P].
- Press the ▲/▼ buttons to select the image you want to enlarge.
 - You can also select the image you want to enlarge from the thumbnail display.
- Adjust the zoom ratio with the [Z]/[4x] buttons.
 - Pressing the [Z] button enlarges the image.
 - To return to normal magnification, press the [4x] button.
 - The magnification factor is displayed on the LCD monitor.
 - The image is displayed enlarged, and a white frame and green frame are displayed on the LCD monitor.
 - The white frame indicates the entire image, while the green frame shows the location of the currently enlarged area.
- Press the ▲/▼/◀/▶ buttons to select the area to enlarge.
- To return to regular display, toggle the [4x] button until the regular display appears on the screen.

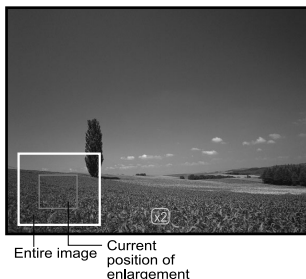

NOTE

- Pressing the [Z] button magnifies the image from 1x → 2x → 4x.
- Pressing the [4x] button reduces the image from 4x → 2x → 1x.

Slideshow Display

The slideshow function enables you to play back your still images automatically in sequential order as a slideshow. This is very useful and entertaining feature for reviewing captured images and for presentations.

1. Slide the mode switch to [P].
2. Press the **MENU** button.
 - The playback menu is displayed.
3. Select [Slide Show] with the ▲/▼ buttons, and press the **SET** button.
 - The slideshow starts.
4. To stop the slide show during playback, press the **SET** button.
 - The image is displayed on screen when you press the **SET** button.



NOTE

- The Auto Power Off function is disabled during a slide show.
- All still images in the folder are automatically played back.

Protecting Images

You may protect an image from accidental deletion, or erasure.

Protecting Images

- Slide the mode switch to [P].
- Select the image that you want to protect with the ▲/▼ buttons.
- Press the **MENU** button.
 - The playback menu is displayed.
- Select [Protect] with the ▲/▼ buttons, and press the **SET** button.
- Select [Single] or [All] with the ▲/▼ buttons, and press the **SET** button.
- Select [Set] with the ▲/▼ buttons, and press the **SET** button.
 - Protection is applied to the image and the camera returns to the playback mode.
 - The protect icon [🔒] is displayed with protected images. When [All] has been selected, [🔒] is displayed with all images.



Canceling Protection

To cancel protection for only one image, display the image that you want to remove the image protection.

- Select [Protect] with the ▲/▼ buttons from the playback menu, and press the **SET** button.
- Select [Single] or [All] with the ▲/▼ buttons, and press the **SET** button.
- Select [Cancel Protect] with the ▲/▼ buttons, and press the **SET** button.
 - The image is no longer protected and the camera returns to playback mode.

Protecting multiple images

1. Select [Protect] with the ▲/▼ buttons from the playback menu, and press the **SET** button.
2. Select [Select] with the ▲/▼ buttons, and press the **SET** button.
 - The images are displayed in the thumbnail display.
3. Select the image you want to protect with the ▲/▼/◀/▶ buttons, and press the **|□|** button.
 - The protect icon [🔒] is displayed with protected images. Selecting a protected image and pressing the **|□|** button again will cancel the protection.
4. Press the **SET** button.
 - The camera returns to playback mode.






NOTE


- Formatting an SD card overrides protection, and erases all images regardless of their protected status.

Deleting Images

Immediate Erasure (Quick Delete Function)


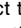
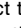

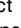
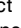
The quick delete function enables you to delete the last-captured image during capture.


- Slide the mode switch to  and set the mode dial to one of the photography modes.
- Press the  button.
 - The last image and quick delete menu appear on the screen.
- Press the  button again to delete the image.
 - You may also press the **SET** button to confirm the deletion.
 - To not delete, select [Cancel], and press the **SET** button.

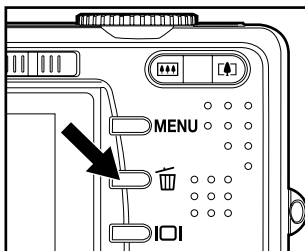

Deleting in Playback Mode

Deleting a single image/Deleting all images

- Slide the mode switch to .
 - The last image will be displayed on the screen.
- Select the image you want to delete with the / buttons.
- Press the  button.
 - The deletion menu will be displayed.
- Select [Single] or [All] with the / buttons, and press the **SET** button.
 - [Single]: Deletes the selected image or the last image.
 - [All]: Deletes all of the images on the SD card except for protected images.
 - [Select]: Deletes a set of selected images.

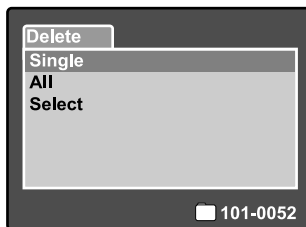




- Select [Execute] with the ▲/▼ buttons, and press the **SET** button.
 - To not delete, select [Cancel], and press the **SET** button.


**NOTE**

- Deleting an image will not affect sequential image numbering. For example, if you delete image number 240, the next captured image will be numbered 241 even though 240 no longer exists. In other words, an image-number is retired when an image is deleted and will not be reused or reassigned to another subsequently captured image.

Deleting selected images

This deletes a number of selected images.

- Slide the mode switch to [D].
- Press the  button.
 - The deletion menu will be displayed.
- Select [Select] with the ▲/▼ buttons, and press the **SET** button.
 - The images are displayed in the thumbnail display.
- Select the image you want to delete with the ▲/▼/◀/▶ buttons, and press the  button.
 - The  icon will be displayed. One more press of the delete button will cancel the operation. Repeat this procedure and select all the images that you want to delete.
- Press the **SET** button.

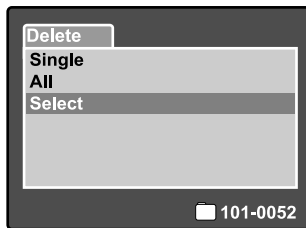

DPOF Settings


DPOF (Digital Print Order Format) allows you to embed printing information on your memory card. Files saved in the DPOF format can be printed using compatible printers or through a laboratory printing device.

1. Set the mode dial to [E].
2. Select the image that you want to set DPOF with the ▲/▼ buttons.
3. Press the **MENU** button.


- The playback menu is displayed.
4. Select [DPOF] with the ▲/▼ buttons, and press the **SET** button.
 - The DPOF setting screen is displayed.



5. Select [Single] or [All] with the ▲/▼ buttons, and press the **SET** button.
 - [Single]: Sets DPOF for each individual image.
 - [All]: Sets DPOF for all images at once.

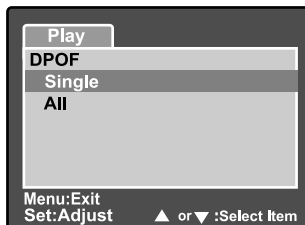

6. Select [Print Num.] with the ▲/▼ buttons, and press the **SET** button.
 - This displays the number of prints setting screen.
7. Set the number of prints with the ▲/▼ buttons, and press the **SET** button.
 - You can set up to 9 prints for each image.
8. Select [Date] with the ▲/▼ buttons, and press the **SET** button.
 - The date and time setting screen appears.

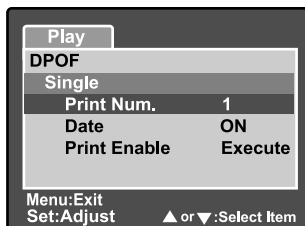

9. Select date to [ON] or [OFF] with the ▲/▼ buttons, and press the **SET** button.

[ON]: The date of the photograph will also be printed.

[OFF]: The date of the photograph will not be printed.

10. Select [Print Enable] with the ▲/▼ buttons, and press the **SET** button.

11. Select [Execute] with the ▲/▼ buttons, and press the **SET** button.

- This creates a file containing the DPOF information, and when the operation is finished, the screen returns to the playback screen.
- The DPOF icon [🖨️] is displayed on each image that have set up DPOF settings.

**NOTE**


- The date that is printed on the photo is the date set on the camera. To print the correct date on the photo, set the date on the camera before you capture the image. Refer to the section in this manual titled "**Setting the Date and Time**" for further details.

MENU OPTIONS

Photography Menu (Picture tab)

This menu is for basic settings used when capturing images in the photography modes. These settings are retained even if the camera is turned off or the Auto Power Off function is activated.

- Slide the mode switch to and set the mode dial to one of the photography modes.
- Press the **MENU** button.
 - The [Picture] tab of the photography menu is displayed.
- Select the desired [Picture] option item with the $\blacktriangle/\blacktriangledown$ buttons, and press the **SET** button to enter its respective menu.
- Select the desired setting with the $\blacktriangle/\blacktriangledown$ buttons, and press the **SET** button.
- To exit from the photography menu, press the **MENU** button.

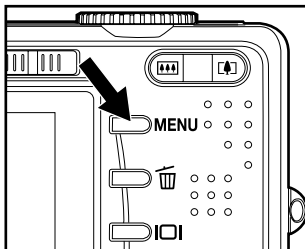


Size (resolution)

This sets the resolution of the still-image that will be captured.

[Still image]

- 3264 x 2448**: 3264 x 2448 pixels
(8 Megapixel resolution)
- 2560 x 1920**: 2560 x 1920 pixels
(5 Megapixel resolution)
- 1600 x 1200**: 1600 x 1200 pixels
(2 Megapixel resolution)
- 640 x 480**: 640 x 480 pixels
(VGA resolution)

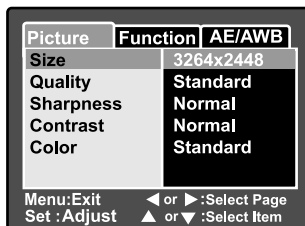

- The size setting is not available in the mode.

Quality

This sets the quality (compression rate) at which the image is captured.

Fine: Low compression

Standard: Normal

Economy: High compression

TIFF: Lossless compression (the absolute highest image quality and the largest file sizes.)



NOTE

- TIFF setting is only available at resolution 3264 x 2448.
- TIFF uses lossless compression for the absolute finest possible image detail.

Sharpness

The camera can automatically emphasize the borders between light and dark areas of the image. This will make the image's edges look sharper. In some scenes you may prefer sharper edge detail. In other scenes you may prefer softer edge detail.

This sets the sharpness of the image that will be captured.

Hard: Hard

Normal: Normal

Soft: Soft



NOTE

- Sharpness cannot be set in the [,] mode.

Contrast

This sets the difference between the bright and dark portions of the images that will be captured.

Hard: Increases the contrast.

Normal: Set the contrast automatically.

Soft: Decreases the contrast.

Color

This allows you to specify the color mode of the images that will be captured.

Standard: Standard color


Vivid: Bright color (more color saturation)

Sepia: Sepia

Monochrome: Black-and-white (grayscale images with the effect of black and white film)

Photography Menu (Function tab)

- Slide the mode switch to and set the mode dial to one of the photography modes.
- Press the **MENU** button, and select the [Function] menu with the **▶** button.
 - The [Function] tab of the photography menu is displayed.
- Select the desired [Function] option item with the **▲/▼** buttons, and press the **SET** button to enter its respective menu.
- Select the desired setting with the **▲/▼** buttons, and press the **SET** button.
- To exit from the photography menu, press the **MENU** button.

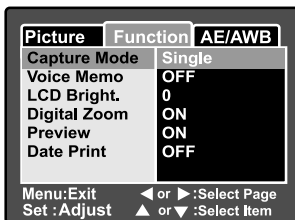

NOTE

- In the [Function] menu of mode, only the "LCD Bright." could be set.

Capture Mode

Capture mode is an option that allows you to capture a rapid sequence of images with one press of the shutter. There are two distinctly different aspects to this option - Continuous (burst) capture, and AEB (automatic exposure bracketing)

[Blank] Single: In this setting the feature is not invoked and the camera takes single-shots.

Continuous: In this setting, the camera will capture a sequential burst of three images (maximum) at an interval of 0.7 seconds (maximum rate.) The continuous burst mode is very useful for photographing objects in motion where it is difficult to determine the precise moment of capture. Afterwards, you may review the sequence of shots to select the best one.

[AEB] Auto Exp.: Auto-exposure bracketing is an effective technique when it is difficult to determine the precise exposure of a scene. Using AEB the camera will capture a sequential burst of three images at three different exposure settings. One shot will be at the level of exposure automatically determined by the camera, eV0. The two complementary shots will be underexposed (eV -0.67), and overexposed (eV +0.67) respectively. Afterwards, you may review the sequence of shots to select the best exposure.



NOTE

- For continuous (burst) photography, press and hold the shutter button until all three images have been captured. If the shutter button is released earlier, the burst will end at that point.

Voice Memo

A voice memo can be recorded for 30 seconds immediately following still image capture. This feature is also available during playback mode.


Refer to the sections in this manual titled “[**▲**] Auto Mode” and “Attaching Voice Memos” for further details.

ON: Enable voice memo.

OFF: Disable voice memo.

LCD Bright.

Select a brightness level for the LCD monitor. The LCD becomes brighter with the **▲** button and darker with the **▼** button. The adjustment range is from -5 to +5.

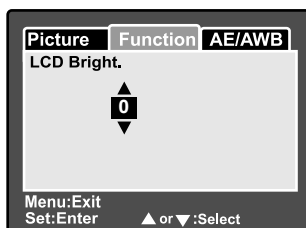

Digital Zoom

This enables or disables digital zoom.

ON: Enable digital zoom.

OFF: Disable digital zoom.

Preview

This sets whether or not to display the captured image on the screen immediately after the image is captured.

ON: Display when images are being recorded to the SD card.

OFF: Does not display.



NOTE

- A captured image is displayed on the LCD monitor for about two seconds. Pressing the shutter button during preview cancels the operation.
- When preview is set to off, the voice memo setting is also fixed to off.

Date Print


The date of recording can be printed directly on still images. This function must be activated before the image is captured.

ON: Imprints the date on still images when capturing images.

OFF: Does not imprint the date on the still images when capturing images.

Photography Menu (AE/AWB tab)

- Slide the mode switch to **[Q]** and set the mode dial to one of the photography modes.
- Press the **MENU** button, and select the [AE/AWB] menu with the **▶** button.
 - The [AE/AWB] tab of the photography menu is displayed.
- Select the desired [AE/AWB] option item with the **▲/▼** buttons, and press the **SET** button to enter its respective menu.
- Select the desired setting with the **▲/▼** buttons, and press the **SET** button.
- To exit from this menu, press the **MENU** button.

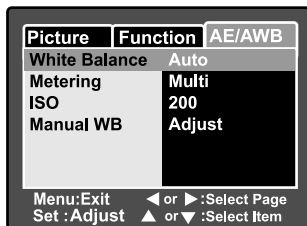

NOTE

- The [AE/AWB] menu is not available in the **[A]** mode.
- In the **[P]** mode, the "Metering" and "ISO" cannot be set.

White Balance

This specifies the white balance settings to be used by the camera for particular lighting conditions.

- [Blank] Auto:** The camera will determine white balance automatically.
- [☀] Incandescent:** For photography under incandescent lighting.
- [☽] Fluorescent 1:** For photography under a daylight fluorescent tube with a bluish cast.
- [☽] Fluorescent 2:** For photography under a daylight white fluorescent tube with a reddish cast.
- [☀] Day Light:** Outdoor photography.
- [☁] Cloudy:** For photography under a cloudy sky.
- [👁] Manual:** For photography with a Manual WB.

Metering

This sets the exposure-metering method for calculating proper exposure.

- [☒] Multi:** The entire area of the screen is measured, and the exposure is calculated.
- [☑] Spot:** A very small portion of the center of the screen is measured, and the exposure is calculated.

ISO

This sets the light sensitivity for capturing images. When the sensitivity is raised (the ISO figure is increased), the camera sensitivity is enhanced for low-lighting, but your images will appear more pixilated (grainy).

50: Equivalent to ISO 50.

100: Equivalent to ISO 100.

200: High-sensitive photography equivalent to ISO 200.

Auto: The camera will determine ISO sensitivity automatically. (Auto ISO is available only in the [A], [P], [Q], [S] or [C] mode.)

Manual WB

This allows for manually setting the white balance. Manual WB is convenient when the white balance presets do not offer a good match to your specific lighting conditions.

Before selecting [Execute] select a white subject (such as a white paper) that will be used to set the white balance.

Cancel: Disable manual white balance.

Execute: Enable manual white balance.

Playback Menu

In the [▶] mode, you may adjust playback settings. These settings are not canceled even if the camera is turned off or the Auto Power Off function is activated.

1. Set the mode dial to [▶].
2. Press the **MENU** button.
 - The playback menu is displayed.
3. Select the desired option item with the ▲/▼ buttons, and press the **SET** button to enter its respective menu.
4. Select the desired setting with the ▲/▼ buttons, and press the **SET** button.
5. To exit from the playback menu, press the **MENU** button.



Slide Show

Automatic sequential play back of still images.

Refer to the section in this manual titled “**Slideshow Display**” for further details.

DPOF

Set the number of prints and date display in DPOF format to images that you want to print. (This function is available for still images only.) You can print images easily just by inserting the SD card to a DPOF-compatible printer or a print shop.

Refer to the section in this manual titled “**DPOF Settings**” for further details.

Protect

Protect an image to prevent accidental erasure.

Refer to the section in this manual titled “**Protecting Images**” for further details.

LCD Bright.


Adjust the brightness of the LCD monitor. This function does not adjust the brightness of your captured images.

Refer to the section in this manual titled “**LCD Bright.**” in **Photography Menu (Function tab)** for further details.

Setup Menu (Basic tab)

In the setup menus you may adjust your camera's operating environment. The settings will be retained after the power has been turned off or Auto Power Off is activated.

- Slide the mode switch to [📷] and set the mode dial to [SET].
 - The [Basic] tab of the set-up menu is displayed.
- Select the desired [Basic] option item with the ▲/▼ buttons, and press the **SET** button to enter its respective menu.
- Select the desired setting with the ▲/▼ buttons, and press the **SET** button.
- To exit from the set-up menu, change the mode dial setting.

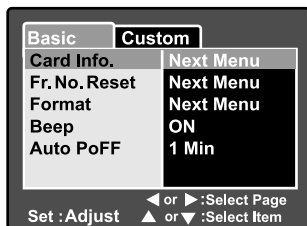

Card Info.

This will display the total capacity of your memory card as well as the remaining (unused) capacity. Note that the stated capacity may be less than the advertised (labeled) capacity of your SD memory card. This is attributable to the difference between binary (base 2) and engineering (base 10) methods of capacity calculation.

Fr. No. Reset

This creates a new folder on your memory card. From this point forward, newly captured images are stored in the newly created folder starting with image number 0001.

Cancel: Does not reset the file number.

Execute: Resets the file number and creates a new folder.

Format

This function reformats the SD card loaded in your camera and thereby erases all images as well as any other non-image data on the memory card. Even protected images are. An SD card cannot be formatted if it is write-protected. Refer to the section in this manual titled “**Formatting an SD Card**” for further details.

Beep

Enables or disables the sounds (beeps) associated with camera button functions.

ON: Enables sounds/beep tones.

OFF: Disables sounds/beep tones.

Auto PoFF

If no operation is performed for a specific period of time, the camera will automatically turn off. This feature is useful to reduce battery consumption.

- 1 Min.:** When the camera has not been operated, it turns the power off after 1 minute.
- 2 Min.:** When the camera has not been operated, it turns the power off after 2 minutes.
- 3 Min.:** When the camera has not been operated, it turns the power off after 3 minutes.




NOTE

- The auto power-off function is disabled during a slideshow or during PC connection.

Setup Menu (Custom tab)

- Slide the mode switch to [CAM] and set the mode dial to [M].
- Select the [Custom] menu with the ► button.
 - The [Custom] tab of the set-up menu is displayed.
- Select the desired [Custom] option item with the ▲/▼ buttons, and press the **SET** button to enter its respective menu.
- Select the desired setting with the ▲/▼ buttons, and press the **SET** button.
- To exit from the set-up menu, change the mode dial setting.

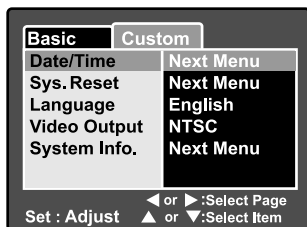

Date/Time

This sets the date and the time.

Refer to the section in this manual titled “**Setting the Date and Time**” for further details.

Sys. Reset

This returns all basic settings to the camera’s default settings. Note that the date and time setting will not be reset, however.

Cancel: Does not reset the camera to the factory default settings and the current settings are retained, unchanged.

Execute: Resets the camera to its original factory default settings.

Language

This sets the language that is displayed on the LCD monitor.

Refer to the section in this manual titled “**Choosing the OSD Language**” for further details.

Video Output

This sets video output standard of the camera so you may connect your camera to video equipment.

NTSC: NTSC broadcast standard.

PAL: PAL broadcast standard.

System Info.

This displays the firmware version of the camera.

TRANSFERRING RECORDED IMAGES AND VIDEOS TO YOUR COMPUTER

To transfer images/video clips from the camera to your computer, follow these steps:

Step 1: Installing the USB driver (Windows 98 and Mac OS 8.6 users only)

Step 2: Connecting the camera to your computer

Step 3: Downloading images and video files

Step 1: Installing the USB Driver

Windows 98 computers

The USB driver on the CD-ROM is exclusively for Windows 98 computers. Installing the USB driver on computers running Windows 2000/ME/XP is not necessary.

1. Insert the CD-ROM that came with the camera into your CD-ROM drive. The welcome screen appears.
2. Click **"INSTALL USB DRIVER"**. Follow the on-screen instructions to complete the installation. After the USB driver has been installed, restart your computer.




Macintosh OS 8.6 computers

Mac OS 8.6 users must install a USB driver. For Mac OS 9.0 or higher, the computer will automatically recognize the camera and load its own USB drivers.

1. Insert the CD-ROM that came with the camera into the CD-ROM drive.
2. Select and double-click **"Digital Camera Driver Installer"**.
3. Select **"Install Location"** and click **"Install"**.
4. Follow the on-screen instructions to complete the installation and restart your computer.

Step 2: Connecting the Camera to Your Computer

1. Connect one end of the USB cable to the USB terminal of the camera.
2. Connect the other end of the USB cable to an available USB port on your computer.
3. Turn on your camera.
4. The [USB] screen appears. Select [PC] with the ▲/▼ buttons, and press the **SET** button.
5. From the Windows desktop, double click on "My Computer".
6. Look for a new "Removable disk" icon. This "Removable disk" is actually the memory card in your camera. Typically, the camera will be assigned drive letter "e" or higher.
7. Double click on the removable disk and locate the DCIM folder.
8. Double click on the DCIM folder to open it to find more folders.
 - Your recorded images and video clips will be inside these folders.
 - Copy & Paste or Drag-N-Drop image and video files to a folder on your computer.

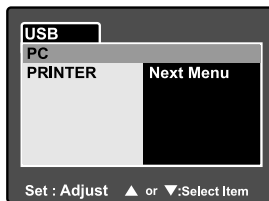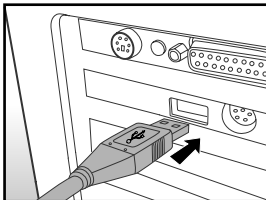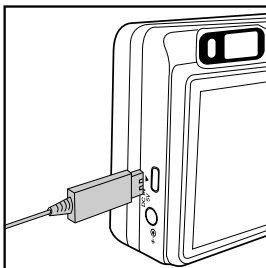

Mac users: Double-click the "untitled" or "unlabeled" disk drive icon on our desktop. iPhoto may automatically launch.



- The data saved to the SD card may be damaged if the power to the camera is cut off during image transfer. We recommend that you use the AC power adapter when connecting the camera to the PC.

Step 3: Downloading Images and Video Files

When the camera is turned on and connected to your computer, it is considered to be a disk drive, just like a floppy disk or CD. You can download (transfer) images by copying them from the “Removable disk” (“untitled” or “unlabeled” disk on a Macintosh) to your computer hard drive.

Windows

Open the “removable disk” and subsequent folders by double clicking on them. Your images are inside these folder(s). Select the images that you want, and then choose “Copy” from the “Edit” menu. Open the destination location (folder) and choose “Paste” from the “Edit” menu. You may also drag and drop image files from the camera to a desired location.

Macintosh

Open the “untitled” disk icon, and the destination location on your hard disk. Drag and drop from the camera to the desired destination. Do not open the battery cover during USB cable connection.




NOTE

- Memory card users may prefer to use a memory card reader (highly recommended).
- A video playback application is not included with the package. Make sure that a video playback application has been installed in your computer.

CONNECTING THE CAMERA DIRECTLY TO THE PRINTER FOR PRINTING IMAGES (PICTBRIDGE FUNCTION)

If a printer that support PictBridge is available, images can be printed by connecting the camera directly to the PictBridge-compatible printer without using a computer.

1. Connect one end of the USB cable to your camera.
2. Connect the other end of the USB cable to the USB port on the printer.
3. Turn on your camera.

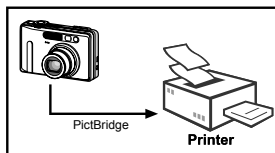

4. The [USB] screen is displayed. Select [PRINTER] with the ▲/▼ buttons, and press the **SET** button.
5. Select the item you want to configure with the ▲/▼ buttons, and press the **SET** button.

[Images]: Select whether you want to print specific image or all images. You may also select printing number for specific image.




[Date Print]: According to the printer type, select whether you want to print the image with date imprint or not.

[Paper Size]: Select the desired paper size according to the printer type.


[Layout]: Select the desired printing layout according to the printer type.

[Print]: After all settings is configured, select this item to start printing.


6. If you select [Images] in the previous step, the figure shown on the right hand side will appear. Select [Single] or [All] with the ▲/▼ buttons, and press the **SET** button.

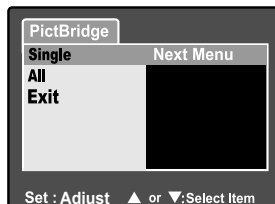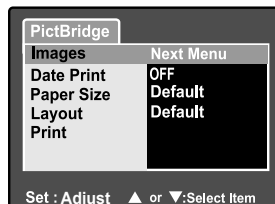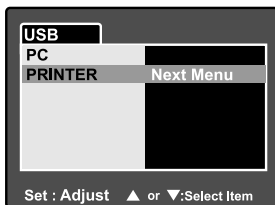



7. If you select [Single] in the previous step, the figure shown on the right hand side will appear.
- Select the image that you want to print with the ◀/▶ buttons.
 - Select the printing number (up to 99) with the ▲/▼ buttons.
 - After selecting the desired image and printing number, press the **SET** button to confirm.
8. Select [Exit] with the ▲/▼ buttons, and press the **SET** button.

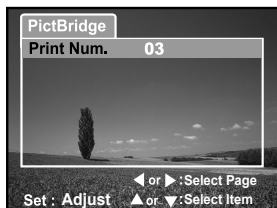

9. Select [Print] with the ▲/▼ buttons, and press the **SET** button to start printing.

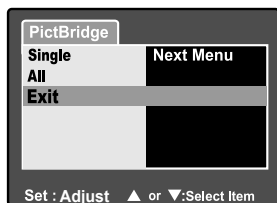

10. The printing starts and the figure shown on the right hand side appears.
- The [Complete] screen will be displayed temporarily, reminding you that the printing procedure is finished.
 - If a print error is detected, the [Print Error] screen will be displayed.

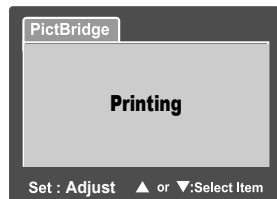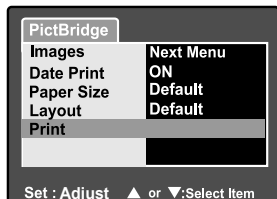

- The image printing may be failed if the power to the camera is accidentally cut off. We recommend that you use the AC power adapter when connecting the camera to the printer.

INSTALLING NTI PHOTO SUITE

PC users will find that NTI Photo Suite is a very user-friendly image-editing program. With NTI Photo Suite, you can retouch, compose, and organize your images. It includes a variety of templates, such as photo frames, birthday cards, calendars and more. Get your images ready and explore this amazing program.

To install NTI Photo Suite:

1. Insert the CD-ROM that came with the camera into your CD-ROM drive. The welcome screen appears.
2. Click **"INSTALL NTI PHOTO SUITE"** Follow the onscreen instructions to complete the installation.



NOTE

- To use NTI Photo Suite to edit and retouch your recorded images, please refer to the on-line help.
- For Windows 2000/XP users, please make sure to install and use the NTI Photo Suite in "Administrator" mode.
- NTI Photo Suite is not supported on the Mac. iPhoto or iPhoto2 is recommended.

CAMERA SPECIFICATIONS

Item	Description
Image sensor	8.1 Mega pixels CCD sensor
Image resolution	<Still image> 3264 x 2448, 2560 x 1920, 1600 x 1200, 640 x 480 < Video clip> 640 x 480
LCD monitor	2.5" LTPS TFT color LCD
Viewfinder	Real image optical zoom viewfinder
Image quality	Fine/Standard/Economy/TIFF
Recording media	External memory: Supports SD card (up to 1GB)
Compression format	JPEG compliant
Image file format	JPEG (EXIF 2.2), DCF, DPOF, AVI
Lens	3x optical zoom lens F-no.: 2.8 (Wide)/4.8 (Tele) Focal length: 7.5 mm ~ 22.5 mm (equivalent to 36 mm - 108 mm on a 35 mm camera)
Range of focus	Wide: Approx. 5 cm to infinity (in Macro mode) Tele: Approx. 30 cm to infinity (in Macro mode) Normal: Approx. 50 cm to infinity
Shutter speed	1/2 -1/1500 sec.
Digital zoom	5.1x (Still-image capture mode) 2x and 4x enlargement (Still-image playback mode)
Exposure compensation	-2EV ~ +2EV (in 0.3EV increments)
Flash effective range	0.5 m -2.7 m
Self-timer	10 sec./2 sec./10+2 sec.
Interface	DC IN 5V terminal A/V OUT terminal USB terminal (USB 1.1, Full speed)
Power supply	Rechargeable Lithium-ion battery (3.7V) AC power adapter (5V/3A)
Dimension (WxHxD)	Approx. 91 x 57 x 27mm (without protruding parts)
Weight	Approx. 150 g (without the battery & SD card)

* Design and specifications are subject to change without notice.